

Rosemount 3051 Pressure Transmitter

with 4-20 mA HART Revision 5 and 7 Selectable Protocol



ROSEMOUNT

www.rosemount.com


EMERSON
Process Management

Rosemount 3051 Pressure Transmitter

WARNING

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure you thoroughly understand the contents before installing, using, or maintaining this product.

For technical assistance, contacts are listed below:

Customer Central

Technical support, quoting, and order-related questions.

United States - 1-800-999-9307 (7:00 am to 7:00 pm CST)

Asia Pacific- 65 777 8211

Europe/ Middle East/ Africa - 49 (8153) 9390

North American Response Center

Equipment service needs.

1-800-654-7768 (24 hours—includes Canada)

Outside of these areas, contact your local Emerson Process Management representative.

CAUTION

The products described in this document are NOT designed for nuclear-qualified applications. Using non-nuclear qualified products in applications that require nuclear-qualified hardware or products may cause inaccurate readings.

For information on Rosemount nuclear-qualified products, contact your local Emerson Process Management Sales Representative.

Contents

Section 1: Introduction

1.1 Using this manual.....	1
1.2 Models covered	2
1.2.1 Rosemount 3051C Coplanar™ Pressure Transmitter	2
1.2.2 Rosemount 3051T in-line Pressure Transmitter	2
1.2.3 Rosemount 3051L Level Transmitter	2
1.2.4 Rosemount 3051CF Series Flowmeter	2
1.3 HART installation flowchart	3
1.4 Transmitter overview	4
1.5 Service support.....	5
1.6 Product recycling/ disposal	6

Section 2: Configuration

2.1 Configuration overview.....	7
2.2 Safety messages.....	7
2.3 System readiness	8
2.3.1 Confirm correct Device Driver	8
2.4 Configuration basics	9
2.4.1 Configuring on the bench	9
2.4.2 Configuration tools	10
2.4.3 Setting the loop to manual	11
2.5 Verify configuration.....	12
2.5.1 Verifying configuration with Field Communicator.....	12
2.5.2 Verifying configuration with AMS Device Manager	12
2.5.3 Verifying configuration with Local Operator Interface	12
2.5.4 Verifying process variables configuration	12
2.6 Basic setup of the transmitter	13
2.6.1 Setting pressure units	13
2.6.2 Setting transmitter output (Transfer Function)	14
2.6.3 Rerange the transmitter	15
2.6.4 Damping.....	19
2.7 Configuring the LCD Display	20
2.8 Detailed transmitter setup.....	21
2.8.1 Configuring alarm and saturation levels.....	21

2.8.2	Configuring process alerts	22
2.8.3	Configuring Scaled Variable	23
2.8.4	Re-Mapping device variables	26
2.9	Configuring transmitter diagnostics.....	27
2.9.1	Configuring Power Advisory Diagnostic.....	27
2.10	Performing transmitter tests.....	30
2.10.1	Verifying alarm level	30
2.10.2	Performing an Analog Loop Test	31
2.10.3	Simulate Device Variables.....	32
2.11	Configuring burst mode.....	32
2.12	Establishing multidrop communication	34
2.12.1	Changing a transmitter address	35
2.12.2	Communicating with a multidropped transmitter.....	35

Section 3: Hardware Installation

3.1	Overview	37
3.2	Safety messages.....	37
3.3	Considerations	38
3.3.1	Installation considerations	38
3.3.2	Environmental considerations	39
3.3.3	Mechanical considerations	39
3.3.4	Draft range considerations	39
3.4	Installation procedures	40
3.4.1	Mount the transmitter.....	40
3.4.2	Impulse piping.....	46
3.4.3	Process connections.....	48
3.4.4	Inline process connection	49
3.5	Rosemount 305, 306, and 304 Manifolds	51
3.5.1	Rosemount 305 Integral Manifold installation procedure	52
3.5.2	Rosemount 306 Integral Manifold installation procedure	52
3.5.3	Rosemount 304 Conventional Manifold installation procedure	52
3.5.4	Manifold operation.....	53

Section 4: Electrical Installation

4.1	Overview	57
4.2	Safety messages.....	57
4.3	LCD Display	58

4.3.1 Rotating LCD/LOI Display	58
4.4 Configuring transmitter security	59
4.4.1 Setting security switch	59
4.4.2 HART Lock	59
4.4.3 Configuration Button lock	60
4.4.4 Local Operator Interface Password	60
4.5 Setting Transmitter alarm	61
4.6 Electrical considerations	62
4.6.1 Conduit installation	62
4.6.2 Power supply for 4-20 mA HART	63
4.6.3 Wiring the transmitter	63
4.6.4 Grounding the transmitter	64

Section 5: Operation and Maintenance

5.1 Overview	69
5.2 Safety messages	69
5.2.1 Warnings	69
5.3 Recommended calibration tasks	70
5.4 Calibration overview	70
5.4.1 Determining necessary Sensor Trims	71
5.4.2 Determining calibration frequency	72
5.4.3 Compensating for Span line pressure effects (range 4 and range 5)	73
5.5 Trim the pressure signal	74
5.5.1 Sensor Trim overview	74
5.5.2 Perform a Sensor Trim	75
5.5.3 Recall Factory Trim—sensor trim	77
5.6 Trim the analog output	78
5.6.1 Performing Digital-to-Analog Trim (4-20mA Output Trim)	78
5.6.2 Performing Digital-to-Analog Trim (4-20mA Output Trim) using other scale	79
5.6.3 Recalling Factory Trim—analog output	79
5.7 Switching HART Revision	80
5.7.1 Switching HART revision with Generic Menu	80
5.7.2 Switching HART Revision with Field Communicator	81
5.7.3 Switching HART Revision with AMS Device Manager	81
5.7.4 Switching HART revision with Local Operator Interface	81

Section 6: Troubleshooting

6.1 Overview	83
6.2 Safety messages	83

6.2.1 Warnings	84
6.3 Diagnostic messages.....	86
6.3.1 Diagnostic message: failed - fix now	86
6.3.2 Diagnostic message: Maintenance - Fix Soon	87
6.3.3 Diagnostic message: Advisory	88
6.4 Disassembly procedures	89
6.4.1 Removing from service	89
6.4.2 Removing terminal block	90
6.4.3 Removing the electronics board	90
6.4.4 Removing sensor module from the electronics housing.....	91
6.5 Reassembly procedures	91
6.5.1 Attaching electronics board	92
6.5.2 Installing terminal block	92
6.5.3 Reassembling the 3051C process flange	92
6.5.4 Installing drain/vent valve	94

Section 7: Safety Instrumented Systems Requirements

7.1 Safety Instrumented Systems (SIS) Certification	95
7.1.1 3051 safety certified identification	95
7.1.2 Installation in SIS applications	95
7.1.3 Configuring in SIS applications.....	96
7.1.4 3051 SIS operation and maintenance.....	97
7.1.5 Inspection.....	99

Appendix A: Specifications and Reference Data

A.1 Performance specifications	101
A.1.1 Conformance to specification ($\pm 3s$ (Sigma)).....	101
A.1.2 Reference accuracy	101
A.1.3 Flow performance - flow reference accuracy.....	103
A.1.4 Total performance	103
A.1.5 Long term stability	104
A.1.6 Dynamic performance	104
A.1.7 Line pressure effect per 1000 psi (6,9 MPa).....	104
A.1.8 Ambient temperature effect per 50 °F (28 °C).....	105
A.1.9 Mounting position effects.....	105
A.1.10 Vibration effect.....	105
A.1.11 Power supply effect	105

A.1.12	Electromagnetic compatibility (EMC)	105
A.1.13	Transient protection (option code T1)	105
A.2	Functional specifications	106
A.2.1	Service	106
A.2.2	Range and sensor limits	106
A.3	4–20 mA (output code A)	107
A.3.1	Overpressure Limits	108
A.3.2	Static pressure limit	109
A.3.3	Burst pressure limits	109
A.3.4	Failure mode alarm	109
A.3.5	Temperature limits	110
A.3.6	Humidity limits	110
A.3.7	Turn-on time	111
A.3.8	Volumetric displacement	111
A.3.9	Damping	111
A.4	Physical specifications	111
A.4.1	Process connections	111
A.4.2	Process-wetted parts	112
A.4.3	Rosemount 3051L process wetted parts	112
A.4.4	Non-wetted parts	113
A.4.5	Shipping weights	114
A.5	Dimensional drawings	115
A.6	Ordering Information	128
A.6.1	Rosemount 3051C Coplanar Pressure Transmitter	128
A.6.2	Rosemount 3051T In-Line Pressure Transmitter	135
A.6.3	Rosemount 3051CF Flowmeter Series	140
A.6.4	Rosemount 3051L Level Transmitter	159
A.7	Options	166
A.8	Spare parts	171

Appendix B: Product Certifications

B.1	Overview	183
B.2	Safety messages	183
B.2.1	Warnings	184
B.3	Safety Instrumented Systems installation	184
B.4	Product certifications	184
B.4.1	Approved manufacturing locations	184

B.4.2	European directive information	185
B.4.3	Ordinary location certification from FM approvals	185
B.5	Hazardous locations certifications	185
B.5.1	North American certifications	185
B.5.2	European certifications	186
B.5.3	Japanese certifications	187
B.5.4	IECEX certifications	187
B.5.5	Inmetro certifications	188
B.5.6	China certifications	188
B.5.7	Combinations of certifications	191
B.6	Approval drawings	192
B.6.1	Factory mutual 03031-1019	192
B.6.2	Canadian standards association (CSA) 03031-1024	205

Appendix C: Field Communicator Menu Trees and Fast Keys

C.1	Field Communicator menu trees	215
C.2	Field Communicator fast keys	220

Appendix D: Local Operator Interface

D.1	LOI Menu Tree	223
D.2	LOI Menu Tree - Extended Menu	224
D.3	Number entry	225
D.4	Text entry	226

Section 1 Introduction

Using this manual	page 1
Models covered	page 2
HART installation flowchart	page 3
Transmitter overview	page 4
Service support	page 5
Product recycling/ disposal	page 6

1.1 Using this manual

The sections in this manual provide information on installing, operating, and maintaining the Rosemount 3051. The sections are organized as follows:

[Section 2: Configuration](#) provides instruction on commissioning and operating Rosemount 3051 Transmitters. Information on software functions, configuration parameters, and online variables is also included.

[Section 3: Hardware Installation](#) contains mechanical installation instructions, and field upgrade options.

[Section 4: Electrical Installation](#) contains electrical installation instructions, and field upgrade options.

[Section 5: Operation and Maintenance](#) provides detailed information on calibrating and changing HART Revisions.

[Section 6: Troubleshooting](#) provides troubleshooting techniques for the most common operating problems.

[Section 7: Safety Instrumented Systems Requirements](#) provides identification, installation, configuration, operation and maintenance, and inspection information for Safety Instrumented Systems.

[Appendix A: Specifications and Reference Data](#) supplies reference and specification data, as well as ordering information.

[Appendix B: Product Certifications](#) contains intrinsic safety approval information, European ATEX directive information, and approval drawings.

[Appendix C: Field Communicator Menu Trees and Fast Keys](#) provides full menu trees and abbreviated fast key sequences for commissioning tasks.

[Appendix D: Local Operator Interface](#) provides detailed LOI menu trees.

1.2 Models covered

The following Rosemount 3051 Pressure Transmitters are covered by this manual:

1.2.1 Rosemount 3051C Coplanar™ Pressure Transmitter

- Measures differential and gage pressure up to 2000 psi (137,9 bar).
- Measures absolute pressure up to 4000 psia (275,8 bar).

1.2.2 Rosemount 3051T in-line Pressure Transmitter

- Measures gage/absolute pressure up to 10000 psi (689,5 bar).

1.2.3 Rosemount 3051L Level Transmitter

- Measures level and specific gravity up to 300 psi (20,7 bar).

1.2.4 Rosemount 3051CF Series Flowmeter


- Measures flow in line sizes from 1/2-in. (15mm) to 96-in. (2400 mm).

Note

For Rosemount 3051 with FOUNDATION™ Fieldbus, see Rosemount Product Manual 00809-0100-4774. For Rosemount 3051 with Profibus PA, see Rosemount Product Manual 00809-0100-4797.

1.3 HART installation flowchart

Figure 1-1. HART installation flowchart

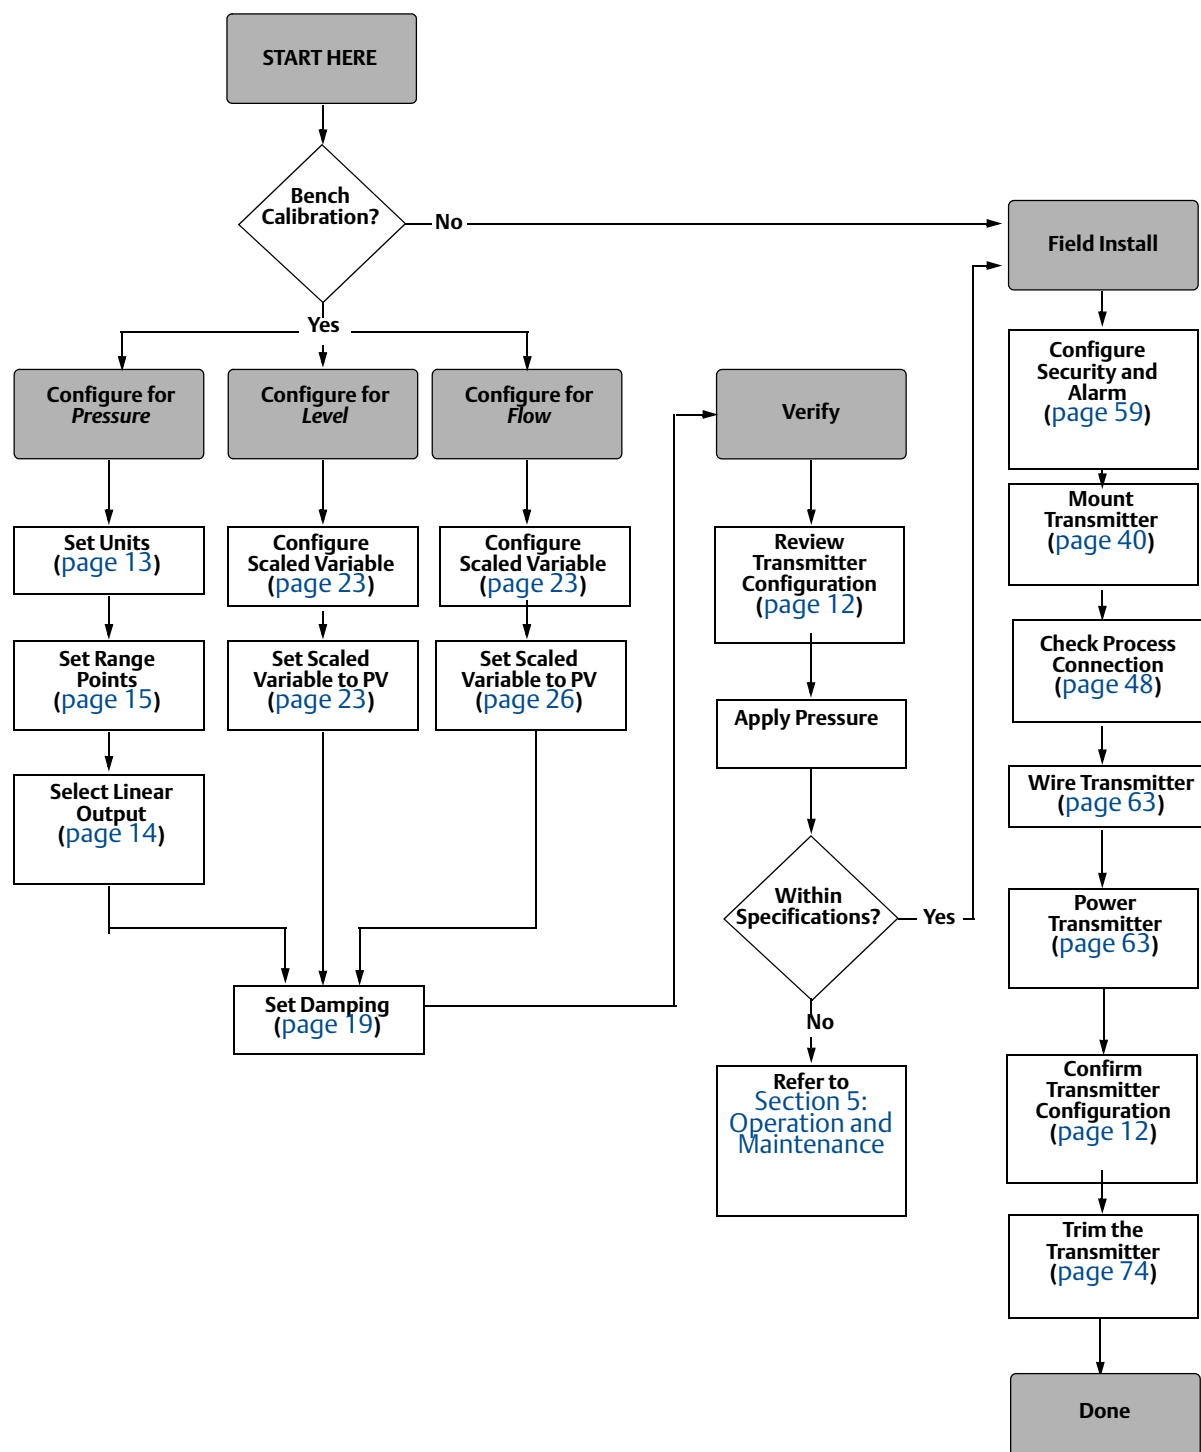

1.4 Transmitter overview

The Rosemount 3051C Coplanar design is offered for Differential Pressure (DP), Gage Pressure (GP) and Absolute Pressure (AP) measurements. The Rosemount 3051C utilizes capacitance sensor technology for DP and GP measurements. The Rosemount 3051T and 3051CA utilize piezoresistive sensor technology for AP and GP measurements.

The major components of the Rosemount 3051 are the sensor module and the electronics housing. The sensor module contains the oil filled sensor system (isolating diaphragms, oil fill system, and sensor) and the sensor electronics. The sensor electronics are installed within the sensor module and include a temperature sensor, a memory module, and the analog to digital signal converter (A/D converter). The electrical signals from the sensor module are transmitted to the output electronics in the electronics housing. The electronics housing contains the output electronics board, the optional external configuration buttons, and the terminal block. The basic block diagram of the Rosemount 3051CD is illustrated in [Figure 1-3 on page 5](#).

For the Rosemount 3051, pressure is applied to the isolating diaphragm(s). The oil deflects the sensor which then changes its capacitance or voltage signal. This signal is then changed to a digital signal by the Signal Processing. The microprocessor then takes the signals from the Signal Processing and calculates the correct output of the transmitter. This signal is then sent to the D/A converter, which converts the signal back to the analog signal, then superimposes the HART signal on the 4-20 mA output.

An optional LCD can be ordered that connects directly to the interface board which maintains direct access to the signal terminals. The display indicates output and abbreviated diagnostic messages. A glass display cover is provided. For 4-20 mA HART output, the LCD Display features a two-line display. The first line displays the actual measured value, the second line of six characters displays the engineering units. The LCD can also display diagnostic messages.

Note

LCD Display utilizes a 5x6 character display and can display output and diagnostic messages. The LOI Display uses an 8x6 character display and can display output, diagnostic messages, and LOI menu screens. The LOI Display comes with 2 buttons mounted on the front of the display board. See [Figure 1-2](#).

Figure 1-2. LCD/LOI Display


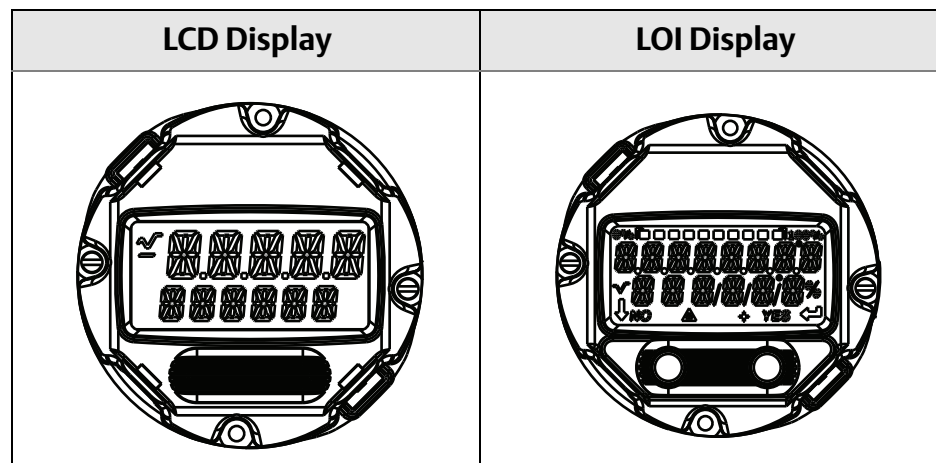


Figure 1-3. Block diagram of operation

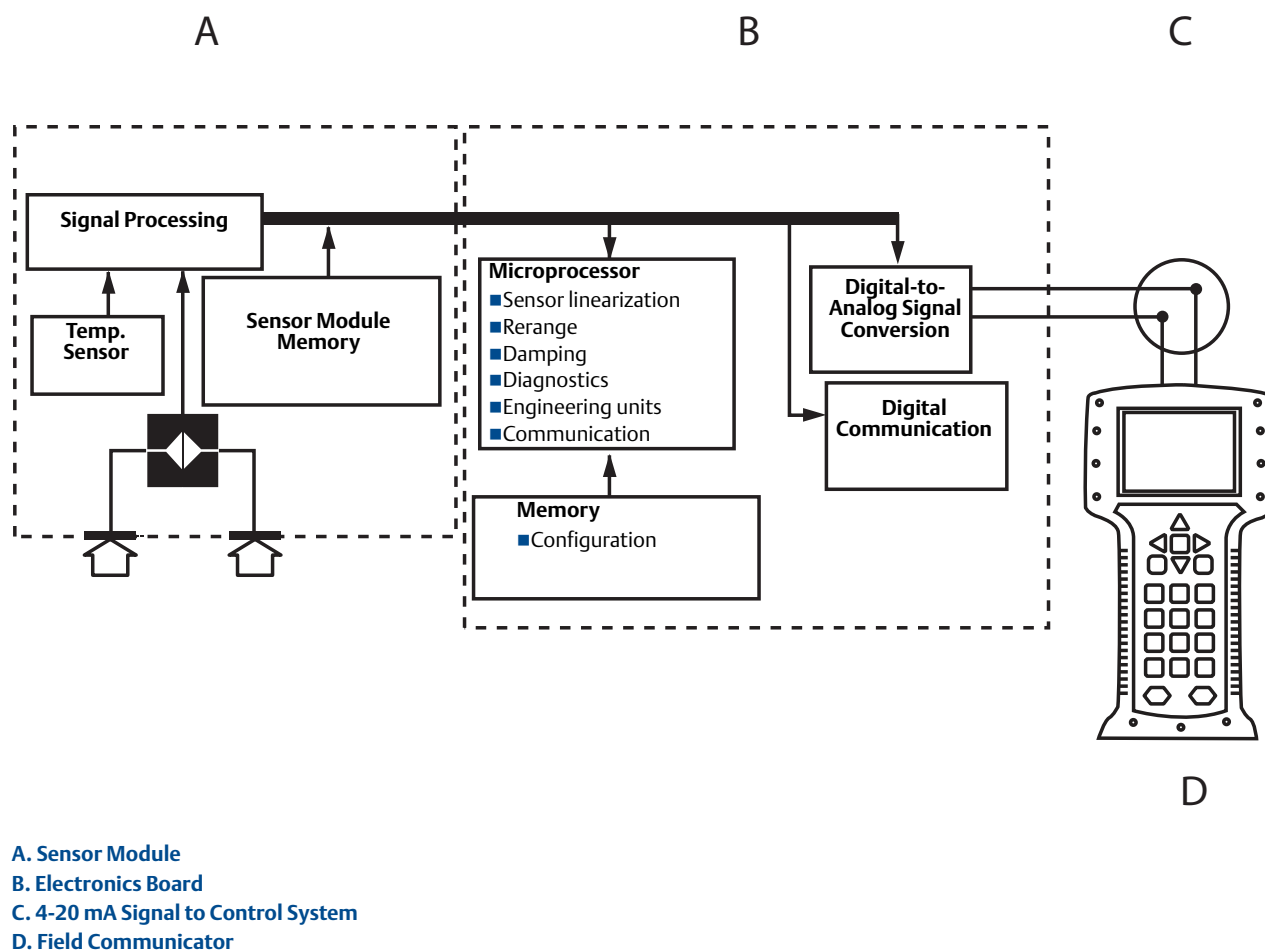

1.5 Service support

Within the United States, call the Emerson Process Management Instrument and Valve Response Center using the 1-800-654-RSMT (7768) toll-free number. This center, available 24 hours a day, will assist you with any needed information or materials.

The center will ask for product model and serial numbers, and will provide a Return Material Authorization (RMA) number. The center will also ask for the process material to which the product was last exposed.

For inquiries outside of the United States, contact the nearest Emerson Process Management representative for RMA instructions.

To expedite the return process outside of the United States, contact the nearest Emerson Process Management representative.

⚠ CAUTION

Individuals who handle products exposed to a hazardous substance can avoid injury if they are informed of and understand the hazard. The product being returned will require a copy of the required Material Safety Data Sheet (MSDS) for each substance must be included with the returned goods.

Emerson Process Management Instrument and Valve Response Center representatives will explain the additional information and procedures necessary to return goods exposed to hazardous substances.

1.6 Product recycling/ disposal

Recycling of equipment and packaging should be taken into consideration and disposed of in accordance with local and national legislation/regulations.

Section 2 Configuration

Configuration overview	page 7
Safety messages	page 7
System readiness	page 8
Configuration basics	page 9
Verify configuration	page 12
Basic setup of the transmitter	page 13
Configuring the LCD Display	page 20
Detailed transmitter setup	page 21
Configuring transmitter diagnostics	page 27
Configuring burst mode	page 32
Establishing multidrop communication	page 34

2.1 Configuration overview

This section contains information on commissioning and tasks that should be performed on the bench prior to installation, as well as tasks performed after installation as described in [“Configuring transmitter diagnostics” on page 27](#).

Field Communicator, AMS Device Manager, and Local Operator Interface (LOI) instructions are given to perform configuration functions. For convenience, Field Communicator fast key sequences are labeled “Fast Keys,” and abbreviated LOI menus are provided for each function below.

Full Field Communicator menu trees and fast key sequences are available in [Appendix C: Field Communicator Menu Trees and Fast Keys](#). Local Operator Interface menu trees are available in [Appendix D: Local Operator Interface](#).

2.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the approvals section of the 3051 reference manual for any restrictions associated with a safe installation.

- Before connecting a Field Communicator in an explosive atmosphere, ensure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- In an explosion-proof/flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

- Install and tighten process connectors before applying pressure.

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

2.3 System readiness

- If using HART based control or asset management systems, confirm the HART capability of such systems prior to commissioning and installation. Not all systems are capable of communicating with HART revision 7 devices.
- For instructions on how to change the HART revision of your transmitter, see [“Switching HART Revision” on page 80](#).

2.3.1 Confirm correct Device Driver

- Verify the latest Device Driver (DD/DTM) is loaded on your systems to ensure proper communications.
1. Download the latest DD at www.emersonprocess.com or www.hartcomm.org.
 2. In the Browse by Member dropdown menu, select Rosemount business unit of Emerson Process Management.
 3. Select desired Product
 - a. Within Table 2-1, use the HART Universal Revision and Device Revision numbers to find the correct Device Driver

Table 2-1. Rosemount 3051 Device Revisions and files

Software Release Date	Identify Device		Find Device Driver		Review Instructions	Review Functionality
	NAMUR Software Revision ⁽¹⁾	HART Software Revision ⁽²⁾	HART Universal Revision	Device Revision ⁽³⁾	Manual Document Number	Changes to Software
April 2012	1.0.0	01	7	10	00809-0100-4007	See footnote ⁽⁴⁾ for list of changes.
			5	9		
January 1998	N/A	178	5	3	00809-0100-4001	N/A

(1) NAMUR Software Revision is located on the hardware tag of the device.

(2) HART Software Revision can be read using a HART capable configuration tool.

(3) Device Driver file names use Device and DD Revision, e.g. 10_01. HART Protocol is designed to enable legacy device driver revisions to continue to communicate with new HART devices. To access new functionality, the new Device Driver must be downloaded. It is recommended to download new Device Driver files to ensure full functionality.

(4) HART Revision 5 and 7 Selectable, Power Diagnostics, Safety Certified, Local Operator Interface, Process Alerts, Scaled Variable, Configurable Alarms, Expanded Engineering Units.

2.4 Configuration basics

⚠ CAUTION


Set all transmitter hardware adjustments during commissioning to avoid exposing the transmitter electronics to the plant environment after installation.

The Rosemount 3051 can be configured either before or after installation. Configuring the transmitter on the bench using either a Field Communicator, AMS Device Manager, or Local Operator Interface (LOI) ensures all transmitter components are in working order prior to installation. Verify that the security switch is set in the unlock position (⬆) in order to proceed with configuration. See [Figure 4-2 on page 59](#) for switch location.

2.4.1 Configuring on the bench

To configure on the bench, required equipment includes a power supply, and a Field Communicator, AMS Device Manager, or an LOI (option M4). Wire equipment as shown in [Figure 2-1](#) below. To ensure successful HART communication, a resistance of at least 250 Ωs must be present between the transmitter and the power supply, see [“Power supply for 4-20 mA HART” on page 63](#) for details. Connect the Field Communicator leads to the terminals labeled “COMM” on the terminal block.

Figure 2-1. Wiring the Transmitter

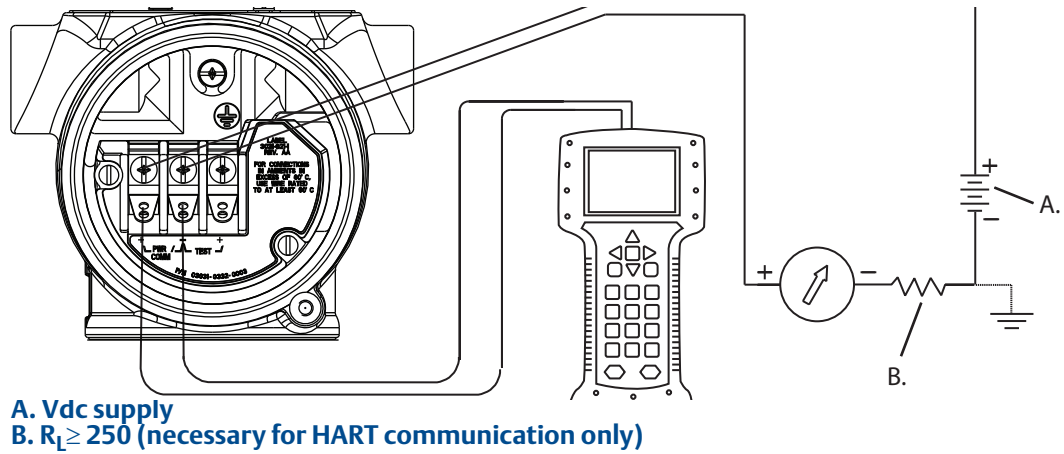


2.4.2 Configuration tools

Configuring with a Field Communicator

There are two interfaces available with the Field Communicator: Traditional and Dashboard interfaces. All steps using a Field Communicator will be described using Dashboard interfaces. Figure 2-2 on page 10 shows the Device Dashboard interface. As stated in [Section 2.3-System readiness](#), it is critical that the latest DD's are loaded into the Field Communicator. Visit www.emersonprocess.com or www.hartcomm.org to download latest DD library.

Field Communicator menu trees and fast keys are available in [Appendix C: Field Communicator Menu Trees and Fast Keys](#).

Figure 2-2. Device Dashboard

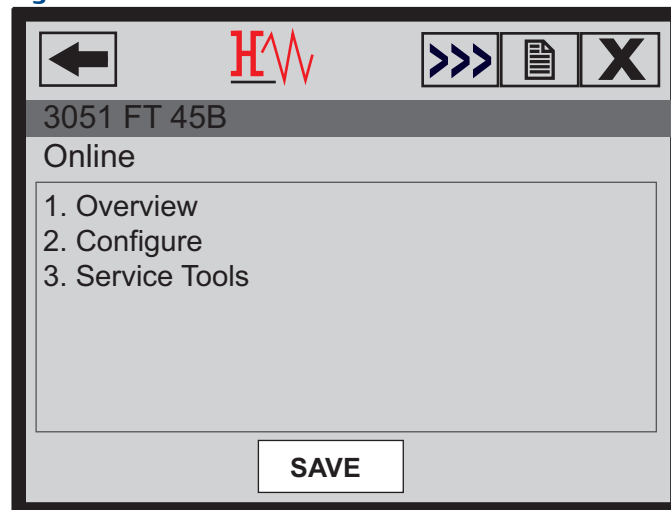

Configuring with AMS Device Manager

Full configuration capability with AMS Device Manager requires loading the most current Device Descriptor (DD) for this device. Download the latest DD at www.emersonprocess.com or www.hartcomm.org.

Note

All steps using AMS Device Manager will be described using version 11.5.

Configuring with a Local Operator Interface

The LOI requires option code M4 to be ordered. To activate the LOI push either configuration button. Configuration buttons are located on the LCD Display (must remove housing cover to access), or underneath the top tag of the transmitter. See [Table 2-2](#) for configuration button functionality and [Figure 2-3](#) for configuration button location. When using the LOI for configuration, several features require multiple screens for a successful configuration. Data entered will be saved on a screen-by-screen basis; the LOI will indicate this by flashing "SAVED" on the LCD Display each time.

Local Operator Interface menu trees are available in [Appendix D: Local Operator Interface](#).

Figure 2-3. LOI configuration buttons



- A. Internal configuration buttons
- B. External configuration buttons

Table 2-2. LOI button operation

Button	Left	Right
Left	No	SCROLL
Right	Yes	ENTER

2.4.3 Setting the loop to manual



Whenever sending or requesting data that would disrupt the loop or change the output of the transmitter, set the process application loop to manual control. The Field Communicator, AMS Device Manager, or the LOI will prompt you to set the loop to manual when necessary. The prompt is only a reminder; acknowledging this prompt does not set the loop to manual. It is necessary to set the loop to manual control as a separate operation.

2.5 Verify configuration

It is recommended that various configuration parameters are verified prior to installation into the process. The various parameters are detailed out for each configuration tool. Depending on what configuration tool(s) are available follow the steps listed relevant to each tool.

2.5.1 Verifying configuration with Field Communicator

Configuration parameters listed in [Table 2-3](#) are to be reviewed prior to transmitter installation. A Full list of configuration parameters that can be reviewed and configured using a Field Communicator are located in [Appendix C: Field Communicator Menu Trees and Fast Keys](#).

Fast key sequences for the latest DD are shown in [Table 2-3](#). For fast key sequences for legacy DD's contact your local Emerson Process Representative.

Table 2-3. 3051 Device Dashboard fast key sequence

From the *HOME* screen, enter the fast key sequences listed

Function	Fast Key Sequence	
	HART 7	HART 5
Alarm and Saturation Levels	2, 2, 2, 5	2, 2, 2, 5
Damping	2, 2, 1, 1, 5	2, 2, 1, 1, 5
Primary Variable	2, 1, 1, 4, 1	2, 1, 1, 4, 1
Range Values	2, 1, 1, 4	2, 1, 1, 4
Tag	2, 2, 7, 1, 1	2, 2, 7, 1, 1
Transfer Function	2, 2, 1, 1, 6	2, 2, 1, 1, 6
Units	2, 2, 1, 1, 4	2, 2, 1, 1, 4

2.5.2 Verifying configuration with AMS Device Manager

Right click on the device and select **Configuration Properties** from the menu. Navigate the tabs to review the transmitter configuration data.

2.5.3 Verifying configuration with Local Operator Interface

Press any configuration button to activate the LOI. Select **VIEW CONFIG** to review the below parameters. Use the configuration buttons to navigate through the menu. The parameters to be reviewed prior to installation include:

- Tag
- Units
- Transfer Function
- Alarm and Saturation Levels
- Primary Variable
- Range Values
- Damping

2.5.4 Verifying process variables configuration

This section describes how to verify that the correct process variables are selected.

Verifying process variables with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	3, 2, 1
----------------------------	---------

Verifying process variables with AMS Device Manager

Right click on the device and select **Overview** from the menu.

1. Click the **All Variables** button to display the primary, secondary, tertiary and quaternary variables.

2.6 Basic setup of the transmitter

This section goes through the necessary steps for basic setup of a pressure transmitter. When installing in DP level or DP flow applications, refer to “[Configuring Scaled Variable](#)” on page 23 for setup instructions.

2.6.1 Setting pressure units

-  The pressure unit command sets the unit of measure for the reported pressure.

Setting pressure units with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 1, 1, 4
----------------------------	---------------

Setting pressure units with AMS Device Manager


Right click on the device and select **Configure**.

1. Click **Manual Setup** and select desired units from *Pressure Units* dropdown menu.
2. Click **Send** when complete.

Setting pressure units with a Local Operator Interface

Follow [Figure 2-4 on page 14](#) to select desired pressure and temperature units. Use the **SCROLL** and **ENTER** buttons to select desired unit. Save by selecting **SAVE** as indicated on the LCD screen.

Figure 2-4. Selecting Units with LOI

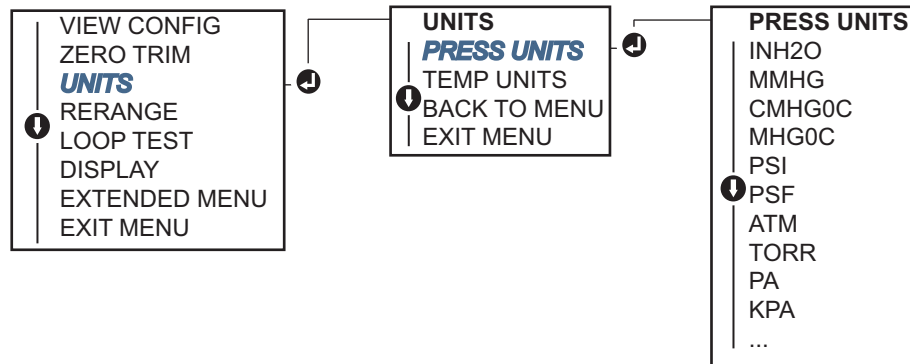

2.6.2 Setting transmitter output (Transfer Function)

 The 3051 has two output settings: Linear and Square Root. As shown in [Figure 2-6 on page 15](#), activating the square root options makes analog output proportional to flow, and includes a fixed Low Flow Cutoff at 5%.

However, for DP Flow and DP Level applications it is recommended to use Scaled Variable. Refer to “[Configuring Scaled Variable](#)” on page 23 for setup instructions.

Setting transmitter output with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 1, 1, 6
-----------------------------------	---------------

Setting transmitter output with AMS Device Manager

Right click on the device and select **Configure**.

1. Click **Manual Setup** and choose output type from *Analog Output Transfer Function* and click **Send**.
2. Carefully read the warning and click **Yes** if it is safe to apply the changes.

Setting transmitter output with a Local Operator Interface

Reference [Figure 2-5 on page 15](#) to select either linear or square root transfer function using the LOI.

Figure 2-5. Set output with LOI


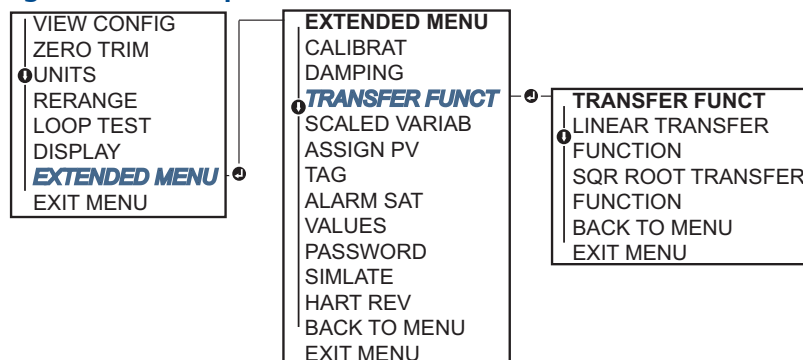


Figure 2-6. 4-20 mA HART square root output transition point

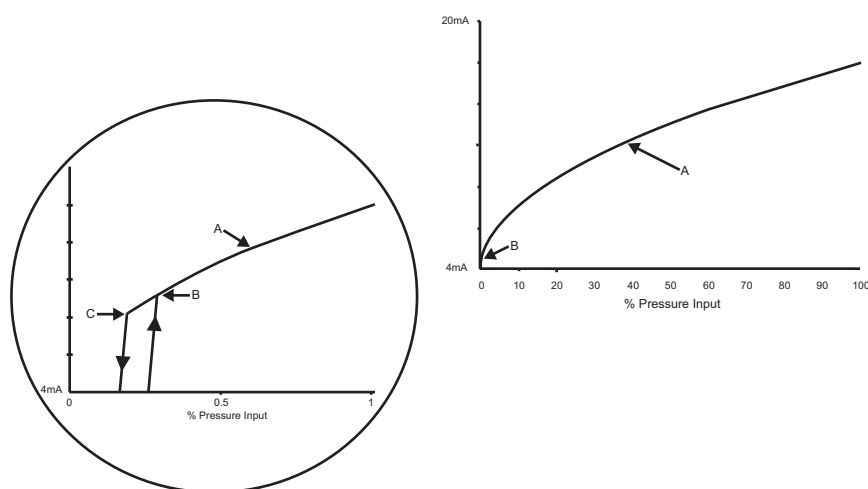

- A. Square Root Curve
- B. 5% Transition Point
- C. 4% Transition Point

2.6.3 Rerange the transmitter

 The Range Values command sets each of the lower and upper range analog values (4 and 20 mA points) to a pressure. The lower range point represents 0% of range and the upper range point represents 100% of range. In practice, the transmitter range values may be changed as often as necessary to reflect changing process requirements. For a complete listing of Range & Sensor limits, refer to “Range and sensor limits” on page 106.

Select from one of the methods below to rerange the transmitter. Each method is unique; examine all options closely before deciding which method works best for your process.

- Rerange by manually setting range points with a Field Communicator, AMS Device Manager, or Local Operator Interface.
- Rerange with a pressure input source and a Field Communicator, AMS Device Manager, Local Operator Interface, or local zero and span buttons

Manually rerange the transmitter by entering range points

Entering range points with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 2, 1
-----------------------------------	------------

Entering range points with AMS Device Manager


Right click on the device and select **Configure**:

1. Click **Manual Setup** and select **Analog Output**.
2. Enter upper and lower range values in the *Range Limits* box and click **Send**.
3. Carefully read the warning and click **Yes** if it is safe to apply the changes.

Entering range points with a Local Operator Interface

Reference [Figure 2-7 on page 16](#) to rerange the transmitter using the Local Operator Interface. Enter values using **SCROLL** and **ENTER** buttons.

Figure 2-7. Rerange with LOI

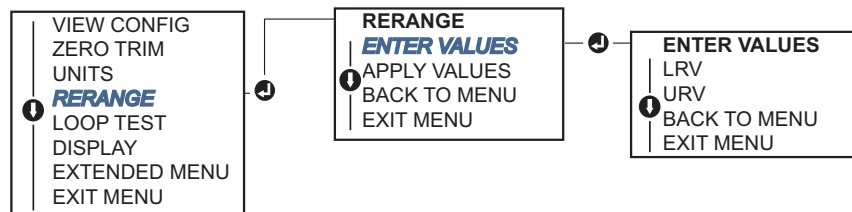

Rerange the transmitter with applied pressure source

Reranging using an applied pressure source is a way of reranging the transmitter without entering specific 4 and 20 mA points.

Rerange with an applied pressure source using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 2, 2
-----------------------------------	------------

Rerange with an applied pressure source using AMS Device Manager


Right click on the device, select **Configure**.

1. Select the **Analog Output** tab
2. Click **Range by Applying Pressure** button and follow the screen prompts range the transmitter.

Rerange with an applied pressure source using a Field Communicator

Use Figure 2-8 to manually rerange the device using an applied pressure source with an LOI.

Figure 2-8. Rerange with applied pressure using LOI

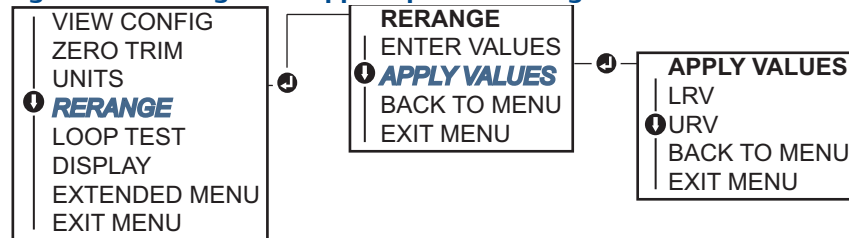

Rerange with an applied pressure source using local zero and span buttons

If ordered, local zero and span buttons (option code D4) can be used to rerange the transmitter with an applied pressure. Refer to Figure 2-9 on page 18 for analog zero and span button location.


To rerange the transmitter using the span and zero buttons, perform the following procedure:

1. Loosen the screw holding the top tag of the transmitter housing. Rotate the label to expose the zero and span buttons.
2. Confirm device has local zero and span buttons by verifying blue retainer under the tag.
3. Apply transmitter pressure.
4. Rerange the transmitter.
 - a. To change the zero (4mA point) while maintaining the span: press and hold zero button for at least two seconds then release.
 - b. To change the span (20mA point) while maintaining the zero point: press and hold the span button for at least two seconds and then release.

Note

4mA and 20mA points must maintain the minimum span defined in Appendix A.2: Functional Specifications.

Figure 2-9. Analog Zero and span buttons

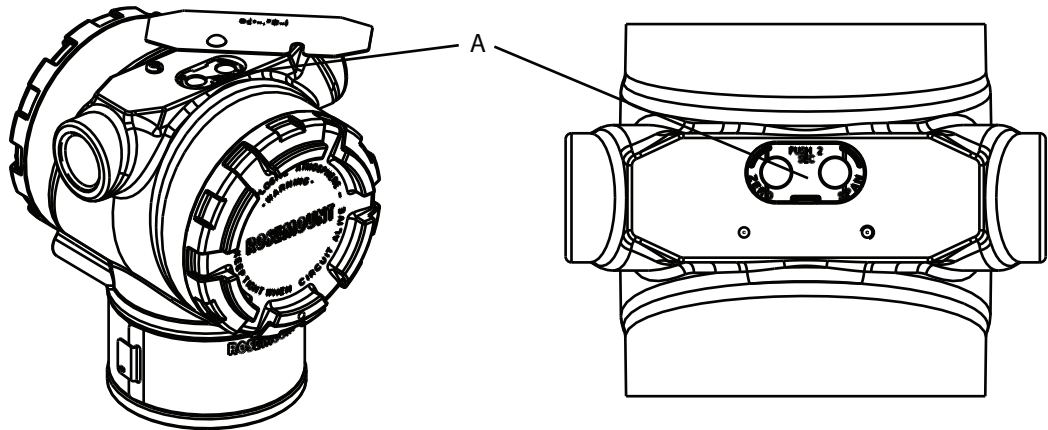

A. Zero and span Buttons

- If the transmitter security is on, adjustments to the zero and span will not be able to be made. Refer to “[Configuring transmitter security](#)” on page 59 for security information.
- The span is maintained when the 4mA point is set. The span changes when the 20mA point is set. If the lower range point is set to a value that causes the upper range point to exceed the sensor limit, the upper range point is automatically set to the sensor limit, and the span is adjusted accordingly.
- Regardless of the range points, the 3051 will measure and report all readings within the digital limits of the sensor. For example, if the 4 and 20 mA points are set to 0 and 10 inH₂O, and the transmitter detects a pressure of 25 inH₂O, it digitally outputs the 25 inH₂O reading and a 250% of range reading.

2.6.4 Damping

- ⚠ The damping command changes the response time of the transmitter; higher values can smooth variations in output readings caused by rapid input changes. Determine the appropriate damping setting based on the necessary response time, signal stability, and other requirements of the loop dynamics within your system. The damping command utilizes floating point configuration allowing the user to input any damping value within 0.0-60.0 seconds.

Damping with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 1, 1, 5
-----------------------------------	---------------

Enter desired Damping Value and select **APPLY**.

Damping with AMS Device Manager


Right click on the device and select **Configure**.

1. Select **Manual Setup**.
2. Within the *Pressure Setup* box, enter desired damping value and click **Send**.
3. Carefully read the warning and click **Yes** if it is safe to apply the changes.

Damping with a Local Operator Interface

Reference [Figure 2-10](#) to enter damping values using an LOI.

Figure 2-10. Damping with LOI

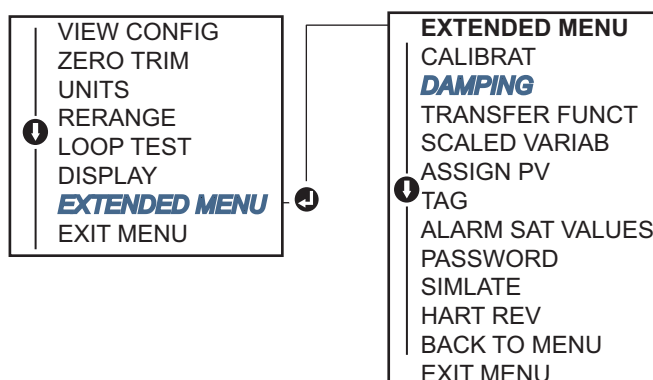

2.7 Configuring the LCD Display

The LCD Display configuration command allows customization of the LCD to suit application requirements. The LCD will alternate between the selected items.

- Pressure Units ■ Sensor Temperature
- % of Range ■ mA Output
- Scaled Variable

In the following instructions, the LCD can also be configured to display configuration information during the device startup. Select **Review Parameters at Startup** to enable or disable this functionality.

Reference [Figure 1-2 on page 4](#) LCD with Local Operator Interface for image of LCD screen.

Configuring LCD Display with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 4
-----------------------------------	---------

Configuring LCD Display with AMS Device Manager


Right click on the device and select **Configure**.

1. Click **Manual Setup**, select the **Display** tab.
2. Select desired display options and click **Send**.

Configuring LCD Display with a Local Operator Interface

Refer to [Figure 2-11](#) for LCD Display configuration using a LOI.

Figure 2-11. Display with LOI

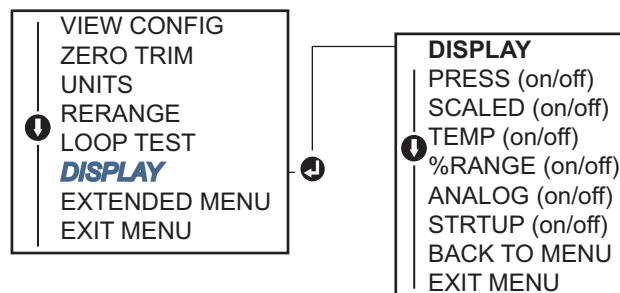

2.8 Detailed transmitter setup

2.8.1 Configuring alarm and saturation levels

In normal operation, the transmitter will drive the output in response to pressure from the lower to upper saturation points. If the pressure goes outside the sensor limits, or if the output would be beyond the saturation points, the output will be limited to the associated saturation point.

The 3051 transmitter automatically and continuously performs self-diagnostic routines. If the self-diagnostic routines detect a failure, the transmitter drives the output to configured alarm and value based on the position of the alarm switch. See [“Setting Transmitter alarm” on page 61](#).

Table 2-4. Rosemount alarm and saturation values

Level	4–20 mA saturation	4–20 mA alarm
Low	3.9 mA	≤ 3.75 mA
High	20.8 mA	≥ 21.75 mA

Table 2-5. NAMUR-Compliant alarm and saturation values

Level	4–20 mA saturation	4–20 mA alarm
Low	3.8 mA	≤ 3.6 mA
High	20.5 mA	≥ 22.5 mA

Table 2-6. Custom Alarm and Saturation Values

Level	4–20 mA saturation	4–20 mA alarm
Low	3.7 mA - 3.9 mA	3.6 mA - 3.8 mA
High	20.1 mA - 22.9 mA	20.2 mA - 23.0 mA

Failure mode alarm and saturation levels can be configured using a Field Communicator, AMS Device Manager, and the LOI. The following limitations exist for custom levels:

- Low alarm level must be less than the low saturation level
- High alarm level must be higher than the high saturation level
- Alarm and saturation levels must be separated by at least 0.1 mA

The configuration tool will provide an error message if the configuration rule is violated.

Note

Transmitters set to HART multidrop mode send all saturation and alarm information digitally; saturation and alarm conditions will not affect the analog output. See also “Establishing multidrop communication” on page 34.

Configuring Alarm and Saturation Levels using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 2, 5, 6
-----------------------------------	---------------

Configuring Alarm and Saturation Levels with AMS Device Manager


Right click on the device, and select **Configure**.

1. Click **Configure Alarm and Saturation Levels** button.
2. Follow screen prompts to configure Alarm and Saturation Levels.

Configuring Alarm and Saturation Levels using Local Operator Interface

Refer to [Figure 2-12](#) for instructions to configure alarm and saturation levels.

Figure 2-12. Configuring Alarm and Saturation with Local Operator Interface

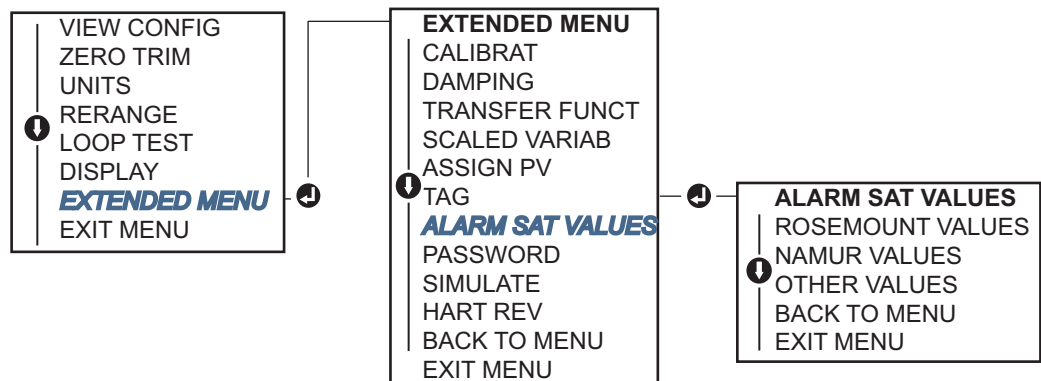

2.8.2 Configuring process alerts

Process alerts allow the transmitter to indicate when the configured data point is exceeded. Process alerts can be set for pressure, temperature, or both. An alert will be displayed on a Field Communicator, AMS Device Manager status screen or in the error section of the LCD/LOI Display. The alert will reset once the value returns within range.

Note

HI alert value must be higher than the LO alert value. Both alert values must be within the pressure or temperature sensor limits.

Configuring process alerts using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 3
----------------------------	------

1. Select either “Pressure Alert” or “Temperature Alert” and press **ENTER**.
2. Select **Configure Alert**.
3. Follow screen prompts to configure process alerts.

Configuring process alerts using AMS Device Manager

Right click on the device and select **Configure**.

1. Select **Guided Setup**.
2. Click the **Process Alerts** button.
3. Follow screen prompts to configure Process Alerts.

2.8.3 Configuring Scaled Variable

The Scaled Variable configuration allows the user to create a relationship/conversion between the pressure units and user-defined/custom units. There are two use cases for Scaled Variable. The first use case is to allow custom units to be displayed on the transmitter's LCD/LOI Display. The second use case is to allow custom units to drive the transmitter's 4-20 mA output.

If the user desires custom units to drive the 4-20 mA output, Scaled Variable must be re-mapped as the primary variable. Refer to [“Re-Mapping device variables” on page 26](#).

The Scaled Variable configuration defines the following items:

- Scaled Variable units - Custom units to be displayed.
- Scaled data options - Defines the transfer function for the application
 - Linear
 - Square root
- Pressure value position 1 - Lower known value point with consideration of linear offset.
- Scaled Variable value position 1 - Custom unit equivalent to the lower known value point.
- Pressure value position 2 - Upper known value point
- Scaled Variable value position 2 - Custom unit equivalent to the upper known value point
- Linear offset - The value required to zero out pressures effecting the desired pressure reading.

- Low flow cutoff - Point at which output is driven to zero to prevent problems caused by process noise. It is highly recommended to use the low flow cutoff function in order to have a stable output and avoid problems due to process noise at a low flow or no flow condition. A low flow cutoff value that is practical for the flow element in the application should be entered.

Configuring Scaled Variable using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 1, 5, 7
-----------------------------------	------------

1. Follow the screen prompts to configure Scaled Variable.
 - a. When configuring for level, select **Linear** under *Select Scaled data options*.
 - b. When configuring for flow, select **Square Root** under *Select Scaled data options*.

Configuring Scaled Variable using AMS Device Manager


Right click on the device and, select **Configure**.

1. Select the **Scaled Variable** tab and click the **Scaled Variable** button.
2. Follow screen prompts to configure Scaled Variable
 - a. When configuring for level applications, select **Linear** under *Select Scaled data options*.
 - b. When configuring for flow applications, select **Square Root** under *Select Scaled data options*.

Configuring Scaled Variable using a Local Operator Interface


Refer to [Figure 2-13 on page 24](#) for instructions to configure Scaled Variable using a Local Operator Interface.

Figure 2-13. Configuring Scaled Variable using a Local Operator Interface

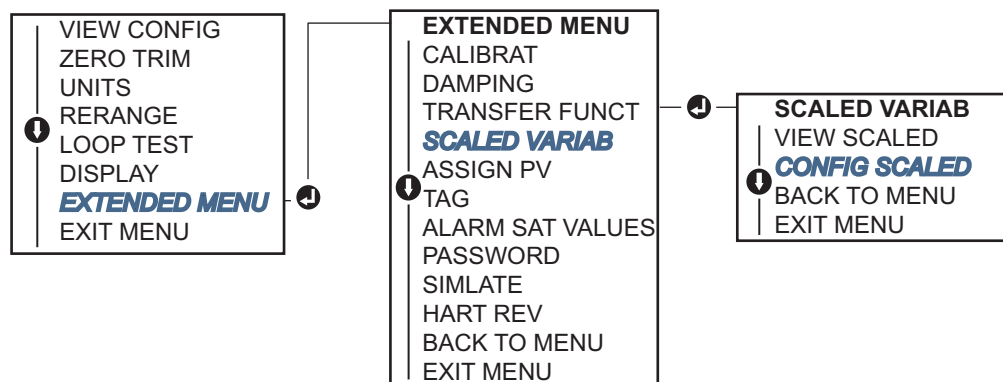

DP Level Example

Figure 2-14. Example tank

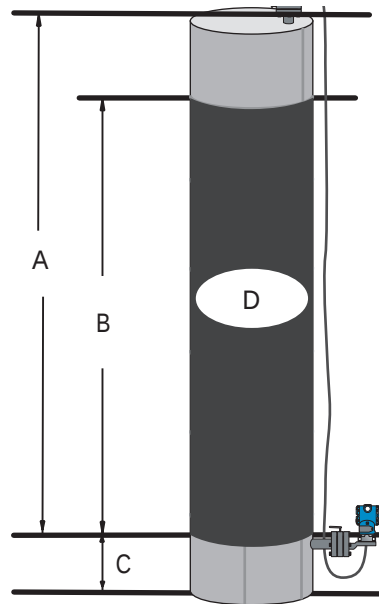

- A. 230 in.
- B. 200 in.
- C. 12 in.
- D. 0.94 sg

A differential transmitter is used in a level application. Once installed on an empty tank and taps vented, the process variable reading is -209.4 inH₂O. The process variable reading is the head pressure created by fill fluid in the capillary. Based on [Table 2-7 on page 25](#), the Scaled Variable configuration would be as follows:

Table 2-7. Scaled Variable Configuration for Tank Application

Scaled Variable units:	inch
Scaled data options:	linear
Pressure value position 1:	0 inH ₂ O
Scaled Variable position 1:	12 in.
Pressure value position 2:	188 inH ₂ O
Scaled Variable position 2:	212 in.
Linear offset:	-209.4 inH ₂ O

DP Flow example

A differential pressure transmitter is used in conjunction with an orifice plate in a flow application where the differential pressure at full scale flow is 125 inH₂O. In this particular application, the flow rate at full scale flow is 20,000 gallons of water per hour. It is highly recommended to use the low flow cutoff function in order to have a stable output and avoid problems due to process noise at a low flow or no flow condition. A low flow cutoff value that is practical for the flow element in the application should be entered. In this particular example, the low flow cutoff value is 1000 gallons of water per hour. Based on this information, the Scaled Variable configuration would be as follows:

Table 2-8. Scaled Variable Configuration for Flow Application

Scaled Variable units:	gal/h
Scaled data options:	square root
Pressure value position 2:	125 inH2O
Scaled Variable position 2:	20,000 gal/h
Low Flow Cutoff:	1000 gal/h

Note

Pressure value position 1 and Scaled Variable position 1 are always set to zero for a flow application. No configuration of these values is required.

2.8.4 Re-Mapping device variables



The re-mapping function allows the transmitter primary, secondary, tertiary, and quaternary variables (PV, 2V, 3V, and 4V) to be configured as desired. The PV can be remapped with a Field Communicator, AMS Device Manager, or a LOI. Variables (2V, 3V, and 4V) can only be re-mapped via Field Communicator or AMS Device Manager.

Note

The variable assigned to the primary variable drives the 4-20mA output. This value can be selected as Pressure or Scaled Variable. The 2, 3, and 4 variables only apply if HART burst mode is being used.

Re-mapping using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Fast Keys	2, 1, 1, 3
------------------	------------

Re-mapping using AMS


Right click on the device and select **Configure**.

1. Select **Manual Setup** and click on the **HART** tab.
2. Assign Primary, secondary, tertiary and quaternary variables under *Variable Mapping*.
3. Click **Send**.
4. Carefully read the warning and click **Yes** if it is safe to apply the changes.

Re-mapping using Local Operator Interface

Refer to [Figure 2-15](#) for instructions to remap the primary variable using a Local Operator Interface.

Figure 2-15. Re-mapping with Local Operator Interface

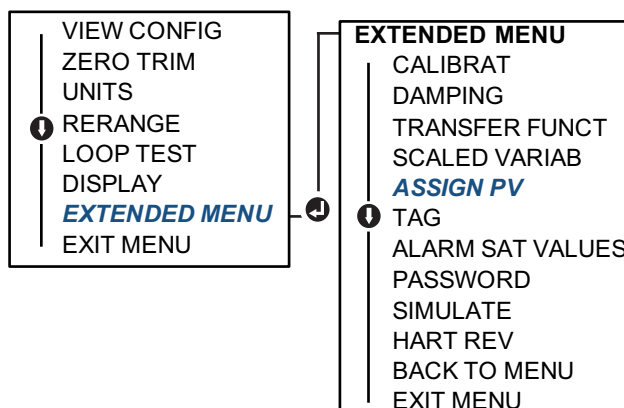

2.9 Configuring transmitter diagnostics

Diagnostics and service functions listed below are primarily for use after field installation.

2.9.1 Configuring Power Advisory Diagnostic


Introduction

The optional Power Advisory diagnostic (option code DA0) provides a means to detect issues that may jeopardize the integrity of the electrical loop. Some examples are: water entering the wiring compartment and making contact with the terminals, an unstable power supply nearing end of life, or heavy corrosion on the terminals.

This technology is based on the premise that once a transmitter is installed and powered up, the electrical loop has a baseline characteristic that reflects the proper installation. If the transmitter terminal voltage deviates from the baseline and outside the user configured threshold, the 3051 can generate a HART alert or analog alarm.

To make use of this diagnostic, the user must first create a baseline characteristic for the electrical loop after the transmitter has been installed. The loop is automatically characterized with the push of a button. This creates a linear relationship for expected terminal voltage values along the operating region from 4 – 20 mA, see [Figure 2-16](#).

Figure 2-16. Baseline operating region

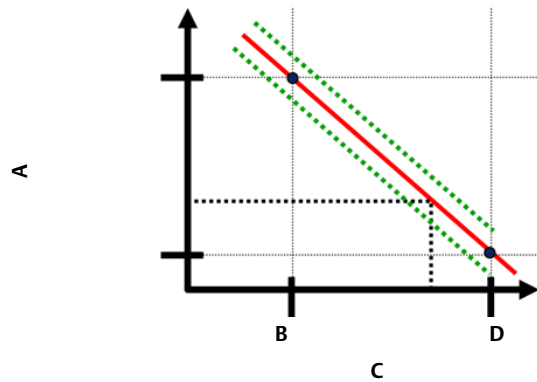

A. Terminal Voltage
B. 4 mA
C. Output Current
D. 20 mA

Overview

Transmitters ordered with Power Advisory Diagnostic (option code DA0) are shipped with Power Advisory off as default and without any loop characterization performed. Once the transmitter is installed and powered up, loop characterization must be performed for Power Advisory diagnostic to function.

When the user initiates a loop characterization, the transmitter will check to see if the loop has sufficient power for proper operation. Then the transmitter will drive the analog output to both 4mA and 20mA to establish a baseline and determine the maximum allowable terminal voltage deviation. Once this is complete, the user enters a sensitivity threshold called “Terminal Voltage Deviation Limit” and a check is in place to make sure this threshold value is valid.

Once the loop has been characterized and Terminal Voltage Deviation Limit is set, Power Advisory actively monitors the electrical loop for deviations from the baseline. If the terminal voltage has changed relative to the expected baseline value, exceeding the configured Terminal Voltage Deviation Limit, the transmitter can generate an alert or alarm.

Note

Power Advisory diagnostic in the Rosemount 3051 HART pressure transmitter monitors and detects changes in the terminal voltage from expected values to detect common failures. It is not possible to predict and detect all types of electrical failures on the 4-20mA output. Therefore, Rosemount cannot absolutely warrant or guarantee that Power Advisory Diagnostic will accurately detect failures under all circumstances.


Terminal voltage

This field shows the current terminal voltage value in Volts. The terminal voltage is a dynamic value and is directly related to the mA output value.

Terminal voltage deviation limit +/-

The Terminal Voltage Deviation Limit should be set large enough that “expected” voltage changes do not cause false failures.

Figure 2-17. Voltage deviation limit

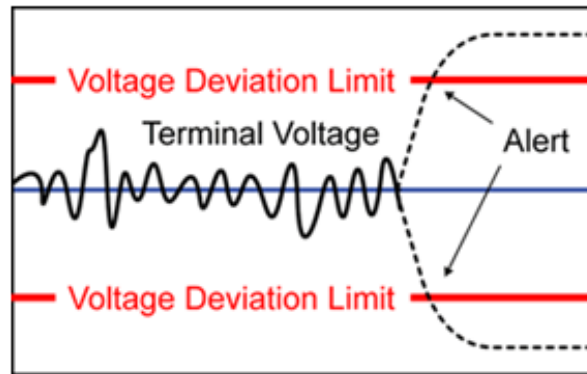

⚠ WARNING

Severe changes in the electrical loop may inhibit HART communication or the ability to reach alarm values. Therefore, Rosemount cannot absolutely warrant or guarantee that the correct Failure alarm level (HIGH or LOW) can be read by the host system at the time of annunciation.

Resistance

This value is the calculated resistance of the electrical loop (in Ω s) measured during the Characterize Loop procedure. Changes in the resistance may occur due to changes in the physical condition of the loop installation. Baseline and Previous Baselines can be compared to see how much resistance has changed over time.

Power supply

This value is the calculated power supply voltage of the electrical loop (in Volts) measured during the Characterize Loop procedure. Changes in this value may occur due to degraded performance of the power supply. Baseline and Previous Baselines can be compared to see how much the power supply has changed over time.

Characterize loop

Loop characterization must be initiated when the transmitter is first installed or when electrical loop characteristics have been intentionally altered. Examples include modified power supply level or loop resistance of the system, changing the terminal block on the transmitter, or adding the Smart Wireless THUM to the transmitter.

Note

Power Advisory diagnostic is not recommended for transmitters operating in multidrop mode.

Power Advisory action

When the voltage deviation exceeds the set limit, four possible actions can be configured and can be set to "Latched" or "Unlatched."

When the alert or alarm is "unlatched," the alert or alarm will disappear if voltage deviation returns to a normal level. A "latched" alarm or alert will not disappear when the voltage deviation returns to normal levels. This requires the user to acknowledge and clear the alert or alarm.

The four Power Advisory Diagnostic Actions are:

- None
- Alert Latched
- Alarm Unlatched
- Alert Unlatched

Configuring Power Advisory diagnostic with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 1, 7, 2, 3
-----------------------------------	---------------

Configuring Power Advisory Diagnostic using AMS Device Manager

Right click on the device and select **Configure**.

1. Click **Guided Setup**
2. Click the **Power Advisory** button
3. Follow screen prompts to configure Power Advisory Diagnostic.

2.10 Performing transmitter tests

2.10.1 Verifying alarm level

If the transmitter electronics board, sensor module, or LCD/LOI Display is repaired or replaced, verify the transmitter alarm level before returning the transmitter to service. This is useful in testing the reaction of the control system to a transmitter in an alarm state. Thus ensuring the control system recognizes the alarm when activated. To verify the transmitter alarm values, perform a loop test and set the transmitter output to the alarm value (see Tables 2-4, 2-6, and on page 21, and "Verifying alarm level" on page 30).

Note

Before returning transmitter to service, verify security switch is set to the correct position. Refer to “Verify configuration” on page 12.

2.10.2 Performing an Analog Loop Test



The Analog Loop Test command verifies the output of the transmitter, the integrity of the loop, and the operations of any recorders or similar devices installed in the loop. It is recommended that the 4-20 mA points in addition to alarm levels are verified when installing, repairing, or replacing a transmitter.

The host system may provide a current measurement for the 4-20 mA HART output. If not, connect a reference meter to the transmitter by either connecting the meter to the test terminals on the terminal block, or shunting transmitter power through the meter at some point in the loop.

Performing a Analog Loop Test test using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	
	3, 5, 1

Performing a Analog Loop Test test using AMS Device Manager


Right click on the device and, within the *Methods* drop down menu, move cursor over *Diagnostics and Test*. In the *Diagnostics and Test* drop down menu select **Loop Test**.

1. Click **Next** after setting the control loop to manual.
2. Follow Screen prompts to perform a Loop Test.
3. Select **Finish** to acknowledge the method is complete.

Performing analog loop test using a Local Operator Interface

To perform an analog loop test using the LOI, the 4mA, 20mA, and custom mA point may be set manually. Reference [Figure 2-18](#) for instructions on how to perform a transmitter loop test using an LOI.

Figure 2-18. Performing an analog loop test using an LOI

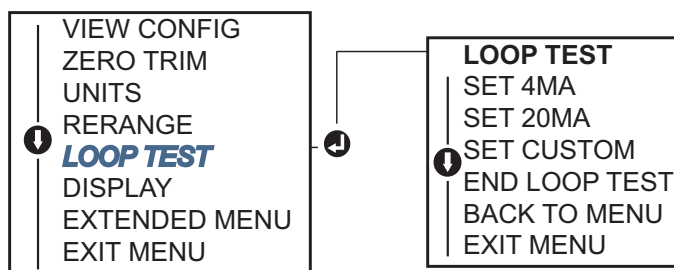

2.10.3 Simulate Device Variables

It is possible to temporarily set the Pressure, Sensor Temperature, or Scaled Variable to a user-defined fixed value for testing purposes. Once the simulated variable method is left, the process variable will be automatically returned to a live measurement. Simulate device variables is only available in HART Revision 7 mode.

Simulate digital signal with a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	3, 5
----------------------------	------

Simulate digital signal with AMS Device Manager

Right click on the device and select **Service Tools**.

1. Click **Simulate**.
2. Under *Device Variables* select a digital value to simulate.
 - a. Pressure
 - b. Sensor Temperature
 - c. Scaled Variable
3. Follow the screen prompts to simulate selected digital value.

2.11 Configuring burst mode

Burst mode is compatible with the analog signal. Because the HART protocol features simultaneous digital and analog data transmission, the analog value can drive other equipment in the loop while the control system is receiving the digital information. Burst mode applies only to the transmission of dynamic data (pressure and temperature in engineering units, pressure in percent of range, Scaled Variable, and/or analog output), and does not affect the way other transmitter data is accessed. However, when activated, burst mode can slow down communication of non-dynamic data to the host by 50%.

Access to information other than dynamic transmitter data is obtained through the normal poll/response method of HART communication. A Field Communicator, AMS Device Manager or the control system may request any of the information that is normally available while the transmitter is in burst mode. Between each message sent by the transmitter, a short pause allows the Field Communicator, AMS Device Manager or a control system to initiate a request.

Choosing burst mode options in HART 5

Message content options:

- PV only
- Percent of Range
- PV, 2V, 3V, 4V
- Process Variables
- Device Status

Choosing burst mode options in HART 7

Message content options:

- PV only
- Percent of Range
- PV, 2V, 3V, 4V
- Process Variables and Status
- Process Variables
- Device Status

Choosing a HART 7 Trigger Mode

When in HART 7 mode, the following trigger modes can be selected.

- Continuous (same as HART5 burst mode)
- Rising
- Falling
- Windowed
- On Change

Note

Consult your host system manufacturer for burst mode requirements.

Configuring burst mode using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 5, 3
----------------------------	------------

Configuring burst mode using AMS Device Manager

Right click on the device and select **Configure**.

1. Select the **HART** tab.
2. Enter the configuration in Burst Mode Configuration fields.

2.12 Establishing multidrop communication

Multidropping transmitters refers to the connection of several transmitters to a single communications transmission line. Communication between the host and the transmitters takes place digitally with the analog output of the transmitters deactivated.


Multidrop installation requires consideration of the update rate necessary from each transmitter, the combination of transmitter models, and the length of the transmission line. Communication with transmitters can be accomplished with HART modems and a host implementing HART protocol. Each transmitter is identified by a unique address and responds to the commands defined in the HART protocol. Field Communicators and AMS Device Manager can test, configure, and format a multidropped transmitter the same way as a transmitter in a standard point-to-point installation.

Figure 2-19 shows a typical multidrop network. This figure is not intended as an installation diagram.

Note

A multidrop transmitter in HART Revision 7 mode has a fixed analog output of 4mA for all but one device. Only one device is allowed to have an active analog signal.

Figure 2-19. Typical multidrop network

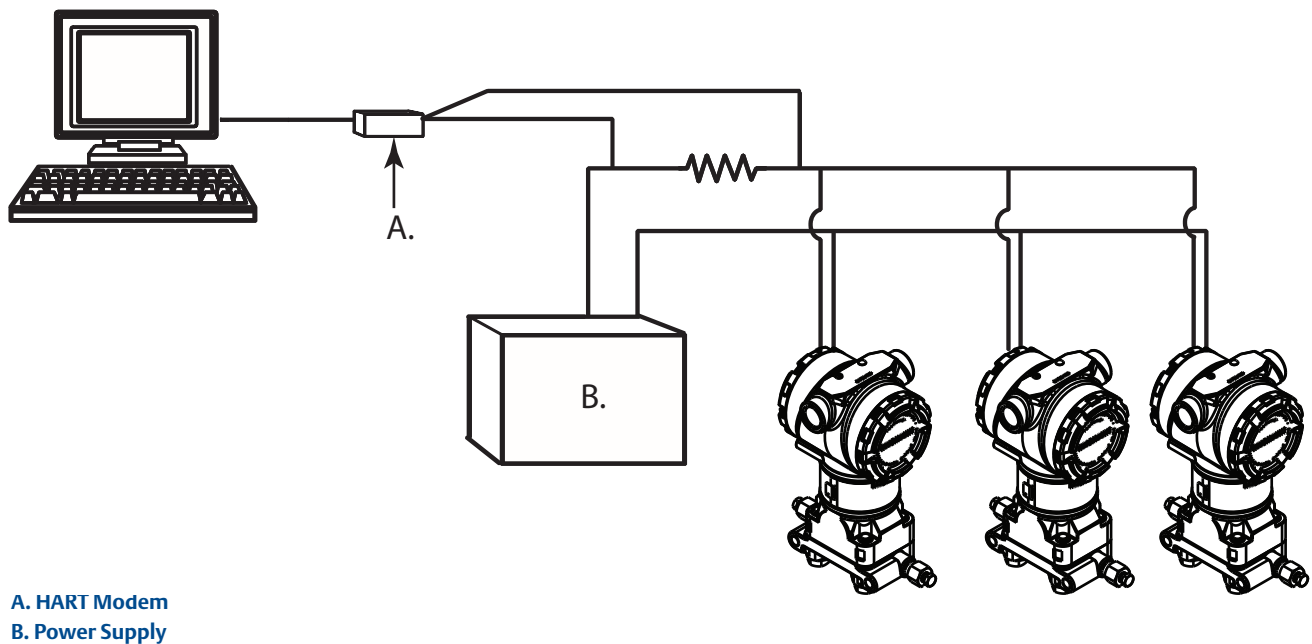

The 3051 is set to address zero (0) at the factory, which allows operation in the standard point-to-point manner with a 4–20 mA output signal. To activate multidrop communication, the transmitter address must be changed to a number from 1 to 15 for HART Revision 5, or 1–63 for HART Revision 7. This change deactivates the 4–20 mA analog output, sending it to 4 mA. It also disables the failure mode alarm signal, which is controlled by the upscale/downscale switch position. Failure signals in multidropped transmitters are communicated through HART messages.

2.12.1 Changing a transmitter address

To activate multidrop communication, the transmitter poll address must be assigned a number from 1 to 15 for HART Revision 5, and 1-63 for HART Revision 7. Each transmitter in a multidropped loop must have a unique poll address.

Changing transmitter address using a Field Communicator

From the *HOME* screen, enter the fast key sequence

HART Revision 5

HART Revision 7

Device Dashboard Fast Keys	HART Revision 5	HART Revision 7
	2, 2, 5, 2, 1	2, 2, 5, 2, 2

Changing transmitter address using AMS Device Manager

Right click on the device and select **Configure**.

1. In HART Revision 5 mode:
 - a. Click on **Manual Setup**, select the **HART** tab.
 - b. In the Communication Settings box enter polling address in the **Polling Address** box, click **Send**.
2. In HART Revision 7 mode:
 - a. Click on **Manual Setup**, select the **HART** tab and click the **Change Polling Address** button.
3. Carefully read the warning and click **Yes** if it is safe to apply the changes.

2.12.2 Communicating with a multidropped transmitter

To communicate with a multidrop transmitter, the Field Communicator or AMS Device Manager has to be set up for Polling.

Communicating with a multidropped transmitter using a Field Communicator

1. Select **Utility** and **Configure HART Application**.
2. Select **Polling Addresses**.
3. Enter **0-63**.

Communicating with a multidropped transmitter using AMS Device Manager

Click on the *HART modem icon* and select **Scan All Devices**.

Section 3 Hardware Installation

Overview	page 37
Safety messages	page 37
Considerations	page 38
Installation procedures	page 40
Installation procedures	page 40
Rosemount 305, 306, and 304 Manifolds	page 51

3.1 Overview

The information in this section covers installation considerations for the Rosemount 3051 with HART protocols. A Quick Installation Guide (document number 00825-0100-4001) is shipped with every transmitter to describe recommended pipe-fitting and wiring procedures for initial installation. Dimensional drawings for each 3051 variation and mounting configuration are included on [page 44](#).

Note
For transmitter disassembly and reassembly refer to “[Disassembly procedures](#)” on [page 89](#), and “[Reassembly procedures](#)” on [page 91](#).”

3.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operation. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

⚠ WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the approvals section of the 3051 reference manual for any restrictions associated with a safe installation.

- Before connecting a Field Communicator in an explosive atmosphere, ensure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- In an Explosion-Proof/Flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

- Install and tighten process connectors before applying pressure.

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

⚠ WARNING

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals.

Process leaks could result in death or serious injury.

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the transmitter is in service.

Replacement equipment or spare parts not approved by Emerson Process Management for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.

- Use only bolts supplied or sold by Emerson Process Management as spare parts.

Improper assembly of manifolds to traditional flange can damage sensor module.

- For safe assembly of manifold to traditional flange, bolts must break back plane of flange web (i.e., bolt hole) but must not contact sensor module housing.

3.3 Considerations

3.3.1 Installation considerations

Measurement accuracy depends upon proper installation of the transmitter and impulse piping. Mount the transmitter close to the process and use a minimum of piping to achieve best accuracy. Keep in mind the need for easy access, personnel safety, practical field calibration, and a suitable transmitter environment. Install the transmitter to minimize vibration, shock, and temperature fluctuation.

Important

Install the enclosed pipe plug (found in the box) in unused housing conduit opening with a minimum of five threads of engagement to comply with explosion-proof requirements.

For material compatibility considerations, see document number 00816-0100-3045 on www.emersonprocess.com/rosemount.

3.3.2 Environmental considerations

Best practice is to mount the transmitter in an environment that has minimal ambient temperature change. The transmitter electronics temperature operating limits are -40 to 185°F (-40 to 85°C). Refer to [Appendix A: Specifications and Reference Data](#) that lists the sensing element operating limits. Mount the transmitter so that it is not susceptible to vibration and mechanical shock and does not have external contact with corrosive materials.

3.3.3 Mechanical considerations

Steam service

For steam service or for applications with process temperatures greater than the limits of the transmitter, do not blow down impulse piping through the transmitter. Flush lines with the blocking valves closed and refill lines with water before resuming measurement. Refer to [Figure 3-9 on page 47](#) for correct mounting orientation.

Side mounted

When the transmitter is mounted on its side, position the Coplanar flange to ensure proper venting or draining. Mount the flange as shown in [Figure 3-9 on page 47](#), keeping drain/vent connections on the bottom for gas service and on the top for liquid service.


3.3.4 Draft range considerations

Installation

For the Rosemount 3051CD0 draft range pressure transmitter, it is best to mount the transmitter with the isolators parallel to the ground. See [Figure 3-1 on page 40](#) for a draft range installation example on a 304 manifold. Installing the transmitter in this way reduces oil head effect.

Tilting of the transmitter may cause a zero shift in the transmitter output, but can be eliminated by performing a trim procedure.

Figure 3-1. Draft range installation example

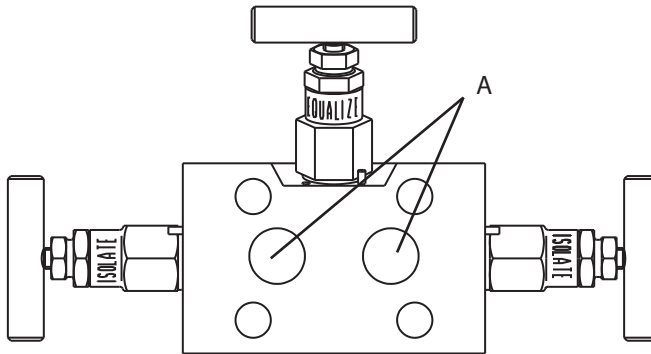

A. Isolators

Reducing process noise

Rosemount 3051CD0 draft transmitters are sensitive to small pressure changes. Increasing the damping will decrease output noise, but will further reduce response time. In gage applications, it is important to minimize pressure fluctuations to the low side isolator.

Output damping

The output damping for the Rosemount 3051CD0 is factory set to 3.2. If the transmitter output is still noisy, increase the damping time. If faster response is needed, decrease the damping time. See “Damping” on page 19 for damping adjustment information.

Reference side filtering

In gage applications it is important to minimize fluctuations in atmospheric pressure to which the low side isolator is exposed.

One method of reducing fluctuations in atmospheric pressure is to attach a length of tubing to the reference side of the transmitter to act as a pressure buffer.

3.4 Installation procedures

3.4.1 Mount the transmitter

For dimensional drawing information refer to [Appendix A: Specifications and Reference Data](#) on page 115.

Process flange orientation

Mount the process flanges with sufficient clearance for process connections. For safety reasons, place the drain/vent valves so the process fluid is directed away from possible human contact when the vents are used. In addition, consider the need for a testing or calibration input.

Note


Most transmitters are calibrated in the horizontal position. Mounting the transmitter in any other position will shift the zero point to the equivalent amount of liquid head pressure caused by the varied mounting position. To reset zero point, refer to “[Sensor Trim](#)” on [page 10](#).

Consider housing rotation

The electronics housing can be rotated up to 180 degrees in either direction to improve field access, or to better view the optional LCD/LOI Display. To rotate the housing, perform the following procedure:

1. Loosen the housing rotation set screw using a $\frac{5}{64}$ -in. hex wrench.
2. Turn the housing left or right up to 180° from its original position. Over rotating will damage the transmitter.
3. Retighten the housing rotation set screw.

Figure 3-2. Housing rotation

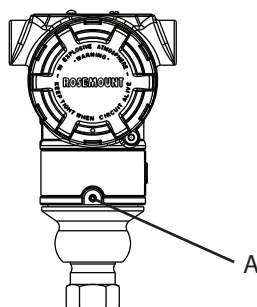

A. Housing Rotation Set Screw (5/64-in.)

Electronics housing clearance

Mount the transmitter so the terminal side is accessible. Clearance of 0.75 in. (19 mm) is required for cover removal. Use a conduit plug in the unused conduit opening. Three inches of clearance is required for cover removal if a meter is installed.

Environmental seal for housing

For NEMA 4X, IP66, and IP68 requirements, use thread seal (PTFE) tape or paste on male threads of conduit to provide a watertight seal.

Always ensure a proper seal by installing the electronics housing cover(s) so that metal contacts metal. Use Rosemount O-rings.

Flange bolts

The 3051 can be shipped with a Coplanar flange or a Traditional flange installed with four 1.75-inch flange bolts. Mounting bolts and bolting configurations for the Coplanar and Traditional flanges can be found on [page 43](#). Stainless steel bolts supplied by Emerson Process Management are coated with a lubricant to ease installation. Carbon steel bolts do not require lubrication. No additional lubricant should be applied when installing either type of bolt. Bolts supplied by Emerson Process Management are identified by their head markings.


Bolt installation

⚠ Only use bolts supplied with the Rosemount 3051 or sold by Emerson Process Management as parts for the Rosemount 3051 transmitter. The use of non approved bolts could reduce pressure. Use the following bolt installation procedure:

Table 3-1. Bolt installation torque values


Bolt material	Initial torque value	Final torque value
CS-(ASTM-A445) Standard	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
Austemitic 316 SST—Option L4	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)
ASTM A193 Grade B7M—Option L5	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
Alloy K-500—Option L6	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)

Figure 3-3. Traditional flange bolt configurations

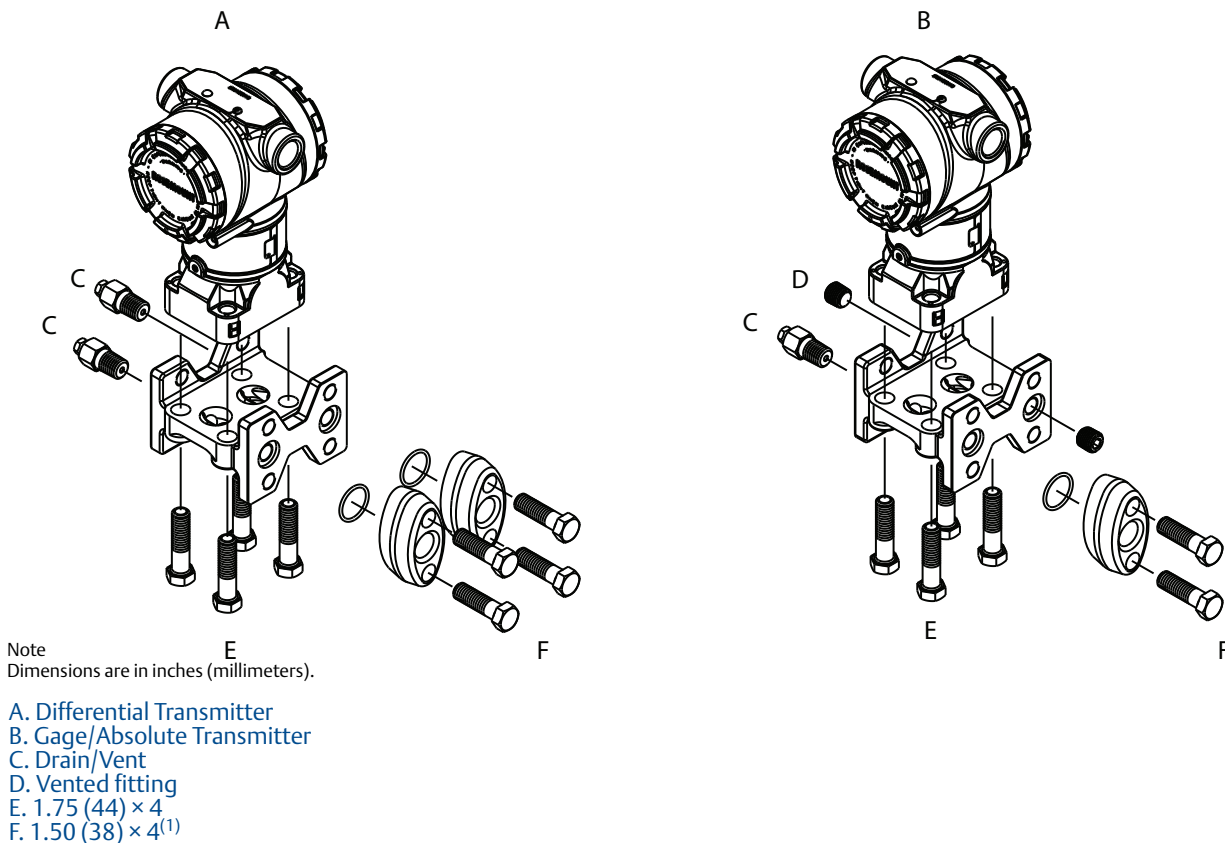

(1) For Gage and Absolute Transmitters: 150 (38) × 2

Figure 3-4. Mounting bolts and bolt configurations for coplanar flange

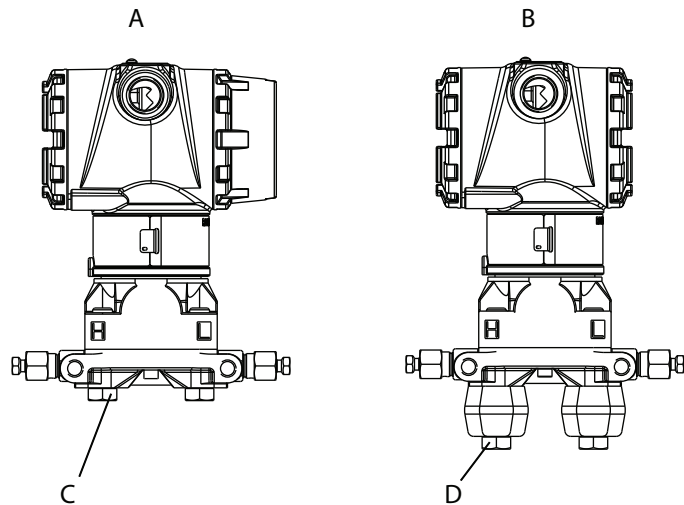


Description	Qty	Size in. (mm)
Differential Pressure		
Flange Bolts	4	1.75 (44)
Flange/Adapter Bolts	4	2.88 (73)
Gage/Absolute Pressure ⁽¹⁾		
Flange Bolts	4	1.75 (44)
Flange/Adapter Bolts	2	2.88 (73)


(1) Rosemount 3051T transmitters are direct mount and do not require bolts for process connection.

- A. Transmitter with flange bolts
 - B. Transmitter with flange adapters and flange/adapter bolts
 - C. 1.75 (44) × 4
 - D. 2.88 (73) × 4
- Note: Dimensions are in inches (millimeters).

Figure 3-5. Mounting bracket option codes B1, B7, and BA

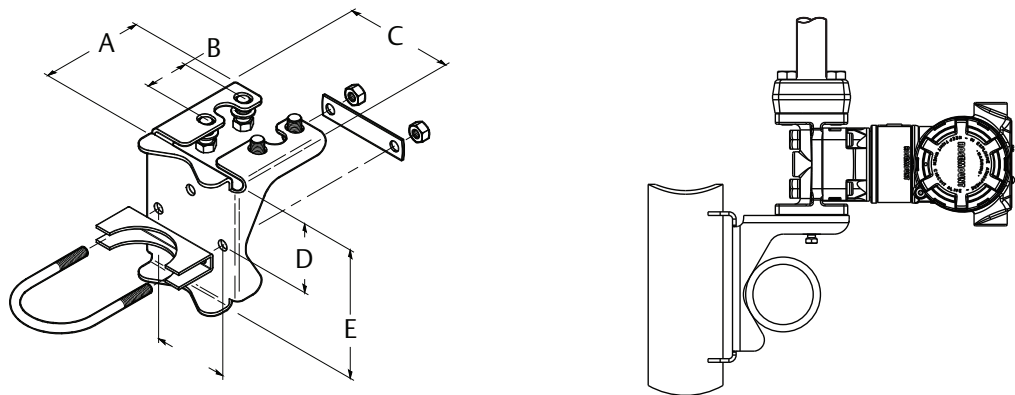

- A. 3.75 (95)
- B. 1.63 (41)
- C. 4.09 (104)
- D. 2.73 (69)
- E. 4.97 (126)

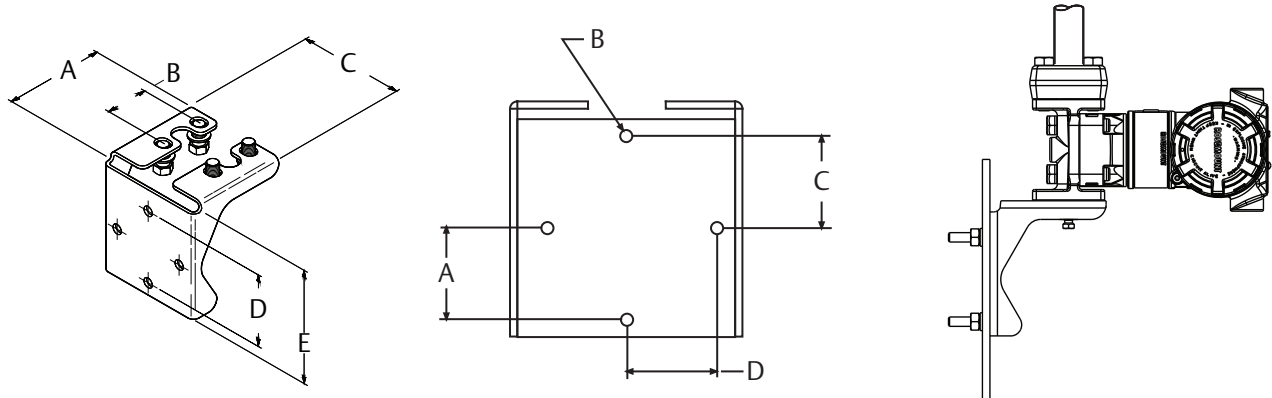Figure 3-6. Panel mounting bracket option codes B2 and B8

A. 3.75 (95)

B. 1.63 (41)

C. 4.09 (104)

D. 2.81 (71)


E. 4.5 (114)

A. 1.40 (36)

B. Mounting Holes 0.375 Diameter (10)

C. 1.405 (35,7)

D. 1.405 (35,7)

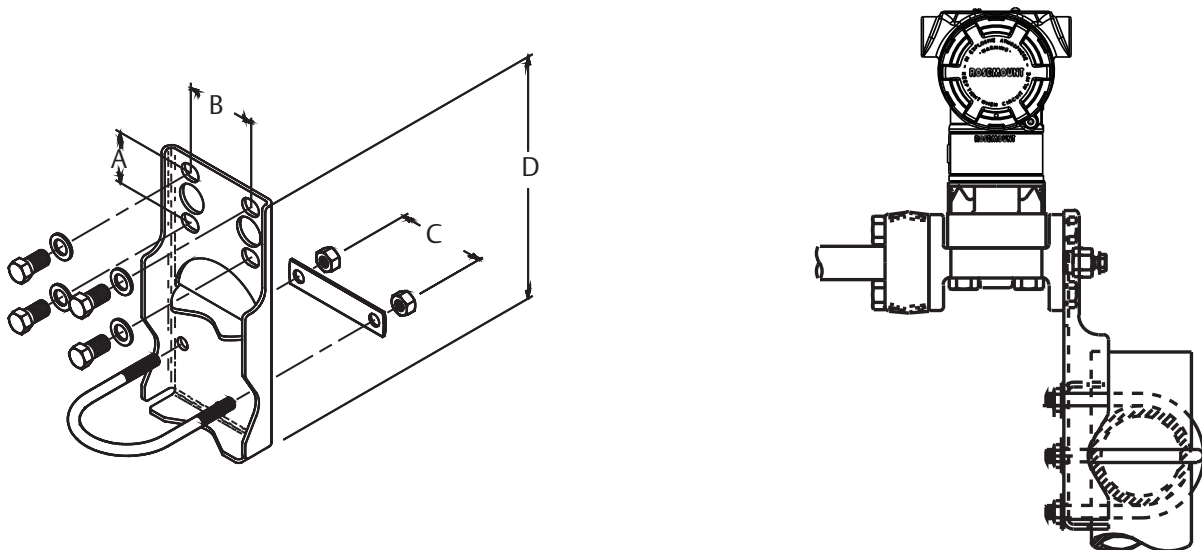Figure 3-7. Flat mounting bracket option codes B3 and BC

A. 1.625 (41)

B. 2.125 (54)

C. 2.81 (71)

D. 8.00 (203)

Note: Dimensions are in inches (millimeters).


1. Finger-tighten the bolts.
2. Torque the bolts to the initial torque value using a crossing pattern (see [Table 3.4.2](#) for torque values).
3. Torque the bolts to the final torque value using the same crossing pattern.

Mounting brackets

Rosemount 3051 transmitters may be panel-mounted or pipe-mounted via an optional mounting bracket. Refer to [Table 3-2](#) for the complete offering and see [Figure 3-8](#) through [Figure 3-7](#) on pages 46 and 44 for dimensional and mounting configuration information.

Table 3-2. Mounting brackets

3051 brackets										
Option code	Process connections			Mounting			Materials			
	Coplanar	In-line	Traditional	Pipe mount	Panel mount	Flat panel mount	CS bracket	SST bracket	CS bolts	SST bolts
B4	X	X		X	X	X		X		X
B1			X	X			X		X	
B2			X		X		X		X	
B3			X			X	X		X	
B7			X	X			X			X
B8			X		X		X			X
B9			X			X	X			X
BA			X	X				X		X
BC			X			X		X		X

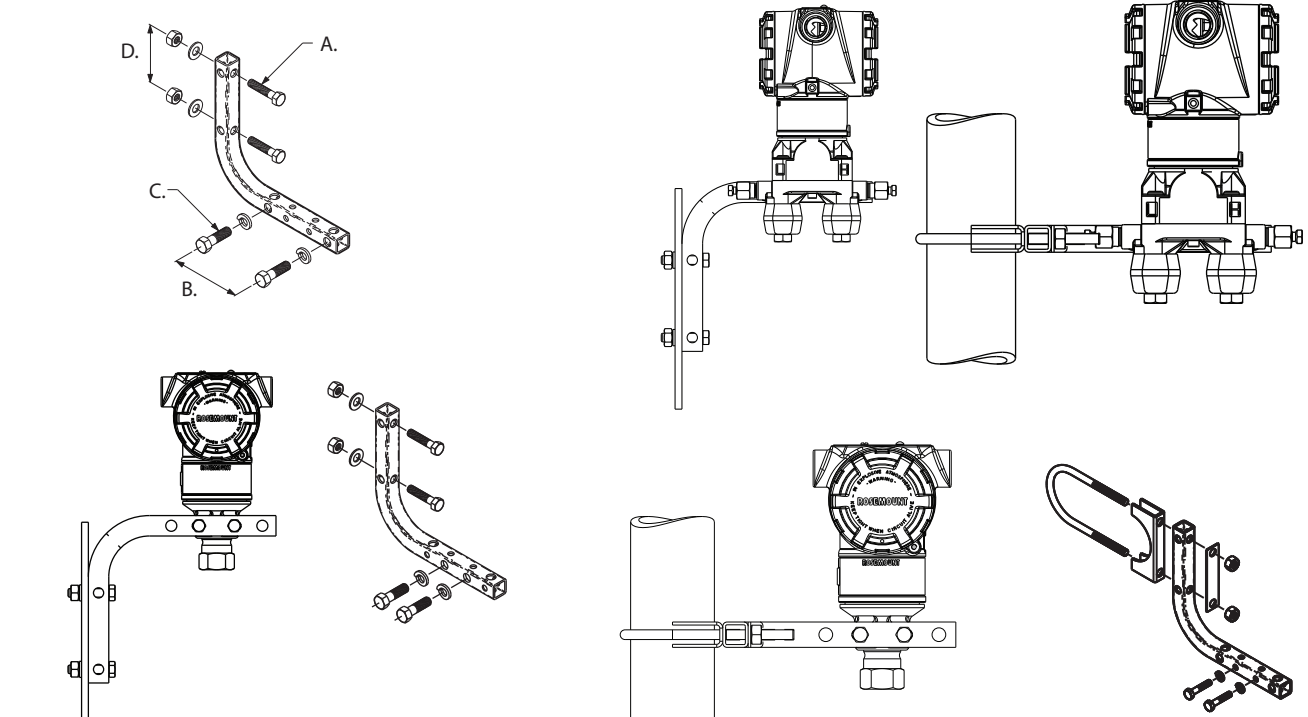Figure 3-8. Mounting bracket option code B4

A. $\frac{5}{16} \times 1\frac{1}{2}$ Bolts for Panel Mounting (Not Supplied)

B. 3.4 (85)


C. $\frac{3}{8} \times 16 \times 1\frac{1}{4}$ Bolts for Mounting to Transmitter

D. 2.8 (71)

Note: Dimensions are in inches (millimeters).



Carbon Steel (CS) Head Markings



B7M


316

B8M



Stainless Steel (SST) Head Markings

*The last digit in the F593_ head marking may be any letter between A and M.



Alloy K-500 Head Marking

3.4.2 Impulse piping

Mounting requirements

Impulse piping configurations depend on specific measurement conditions. Refer to [Figure 3-9 on page 47](#) for examples of the following mounting configurations:

Liquid measurement

- Place taps to the side of the line to prevent sediment deposits on the transmitter's process isolators.
- Mount the transmitter beside or below the taps so gases can vent into the process line.
- Mount drain/vent valve upward to allow gases to vent.

Gas measurement

- Place taps in the top or side of the line.
- Mount the transmitter beside or above the taps so liquid will drain into the process line.


Steam measurement

- Place taps to the side of the line.
- Mount the transmitter below the taps to ensure that the impulse piping will stay filled with condensate.
- In steam service above 250 °F (121 °C), fill impulse lines with water to prevent steam from contacting the transmitter directly and to ensure accurate measurement start-up.

Note

For steam or other elevated temperature services, it is important that temperatures at the process connection do not exceed the transmitter's process temperature limits.

Figure 3-9. Installation examples

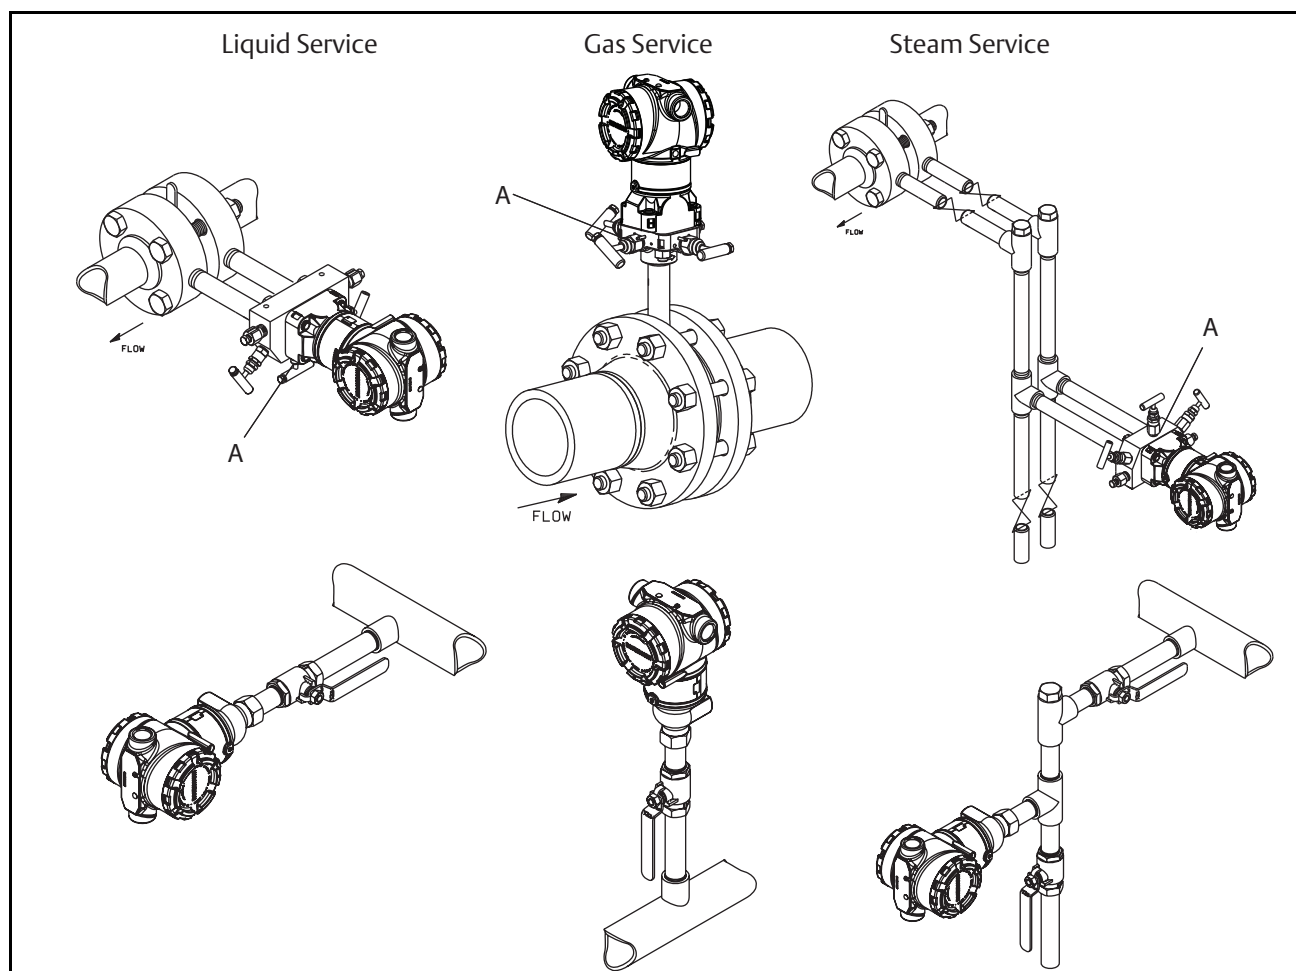

A. Drain/vent valves

Best practices

The piping between the process and the transmitter must accurately transfer the pressure to obtain accurate measurements. There are five possible sources of error: pressure transfer, leaks, friction loss (particularly if purging is used), trapped gas in a liquid line, liquid in a gas line, and density variations between the legs.

The best location for the transmitter in relation to the process pipe is dependent on the process. Use the following guidelines to determine transmitter location and placement of impulse piping:

- Keep impulse piping as short as possible.
- For liquid service, slope the impulse piping at least 1 in./foot (8 cm/m) upward from the transmitter toward the process connection.
- For gas service, slope the impulse piping at least 1 in./foot (8 cm/m) downward from the transmitter toward the process connection.
- Avoid high points in liquid lines and low points in gas lines.
- Make sure both impulse legs are the same temperature.

- Use impulse piping large enough to avoid friction effects and blockage.
- Vent all gas from liquid piping legs.
- When using a sealing fluid, fill both piping legs to the same level.
- When purging, make the purge connection close to the process taps and purge through equal lengths of the same size pipe. Avoid purging through the transmitter.
- Keep corrosive or hot (above 250 °F [121 °C]) process material out of direct contact with the sensor module and flanges.
- Prevent sediment deposits in the impulse piping.
- Maintain equal leg of head pressure on both legs of the impulse piping.
- Avoid conditions that might allow process fluid to freeze within the process flange.

3.4.3 Process connections

Coplanar or traditional process connection

-  Install and tighten all four flange bolts before applying pressure, or process leakage will result. When properly installed, the flange bolts will protrude through the top of the sensor module housing. Do not attempt to loosen or remove the flange bolts while the transmitter is in service.

Flange adaptors:

-  Rosemount 3051DP and GP process connections on the transmitter flanges are 1/4–18 NPT. Flange adapters are available with standard 1/2–14 NPT Class 2 connections. The flange adapters allow users to disconnect from the process by removing the flange adapter bolts. Use plant-approved lubricant or sealant when making the process connections. Refer to Dimensional Drawings on [page 120](#) for the distance between pressure connections. This distance may be varied $\pm 1/4$ in. (6.4 mm) by rotating one or both of the flange adapters.

To install adapters to a Coplanar flange, perform the following procedure:

1. Remove the flange bolts.
2. Leaving the flange in place, move the adapters into position with the o-ring installed.
3. Clamp the adapters and the Coplanar flange to the transmitter sensor module using the larger of the bolts supplied.
4. Tighten the bolts. Refer to “[Flange bolts](#)” on [page 42](#) for torque specifications.

Whenever you remove flanges or adapters, visually inspect the PTFE o-rings. Replace with o-ring designed for Rosemount transmitter if there are any signs of damage, such as nicks or cuts. Undamaged o-rings may be reused. If you replace the o-rings, retorque the flange bolts after installation to compensate for cold flow. Refer to the process sensor body reassembly procedure in [Section 5: Troubleshooting](#).

Note

PTFE O-rings should be replaced if the flange adapter is removed.

3.4.4 Inline process connection

Inline gage transmitter orientation


⚠ CAUTION

Interfering or blocking the atmospheric reference port will cause the transmitter to output erroneous pressure values.

The low side pressure port on the inline gage transmitter is located in the neck of the transmitter, behind the housing. The vent path is 360 degrees around the transmitter between the housing and sensor (See [Figure 3-10](#)).

Keep the vent path free of any obstruction, such as paint, dust, and lubrication by mounting the transmitter so that the process can drain away.


Figure 3-10. Inline gage low side pressure port

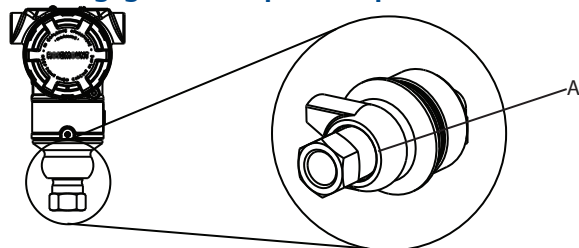

A. Low side pressure port (atmospheric reference)

⚠ WARNING


Do not apply torque directly to the sensor module. Rotation between the sensor module and the process connection can damage the electronics. To avoid damage, apply torque only to the hex-shaped process connection.

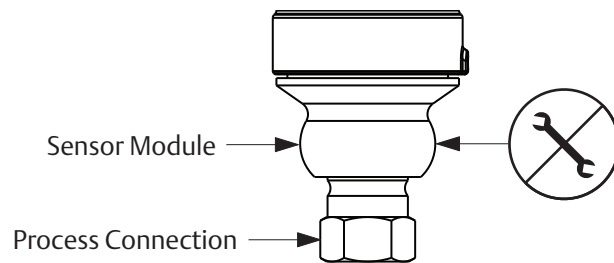

3.5 Rosemount 305, 306, and 304 Manifolds

The 305 Integral Manifold mounts directly to the transmitter and is available in two styles: Traditional and Coplanar. The traditional 305 Integral Manifold can be mounted to most primary elements with mounting adapters in the market today. The 306 Integral Manifold is used with the 3051T in-line transmitters to provide block-and-bleed valve capabilities of up to 10000 psi (690 bar).

Figure 3-11. Manifolds

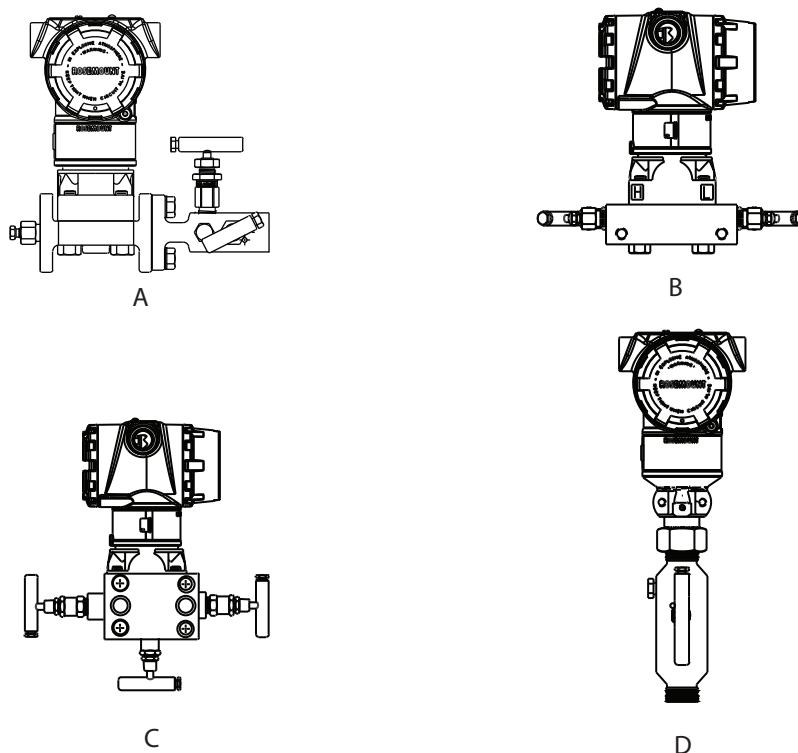

- A. 3051C and 304 Conventional
- B. 3051C and 305 Integral Coplanar
- C. 3051C and 305 Integral Traditional
- D. 3051T and 306 In-Line

The 304 conventional manifold combines a traditional flange and manifold that can be mounted to most primary elements.

3.5.1 Rosemount 305 Integral Manifold installation procedure

To install a 305 Integral Manifold to a 3051 transmitter:


1.  Inspect the PTFE sensor module o-rings. Undamaged o-rings may be reused. If the o-rings are damaged (if they have nicks or cuts, for example), replace with o-rings designed for Rosemount transmitter.

Important

If replacing the o-rings, take care not to scratch or deface the o-ring grooves or the surface of the isolating diaphragm while you remove the damaged o-rings.

2. Install the Integral Manifold on the sensor module. Use the four 2.25-in. manifold bolts for alignment. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern as seen in [Figure 3-12](#) to final torque value. See “[Flange bolts](#)” on [page 42](#) for complete bolt installation information and torque values. When fully tightened, the bolts should extend through the top of the sensor module housing.

Figure 3-12. Bolt tightening pattern

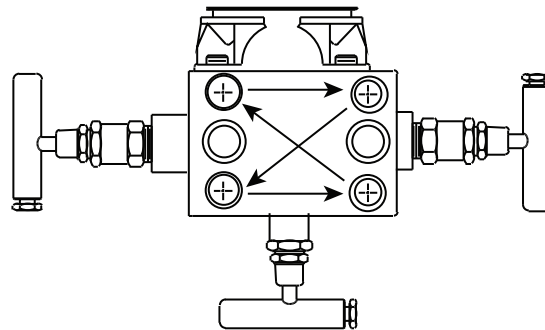

3. If the PTFE sensor module o-rings have been replaced, the flange bolts should be re-tightened after installation to compensate for cold flow of the o-rings.

3.5.2 Rosemount 306 Integral Manifold installation procedure

The 306 Manifold is for use only with a 3051T In-line transmitter.

-  Assemble the 306 Manifold to the 3051T In-line transmitter with a thread sealant.

3.5.3 Rosemount 304 Conventional Manifold installation procedure

To install a 304 Conventional Manifold to a 3051 transmitter:

1. Align the Conventional Manifold with the transmitter flange. Use the four manifold bolts for alignment.
2. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern to final torque value. See [“Flange bolts” on page 42](#) for complete bolt installation information and torque values. When fully tightened, the bolts should extend through the top of the sensor module housing.
3. Leak-check assembly to maximum pressure range of transmitter.


3.5.4 Manifold operation

 Improper installation or operation of manifolds may result in process leaks, which may cause death or serious injury.


Always perform a zero trim on the transmitter/manifold assembly after installation to eliminate any shift due to mounting effects. See [“Sensor Trim Overview” on page 10](#).

Three and five-valve configurations shown:


In normal operation the two block valves between the process and instrument ports will be open and the equalizing valve will be closed.

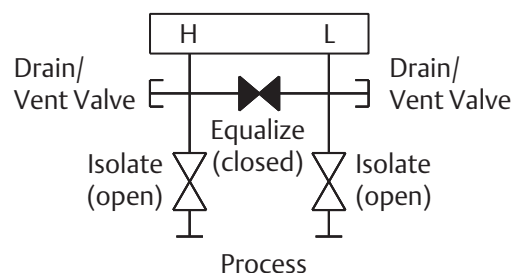


1. To zero the 3051, close the block valve to the low pressure (downstream) side of the transmitter first.

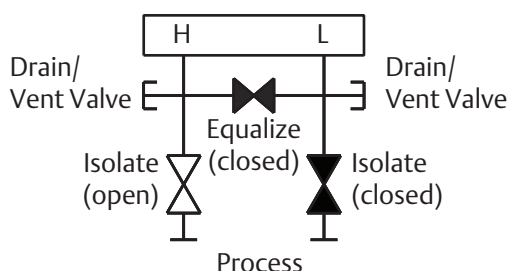


2. Open the center (equalize) valve to equalize the pressure on both sides of the transmitter. The manifold valves are now in the proper configuration for zeroing the transmitter.

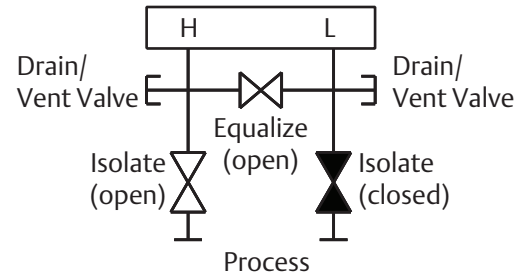

3. After zeroing the transmitter, close the equalizing valve.

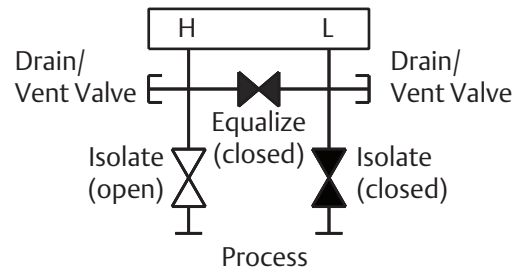


4. Open the block valve on the low pressure side of the transmitter to return the transmitter to service.

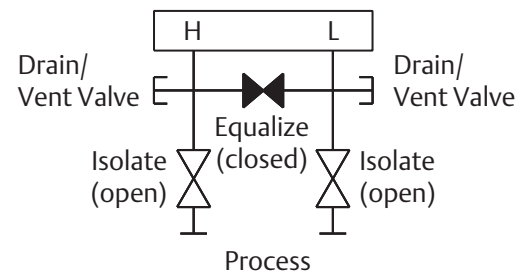


Five-valve Natural Gas configurations shown:

In normal operation, the two block valves between the process and instrument ports will be open, and the equalizing valves will be closed.

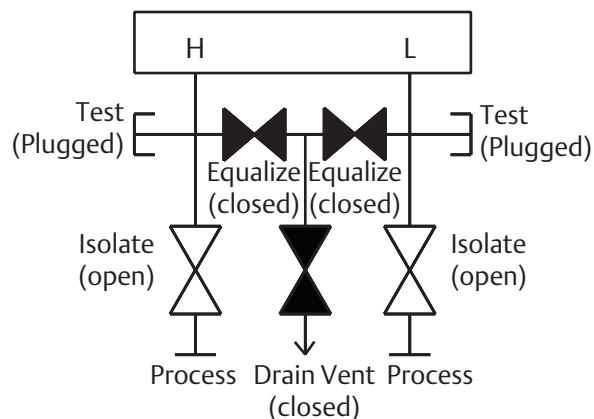


1. To zero the 3051, first close the block valve on the low pressure (downstream) side of the transmitter.

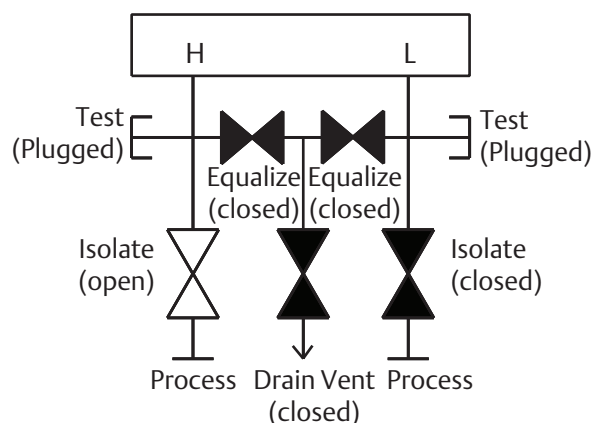


Note

Do not open the low side equalize valve before the high side equalize valve. Doing so will overpressure the transmitter.


2. Open the equalize valve on the high pressure (upstream) side of the transmitter.

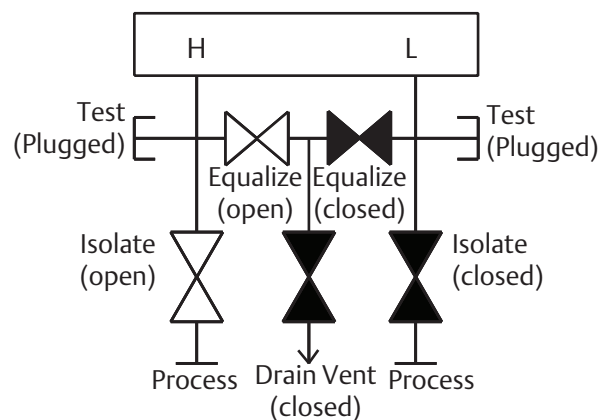


3. Open the equalize valve on the low pressure (downstream) side of the transmitter. The manifold is now in the proper configuration for zeroing the transmitter.

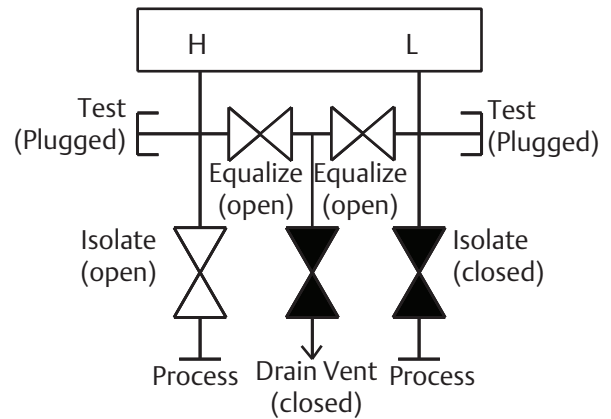


4. After zeroing the transmitter, close the equalize valve on the low pressure (downstream) side of the transmitter.

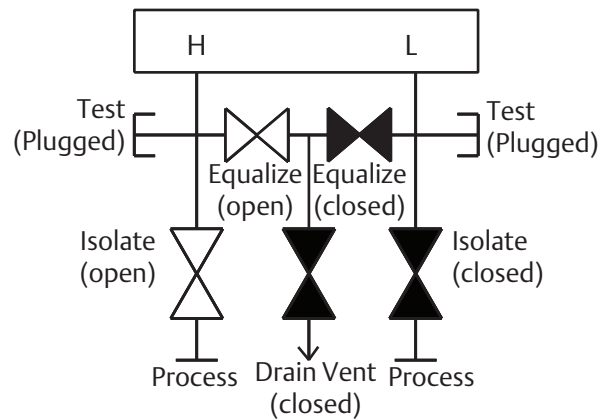

5. Close the equalize valve on the high pressure (upstream) side.

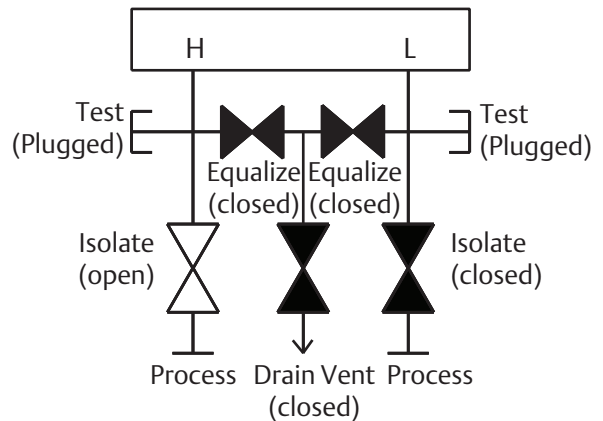

6. Finally, to return the transmitter to service, open the low side isolation valve.

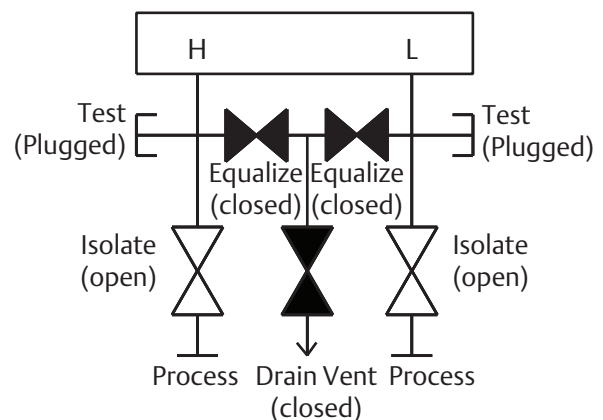

Section 4 Electrical Installation

Overview	page 57
Safety messages	page 57
LCD Display	page 58
Configuring transmitter security	page 59
Setting Transmitter alarm	page 61
Electrical considerations	page 62
Transient protection terminal block grounding	page 66

4.1 Overview

The information in this section covers installation considerations for the Rosemount 3051. A Quick Installation Guide is shipped with every transmitter to describe pipe-fitting, wiring procedures and basic configuration for initial installation.

Note

For transmitter disassembly and reassembly refer to sections “Disassembly procedures” on page 89, and “Reassembly procedures” on page 91.

4.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the approvals section of the 3051 reference manual for any restrictions associated with a safe installation.

- In an Explosion-Proof/Flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

- Install and tighten process connectors before applying pressure.


Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

4.3 LCD Display

Transmitters ordered with the LCD option (M5) or LOI option (M4) are shipped with the display installed. Installing the display on an existing 3051 transmitter requires a small instrument screwdriver. Carefully align the desired display connector with the electronics board connector. If connectors don't align, the display and electronics board are not compatible.

Figure 4-1. LCD Display assembly

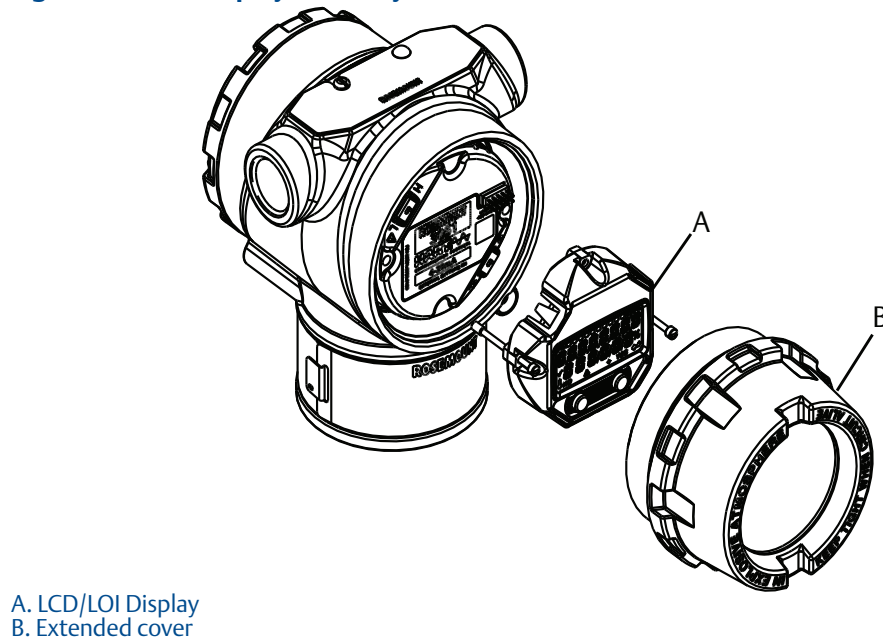

A. LCD/LOI Display
B. Extended cover

4.3.1 Rotating LCD/LOI Display


- ⚠ 1. Secure the loop to manual control and remove power to transmitter.
2. Remove transmitter housing cover.
3. Remove screws from the LCD/LOI Display and rotate to desired orientation.
 - a. Insert 10 pin connector into the display board for the correct orientation. Carefully align pins for insertion into the output board.
4. Re-insert screws.
5. Reattach transmitter housing cover; cover must be fully engaged to comply with explosion proof requirements.
6. Re-attach power and return loop to automatic control.

4.4 Configuring transmitter security

There are four security methods with the Rosemount 3051 transmitter.

- Security switch
- HART Lock
- Configuration Buttons lock
- LOI password

Figure 4-2. Electronics board

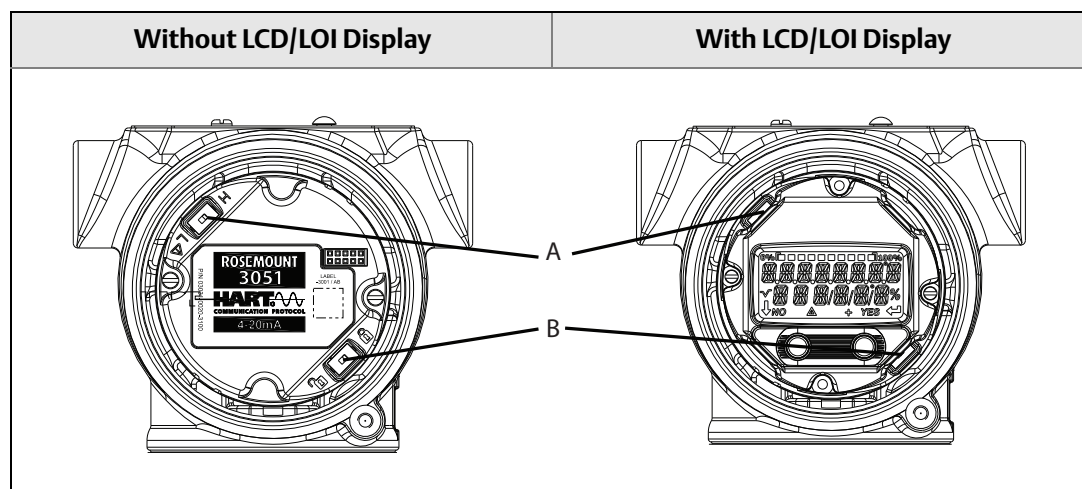

A. Alarm
B. Security

4.4.1 Setting security switch

The security switch is used to prevent changes to the transmitter configuration data. If the security switch is set to the locked location (), any transmitter configuration requests sent via HART, LOI, or local configuration buttons will be rejected by the transmitter and the transmitter configuration data will not be modified. Reference [Figure 4-2](#) for the location of the security switch. Follow the steps below to enable the security switch.

1.  Set loop to manual and remove power.
2. Remove transmitter housing cover.
3. Use a small screwdriver to slide the switch to the lock () position.
4. Replace transmitter housing cover; cover must be fully engaged to comply with explosion proof requirements.

4.4.2 HART Lock

The HART Lock prevents changes to the transmitter configuration from all sources; all changes requested via HART, LOI, and local configuration buttons will be rejected. The HART Lock can only be set via HART communication, and is only available in HART Revision 7 mode. The HART Lock can be enabled or disabled with a Field Communicator or AMS Device Manager.

Configuring HART Lock using Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 6, 4
----------------------------	------------

Configuring HART Lock using AMS device Manager

1. Right click on the device and select **Configure**.
2. Under *Manual Setup* select the **Security** tab.
3. Click **Lock/Unlock** button under *HART Lock (Software)* and follow the screen prompts.

4.4.3 Configuration Button lock

The configuration button lock disables all local button functionality. Changes to the transmitter configuration from the LOI and local buttons will be rejected. Local external keys can be locked via HART communication only.

Configuring configuration button lock using a Field Communicator

From the *HOME* screen, enter the fast key sequence

Device Dashboard Fast Keys	2, 2, 6, 3
----------------------------	------------

Configuring configuration button lock using AMS device Manager

1. Right click on the device and select **Configure**.
2. Under *Manual Setup* select the **Security** tab.
3. Within the *Configuration Buttons* dropdown menu select **Disabled** to lock external local keys.
4. Click **Send**.
5. Confirm service reason and click **Yes**.

4.4.4 Local Operator Interface Password

A Local Operator Interface Password can be entered and enabled to prevent review and modification of device configuration via the LOI. This does not prevent configuration from HART or external keys (analog zero and span; Digital Zero Trim). The LOI password is a 4 digit code that is to be set by the user. If the password is lost or forgotten the master password is “9307”.

The LOI password can be configured and enabled/disabled by HART communication via a Field Communicator, AMS Device Manager, or the LOI.

Configuring LOI password with Field Communicator

From the *HOME* screen, enter the fast key sequence


Device Dashboard Fast Keys	2, 2, 6, 5, 2
-----------------------------------	---------------

Configuring LOI password with AMS Device Manager

1. Right click on the device and select **Configure**.
2. Under *Manual Setup* select the **Security** tab.
3. Within the *Local Operator Interface* click the **Configure Password** button and follow the screen prompts.

Configuring LOI password using Local Operator Interface

Figure 4-3. Local Operator Interface password

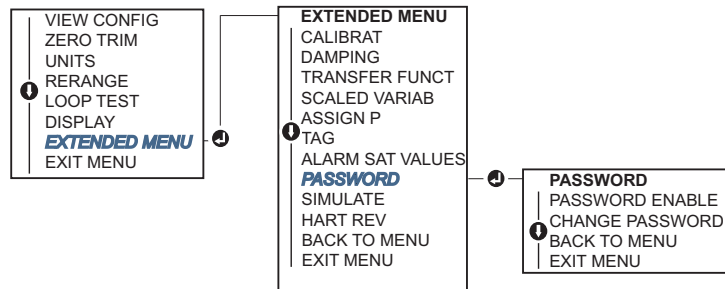

4.5 Setting Transmitter alarm

On the electronics board is an alarm switch, reference [Figure 4-2 on page 59](#) for switch location. Follow the steps below to change the alarm switch location.

1.  Set loop to manual and remove power.
2. Remove transmitter housing cover.
3. Use a small screwdriver to slide switch to desired position.
4. Replace transmitter cover; cover must be fully engaged to comply with explosion proof requirements.

4.6 Electrical considerations

Note

Make sure all electrical installation is in accordance with national and local code requirements.

⚠ CAUTION

Do not run signal wiring in conduit or open trays with power wiring or near heavy electrical equipment.


4.6.1 Conduit installation

⚠ CAUTION

If all connections are not sealed, excess moisture accumulation can damage the transmitter. Make sure to mount the transmitter with the electrical housing positioned downward for drainage. To avoid moisture accumulation in the housing, install wiring with a drip loop, and ensure the bottom of the drip loop is mounted lower than the conduit connections of the transmitter housing.

Recommended conduit connections are shown in [Figure 4-4](#).

Figure 4-4. Conduit installation diagrams.

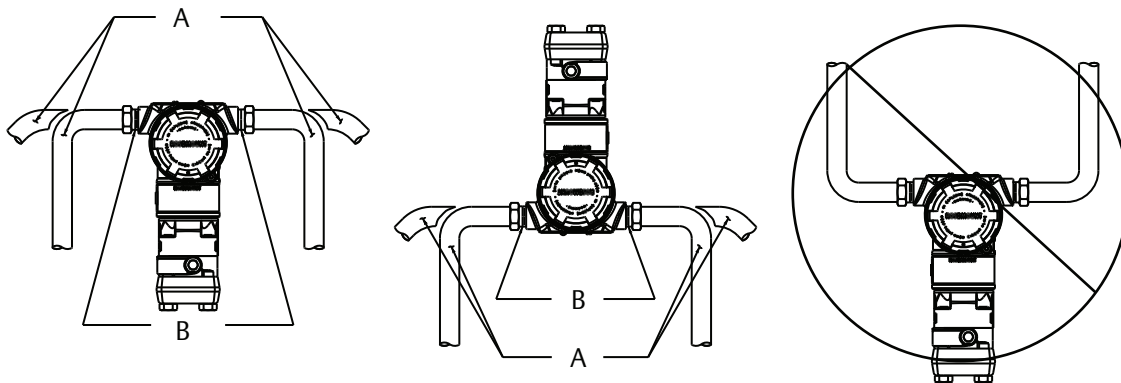

A. Possible conduit line positions

B. Sealing compound

4.6.2 Power supply for 4-20 mA HART


Transmitter operates on 10.5-42.4 Vdc at the terminal of the transmitter. The dc power supply should provide power with less than two percent ripple. A minimum of 16.6V is required for loops with a 250 Ω resistance.

Note

A minimum loop resistance of 250 Ω s is required to communicate with a Field Communicator. If a single power supply is used to power more than one 3051 transmitter, the power supply used, and circuitry common to the transmitters, should not have more that 20 Ω s of impedance at 1200 Hz.

Figure 4-5. Load limitation

$$\text{Maximum Loop Resistance} = 43.5 * (\text{Power Supply Voltage} - 10.5)$$

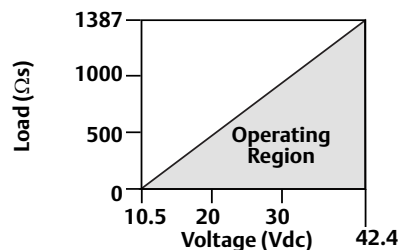

The Field Communicator requires a minimum loop resistance of 250 Ω for communication.

The total resistance load is the sum of the resistance of the signal leads and the load resistance of the controller, indicator, I.S. Barriers, and related pieces. If intrinsic safety barriers are used, the resistance and voltage drop must be included.

4.6.3 Wiring the transmitter


⚠ CAUTION

- Do not connect the power signal wiring to the test terminals. Incorrect wiring can damage test circuit.

Note

Use shielded twisted pairs to yield best results. To ensure proper communication, use 24 AWG or larger wire and do not exceed 5000 feet (1500 meters).

Figure 4-6. Wiring the transmitter

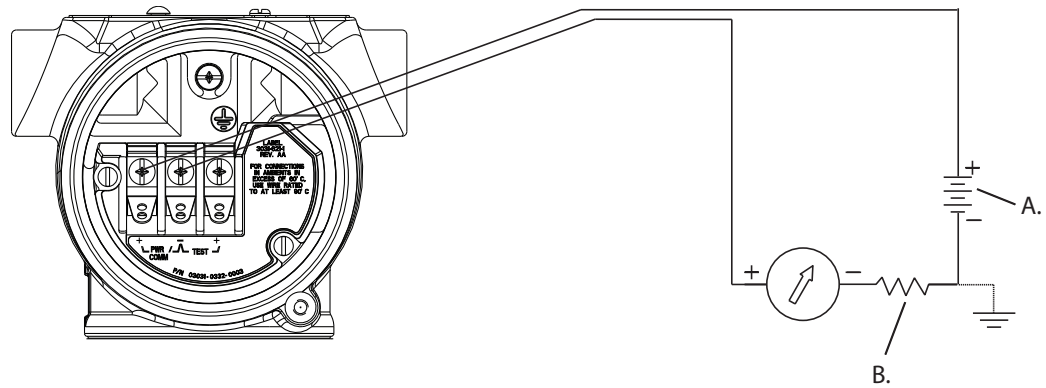

A. DC power supply
B. $R_L \geq 250$ (necessary for HART communication only)

Perform the following procedure to make wiring connections:

1. Remove the housing cover on terminal compartment side. Do not remove the cover in explosive atmospheres when the circuit is live. Signal wiring supplies all power to the transmitter.
2. For 4-20 mA HART output, connect the positive lead to the terminal marked (pwr/comm+) and the negative lead to the terminal marked (pwr/comm-). Do not connect the powered signal wiring to the test terminals. Power could damage the test diode.
3. Plug and seal unused conduit connection on the transmitter housing to avoid moisture accumulation in the terminal side.

4.6.4 Grounding the transmitter


Signal cable shield grounding

Signal cable shield grounding is summarized in [Figure 4-7 on page 65](#). The signal cable shield and unused shield drain wire must be trimmed and insulated, ensuring that the signal cable shield and drain wire do not come in contact with the transmitter case. See [“Transmitter case grounding” on page 65](#) for instructions on grounding the transmitter case. Follow the steps below to correctly ground the signal cable shield.

1. Remove the Field Terminals Housing Cover.
2. Connect the signal wire pair at the field terminals as indicated in [Figure 4-6](#).
3. At the field terminals, the cable shield and shield drain wire should be trimmed close and insulated from transmitter housing.
4. Reattach the Field Terminals Housing Cover; cover must be fully engaged to comply with explosion proof requirements.
5. At terminations outside the transmitter housing, the cable shield drain wire should be continuously connected.

- a. Prior to the termination point, any exposed shield drain wire should be insulated as shown in [Figure 4-7 \(B\)](#).
6. Properly terminate the signal cable shield drain wire to an earth ground at or near the power supply.

Figure 4-7. Wiring pair and ground

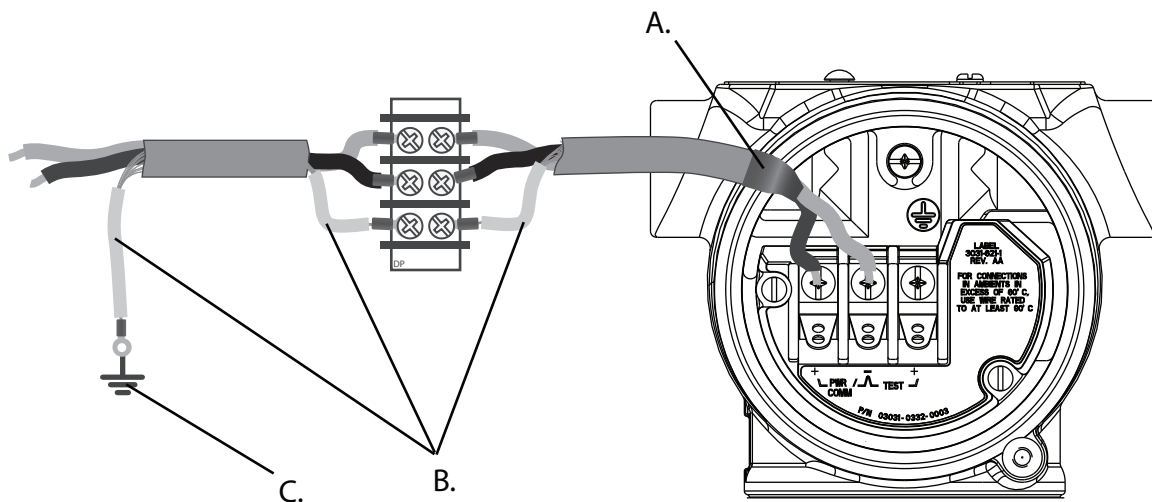


- A. Insulate shield and shield drain wire
- B. Insulate exposed shield drain wire
- C. Terminate cable shield drain wire to earth ground

Transmitter case grounding

Always ground the transmitter case in accordance with national and local electrical codes. The most effective transmitter case grounding method is a direct connection to earth ground with minimal impedance. Methods for grounding the transmitter case include:


- Internal Ground Connection: The Internal Ground Connection screw is inside the FIELD TERMINALS side of the electronics housing. This screw is identified by a ground symbol ($\oplus$). The ground connection screw is standard on all Rosemount 3051 transmitters. Refer to [Figure 4-8 on page 66](#).
- External ground connection: The external ground connection is located on the exterior of the transmitter housing. Refer to [Figure 4-9 on page 66](#). This connection is only available with option V5 and T1.

Figure 4-8. Internal ground connection

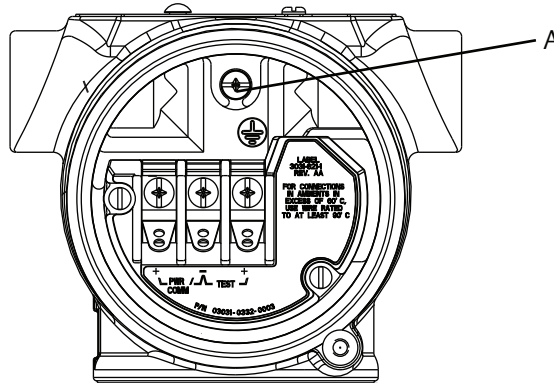

A. Internal ground location

Figure 4-9. External ground connection (option V5 or T1)

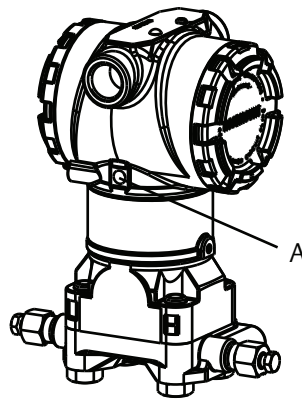

A. External ground location

Note


Grounding the transmitter case via threaded conduit connection may not provide sufficient ground continuity.

Transient protection terminal block grounding

The transmitter can withstand electrical transients of the energy level usually encountered in static discharges or induced switching transients. However, high-energy transients, such as those induced in wiring from nearby lightning strikes, can damage the transmitter.

The transient protection terminal block can be ordered as an installed option (Option Code T1) or as a spare part to retrofit existing 3051 transmitters in the field. See [“Spare parts” on page 171](#) for part numbers. The lightning bolt symbol shown in [Figure 4-10 on page 67](#) identifies the transient protection terminal block.

Figure 4-10. Transient protection Terminal Block

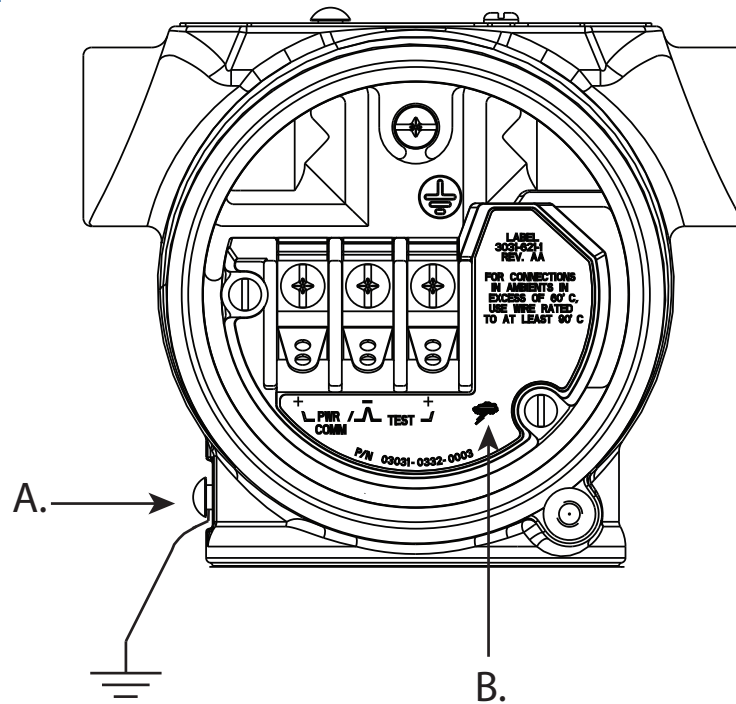

A. External ground connection location
B. Lightning bolt location

Note

The transient protection terminal block does not provide transient protection unless the transmitter case is properly grounded. Use the guidelines to ground the transmitter case. Refer to [Figure 4-10](#).

Section 5 Operation and Maintenance

Overview	page 69
Safety messages	page 69
Calibration overview	page 70
Trim the pressure signal	page 74
Perform a Sensor Trim	page 75
Switching HART Revision	page 80

5.1 Overview

This section contains information on calibrating Rosemount 3051 Pressure Transmitters.

Field Communicator, AMS, and Local Operator Interface (LOI) instructions are given to perform configuration functions.

5.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (). Refer to the following safety messages before performing an operation preceded by this symbol.

5.2.1 Warnings

WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the approvals section of the 3051 reference manual for any restrictions associated with a safe installation.

- Before connecting a Field Communicator in an explosive atmosphere, ensure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- In an Explosion-Proof/Flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

- Install and tighten process connectors before applying pressure.

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

5.3 Recommended calibration tasks

⚠ CAUTION

Absolute pressure transmitters (3051CA and 3051TA) are calibrated at the factory. Trimming adjusts the position of the factory characterization curve. It is possible to degrade performance of the transmitter if any trim is done improperly or with inaccurate equipment.

Table 5-1. Basic and full calibration tasks

Field installation tasks	Bench calibration tasks
1. Perform Sensor zero/lower Trim: Compensate for mounting pressure effects a. Refer to section 3.5 for manifold operation instructions to properly drain/vent valves 2. Set/check basic configuration parameters a. Output units b. Range points c. Output type d. Damping Value	1. Perform optional 4-20mA Output Trim 2. Perform a Sensor Trim a. Zero/lower trim using line pressure effect correction. Reference section 3.5 for manifold drain/vent valve operation instructions. b. Optional full scale trim. Sets the span of the device and requires accurate calibration equipment c. Set/check basic configuration parameters.

Note

For 3051CA, 3051TA range 0 and range 5 devices, an accurate absolute pressure source is required.

5.4 Calibration overview

The Rosemount 3051 pressure transmitter is an accurate instrument that is fully calibrated in the factory. Field calibration is provided to the user to meet plant requirements or industry standards. Complete calibration of the Rosemount 3051 can be split into two halves, Sensor Calibration and Analog Output Calibration.

Sensor Calibration allows the user to adjust the pressure (digital value) reported by the transmitter to be equal to a pressure standard. The Sensor Calibration can adjust the pressure offset to correct for mounting conditions or line pressure effects. This correction is recommended. The calibration of the pressure range (pressure span or gain correction) requires accurate pressure standards (sources) to provide a full calibration.

Like the Sensor Calibration, the analog output can be calibrated to match the user's measurement system. The Analog Output Trim (4-20mA Output Trim) will calibrate the loop at the 4mA and 20mA points.

The Sensor Calibration and the Analog Output Calibration combine to match the transmitter's measurement system to the plant standard.

Calibrate the sensor

- Sensor Trim ([page 75](#))
- Zero Trim ([page 75](#))

Calibrate the 4-20 mA output

- 4-20 mA Output Trim ([page 78](#))
- 4-20 mA Output Trim using other scale ([page 79](#))

5.4.1 Determining necessary Sensor Trims

Bench calibrations allow for calibrating the instrument for its desired range of operation. Straight forward connections to pressure source allow for a full calibration at the planned operating points. Exercising the Transmitter over the desired pressure range allows for verification of the analog output. [Trim the pressure signal on page 74](#) discusses how the trim operations change the calibration. It is possible to degrade the performance of the transmitter if a trim is done improperly or with inaccurate equipment. The transmitter can be set back to factory settings using the Recall Factory Trim command in [Recall Factory Trim—sensor trim on page 77](#).

For transmitters that are field installed, the manifolds discussed in [Rosemount 305, 306, and 304 Manifolds on page 51](#) allow the differential transmitter to be zeroed using the zero trim function. Both 3-valve and 5-valve manifolds are discussed. This field calibration will eliminate any pressure offsets caused by mounting effects (head effect of the oil fill) and static pressure effects of the process.

Determine the necessary trims with the following steps.

1. Apply Pressure
2. Check digital pressure, if the digital pressure does not match the applied pressure, perform a digital trim. See [Perform a Sensor Trim on page 75](#).
3. Check reported analog output against the live analog output. If they do not match, perform an analog output trim. See [Performing Digital-to-Analog Trim \(4-20mA Output Trim\) on page 78](#).


Trimming with configuration buttons

Local configuration buttons are external buttons located underneath the top tag of the transmitter. There are two possible sets of local configuration buttons that can be ordered and used to perform trim operations: Digital Zero Trim and Local Operator Interface. To access the buttons, loosen screw and rotate top tag until buttons are visible.

- **Local Operator Interface (M4):** Can perform both digital Sensor Trim and the 4-20mA Output Trim (analog output trim). Follow same procedures listed in trimming with Field Communicator or AMS listed below.
- **Digital Zero Trim (DZ):** Used for performing a sensor zero trim. See [Determining calibration frequency on page 72](#) for trim instructions.

All configuration changes should be monitored by a display or by measuring the loop output. Figure 5-1 shows the physical differences between the two sets of buttons.

Figure 5-1. Local Configuration Button options

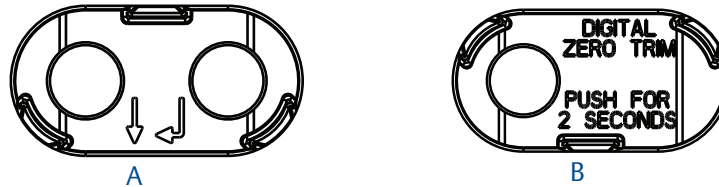

A. Local Operator Interface - green retainer
B. Digital Zero Trim- grey retainer

5.4.2 Determining calibration frequency

Calibration frequency can vary greatly depending on the application, performance requirements, and process conditions. Use the following procedure to determine calibration frequency that meets the needs of your application.

1. Determine the performance required for your application.
2. Determine the operating conditions.
3. Calculate the Total Probable Error (TPE).
4. Calculate the stability per month.
5. Calculate the calibration frequency.

Sample calculation for 3051 (0.04% accuracy & 5-year stability)

Step 1: Determine the performance required for your application.

Required Performance: 0.20% of span

Step 2: Determine the operating conditions.

Transmitter:	3051CD, Range 2 [URL=250 inH ₂ O(623 mbar)]
Calibrated Span:	150 inH ₂ O (374 mbar)
Ambient Temperature Change:	± 50 °F (28 °C)
Line Pressure:	500 psig (34,5 bar)

Step 3: Calculate total probable error (TPE).

$$TPE = \sqrt{(\text{ReferenceAccuracy})^2 + (\text{TemperatureEffect})^2 + (\text{StaticPressureEffect})^2} = 0.105\% \text{ of span}$$

Where:

$$\text{Reference Accuracy} = \pm 0.04\% \text{ of span}$$

$$\text{Ambient Temperature Effect} = \left(\frac{(0.0125 \times \text{URL})}{\text{Span}} + 0.0625 \right) \% \text{ per } 50^\circ \text{F} = \pm 0.0833\% \text{ of span}$$

$$\text{Span Static Pressure Effect}^{(1)} = 0.1\% \text{ reading per } 1000 \text{ psi (69 bar)} = \pm 0.05\% \text{ of span at maximum span}$$

(1) Zero static pressure effect removed by zero trimming at line pressure.

Step 4: Calculate the stability per month.

$$\text{Stability} = \pm \left[\frac{(0.125 \times \text{URL})}{\text{Span}} \right] \% \text{ of span for 5 years} = \pm 0.0021\% \text{ of URL for 1 month}$$

Step 5: Calculate calibration frequency.

$$\text{Cal. Freq.} = \frac{(\text{Req. Performance} - \text{TPE})}{\text{Stability per Month}} = \frac{(0.2\% - 0.105\%)}{0.0021\%} = 45 \text{ months}$$

5.4.3 Compensating for Span line pressure effects (range 4 and range 5)

Rosemount 3051 Range 4 and 5 pressure transmitters require a special calibration procedure when used in differential pressure applications. The purpose of this procedure is to optimize transmitter performance by reducing the effect of static line pressure in these applications. The 3051 differential pressure transmitters (ranges 0 through 3) do not require this procedure because optimization occurs at the sensor.

The systematic span shift caused by the application of static line pressure is -0.95% of reading per 1000psi (69 bar) for Range 4 transmitters, and -1% of reading per 1000psi (69 bar) for Range 5 transmitters. Using the following procedure, the span effect can be corrected to $\pm 0.2\%$ of reading per 1000 psi (69 bar) for line pressures from 0 to 3626 psi (0 to 250 bar).

Use the following example to compute correct input values.

Example

A range 4 differential pressure HART transmitter (3051CD4...) will be used in an application with a static line pressure of 1200 psi (83 bar). The transmitter output is ranged with 4mA at 500 inH2O (1, 2 bar) and 20mA at 1500 inH2O (3, 7 bar). To correct for systematic error caused by high static line pressure, first use the following formulas to determine the corrected values for the high trim value.

High Trim Value:

$$HT = (URV - (S/100 \times P/1000 \times LRV))$$

Where:	HT =	Corrected High Trim Value
	URV =	Upper Range Value
	S =	Span shift per specification (as a percent of reading)
	P =	Static Line Pressure in psi

In this example:

URV =	1500 inH ₂ O (3.74 bar)
S =	-0.95%
P =	1200 psi
LT =	$1500 - (-0.95\%/100 \times 1200 \text{ psi}/1000 \text{ psi} \times 1500 \text{ inH}_2\text{O})$
LT =	1517.1 inH ₂ O

Complete the Upper Sensor Trim procedure as described in [Perform a Sensor Trim on page 75](#). In the example above, at step 4, apply the nominal pressure value of 1500 inH₂O. However, enter the calculated correct upper Sensor Trim value of 1517.1 inH₂O with a Field Communicator.

Note

The Range Values for the 4 and 20 mA points should be at the nominal URV and LRV. In the example above, the values are 1500 inH₂O and 500 inH₂O respectively. Confirm the values on the HOME screen of the Field Communicator. Modify, if needed, by following the steps in [Rerange the transmitter on page 15](#).

5.5 Trim the pressure signal

5.5.1 Sensor Trim overview

A Sensor Trim corrects the pressure offset and pressure range to match a pressure standard. The upper Sensor Trim corrects the pressure range and the lower Sensor Trim (Zero Trim) corrects the pressure offset. An accurate pressure standard is required for full calibration. A zero trim can be performed if the process is vented, or the high and low side pressure are equal (for differential pressure transmitters).

Zero trim is a single-point offset adjustment. It is useful for compensating for mounting position effects and is most effective when performed with the transmitter installed in its final mounting position. Since this correction maintains the slope of the characterization curve, it should not be used in place of a Sensor Trim over the full sensor range.


When performing a zero trim, ensure that the equalizing valve is open and all wet legs are filled to the correct levels. Line pressure should be applied to the transmitter during a zero trim to eliminate line pressure errors. Refer to [Manifold operation on page 53](#).

Note

Do not perform a zero trim on Rosemount 3051T Absolute pressure transmitters. Zero trim is zero based, and absolute pressure transmitters reference absolute zero. To correct mounting position effects on a 3051T Absolute Pressure Transmitter, perform a low trim within the Sensor Trim function. The low trim function provides an offset correction similar to the zero trim function, but it does not require zero-based input.

Upper and lower Sensor Trim is a two-point sensor calibration where two end-point pressures are applied, all output is linearized between them, and requires an accurate pressure source. Always adjust the low trim value first to establish the correct offset. Adjustment of the high trim value provides a slope correction to the characterization curve based on the low trim value. The trim values help optimize performance over a specific measurement range.

Figure 5-2. Sensor Trim example

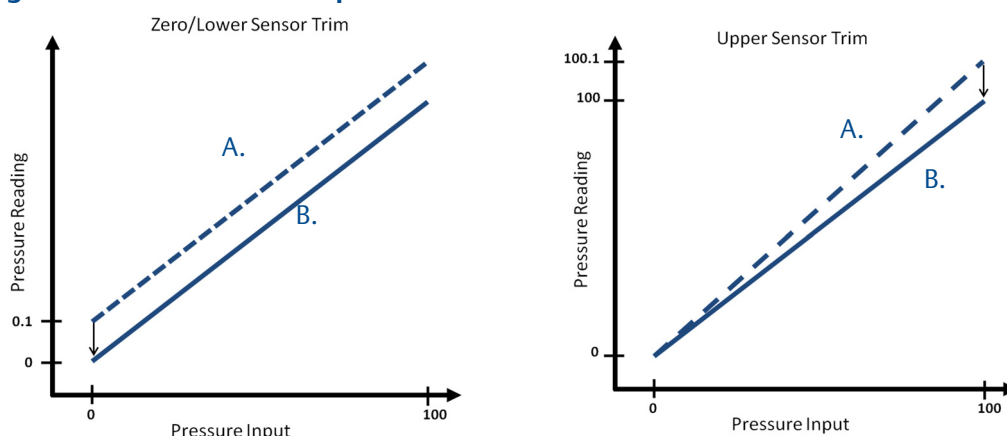

A. Before Trim
B. After Trim

5.5.2 Perform a Sensor Trim

When performing a Sensor Trim, but the upper and lower limits can be trimmed. If both upper and lower trims are to be performed, the lower trim must be done prior to the upper time.



Note

Use a pressure input source that is at least four times more accurate than the transmitter, and allow the input pressure to stabilize for ten seconds before entering any values.

Performing a Sensor Trim with a Field Communicator

From the *HOME* screen, enter the fast key sequence and follow the steps within the Field Communicator to complete the Sensor Trim

Device Dashboard Fast Keys	3, 4, 1
-----------------------------------	---------

To calibrate the sensor with a Field Communicator using the Sensor Trim function, perform the following procedure:

1. Select *Lower Sensor Trim*.

Note

Select pressure points so that lower and upper values are equal to or outside the expected process operation range. This can be done by going to “[Rerange the transmitter](#)” on [page 15](#) of [Section 2: Configuration](#).

2. Follow the commands provided by the Field Communicator to complete the adjustment of the lower value.
3. Repeat the procedure for the upper value, replacing 2: Lower Sensor Trim with 3: Upper Sensor Trim in Step 1.

Performing a Sensor Trim with AMS Device Manager


Right click on the device and, under the *Method* drop down menu, move cursor over *Calibrate* and, under *Sensor Trim*, select **Lower Sensor Trim**.

1. Follow the screen prompts to perform a Sensor Trim using AMS Device Manager.
2. If desired right click on the device and under the *Method* drop down menu, move cursor over *Calibrate* and under *Sensor Trim* and select **Upper Sensor Trim**

Performing a Sensor Trim using Local Operator Interface

Perform an upper and lower Sensor Trim by referencing [Figure 5-3](#).

Figure 5-3. Sensor Trim with Local Operator Interface

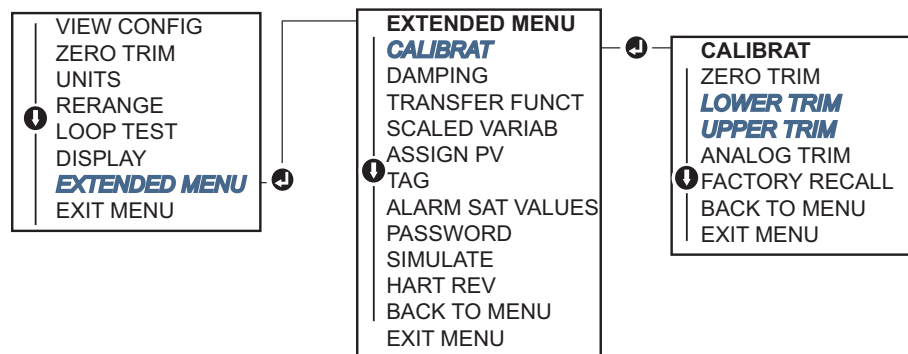

Performing a Digital Zero Trim (option DZ)

A Digital Zero Trim (option DZ) provides the same function as a zero/lower Sensor Trim, but can be completed in hazardous areas at any given time by simply pushing the Zero Trim button when the transmitter is at zero pressure. If the transmitter is not close enough to zero when the button is pushed, the command may fail due to excess correction. If ordered, a Digital Zero Trim can be performed by utilizing external configuration buttons located underneath the top tag of the transmitter, see [Figure 5-1](#) on [page 72](#) for DZ button location.

1. Loosen the top tag of the transmitter to expose buttons
2. Press and hold the Digital zero button for at least two seconds then release to perform a Digital Zero Trim

5.5.3 Recall Factory Trim—sensor trim

The Recall Factory Trim—Sensor Trim command allows the restoration of the as-shipped factory settings of the Sensor Trim. This command can be useful for recovering from an inadvertent zero trim of an absolute pressure unit or inaccurate pressure source.

Recalling Factory Trim with a Field Communicator

From the *HOME* screen, enter the fast key sequence and follow the steps within the Field Communicator to complete the Sensor Trim.

Device Dashboard Fast Keys	3, 4, 3
-----------------------------------	---------

Recalling factory trim with AMS


Right click on the device and, under the *Method* drop down menu, move cursor over *Calibrate* and select **Restore Factory Calibration**.

1. Click **Next** after setting the control loop to manual.
2. Select **Sensor Trim** under *Trim to recall* and click **Next**.
3. Follow the screen prompts to recall Sensor Trim.

Recalling factory trim - Sensor Trim using Local Operator Interface

Refer to [Figure 5-4](#) to recall factory Sensor Trim.


Figure 5-4. Recall Factory Trim - Sensor Trim with Local Operator Interface

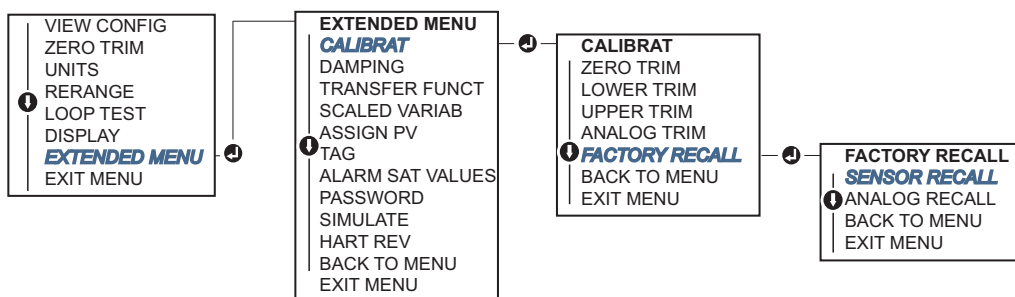

5.6 Trim the analog output

The Analog Output Trim commands allow you to adjust the transmitter's current output at the 4 and 20 mA points to match the plant standards. This trim is performed after the digital to analog conversion so only the 4-20mA analog signal will be affected. Figure 5-5 graphically shows the two ways the characterization curve is affected when an analog output trim is performed.

Figure 5-5. Analog output trim example

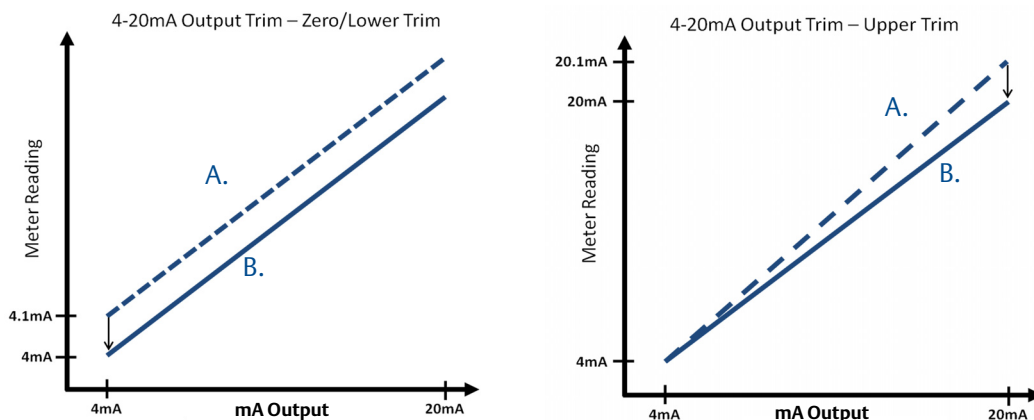

A. Before trim
B. After Trim

5.6.1 Performing Digital-to-Analog Trim (4-20mA Output Trim)

Note

If a resistor is added to the loop, ensure that the power supply is sufficient to power the transmitter to a 20 mA output with additional loop resistance. Refer to [Power supply for 4-20 mA HART](#) on page 63.

Performing a 4-20 mA output trim with a Field Communicator

From the *HOME* screen, enter the fast key sequence and follow the steps within the Field Communicator to complete the 4-20 mA output trim.

Device Dashboard Fast Keys	3, 4, 2, 1
-----------------------------------	------------




Performing a 4-20 mA output trim with AMS

Right click on the device and, under the *Method* drop down menu, move cursor over *Calibrate* and select **Analog Calibration**.

1. Select **Digital to Analog Trim**.
2. Follow the screen prompts to perform a 4-20 mA output trim.

Performing 4-20mA Output Trim using Local Operator Interface

Figure 5-6. 4-20mA output trim using Local Operator Interface

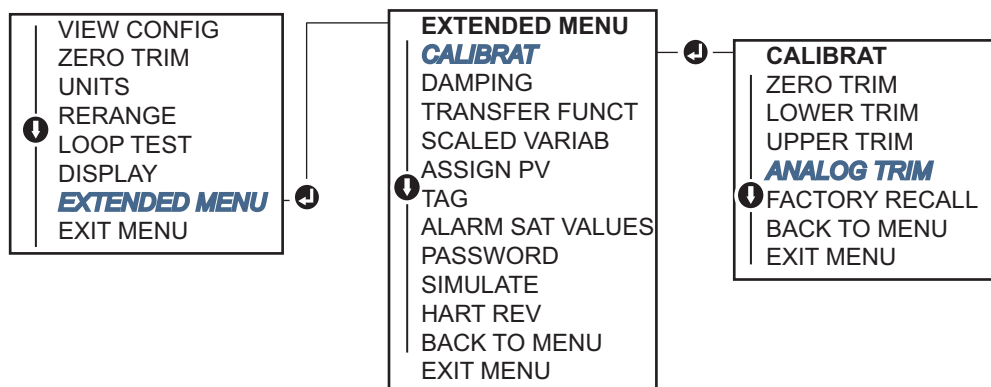

5.6.2 Performing Digital-to-Analog Trim (4-20mA Output Trim) using other scale

The Scaled 4-20 mA output Trim command matches the 4 and 20 mA points to a user selectable reference scale other than 4 and 20 mA (for example, 2 to 10 volts if measuring across a 500 Ω load, or 0 to 100 percent if measuring from a Distributed Control System (DCS)). To perform a scaled 4-20 mA output trim, connect an accurate reference meter to the transmitter and trim the output signal to scale, as outlined in the Output Trim procedure.

Performing a 4-20 mA output trim using other scale with a Field Communicator

From the *HOME* screen, enter the fast key sequence and follow the steps within the Field Communicator to complete the 4-20 mA output trim using other scale.

Device Dashboard Fast Keys	3, 4, 2, 2
-----------------------------------	------------

Performing a 4-20 mA output trim using other scale with AMS

Right click on the device and under the *Method* drop down menu, move cursor over *Calibrate* and select **Analog Calibration**.

1. Select *Scaled Digital to Analog Trim*
2. Follow screen prompts to perform a 4-20mA Output Trim.

5.6.3 Recalling Factory Trim—analog output

-  The Recall Factory Trim—Analog Output command allows the restoration of the as-shipped factory settings of the analog output trim. This command can be useful for recovering from an inadvertent trim, incorrect Plant Standard or faulty meter.

Recalling Factory Trim - analog output with a Field Communicator

From the *HOME* screen, enter the fast key sequence and follow the steps within the Field Communicator to complete the digital to analog trim using other scale.

Device Dashboard Fast Keys	3, 4, 3
-----------------------------------	---------

Recalling Factory Trim - analog output with AMS


Right click on the device and, under the *Method* drop down menu, move cursor over *Calibrate* and select **Restore Factory Calibration**.

1. Click **Next** to set the control loop to manual.
2. Select **Analog Output Trim** under *Select trim to recall* and click **Next**.
3. Follow screen prompts to recall analog output trim.

Recalling Factory Trim - analog output with Local Operator Interface

Reference [Figure 5-7](#) for LOI instructions.

Figure 5-7. Recall Factory Trim – analog output with Local Operator Interface

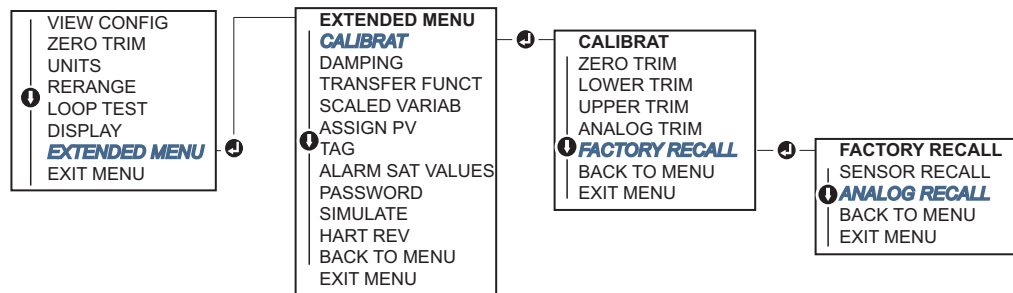

5.7 Switching HART Revision

Some systems are not capable of communicating with HART Revision 7 devices. The following procedures list how to change HART revisions between HART Revision 7 and HART Revision 5.

5.7.1 Switching HART revision with Generic Menu

If the HART configuration tool is not capable of communicating with a HART Revision 7 device, it should load a Generic Menu with limited capability. The following procedures allow for switching between HART Revision 7 and HART Revision 5 from a Generic Menu.

1. Locate “Message” field
 - a. To change to HART Revision 5, Enter: **HART5** in the message field
 - b. To change to HART Revision 7, Enter: **HART7** in the message field

5.7.2 Switching HART Revision with Field Communicator

From the HOME screen, enter the fast key sequence and follow steps within the Field Communicator to complete the HART revision change.

From the <i>HOME</i> screen, enter the fast key sequence	HART5	HART7
Device Dashboard Fast Keys	2, 2, 5, 2, 4	2, 2, 5, 2, 3

5.7.3 Switching HART Revision with AMS Device Manager

1. Click on *Manual Setup* and select *HART*
2. Select *Change HART Revision* then follow the on screen prompts.


Note

AMS Device Manager versions 10.5 or greater are compatible with HART Revision 7.

5.7.4 Switching HART revision with Local Operator Interface

Navigate to *HART REV* within the extended menu and select if either *HART REV 5* or *HART REV 7*. Use Figure 5-8 below to change HART Revision.

Figure 5-8. Change HART revision with Local Operator Interface

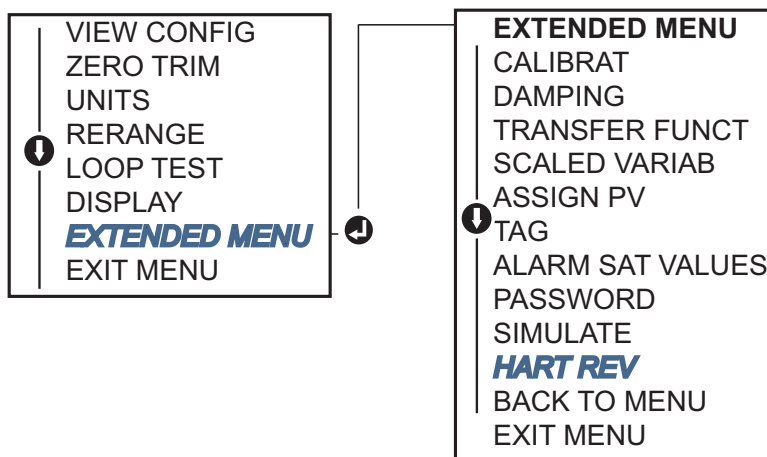

Section 6 Troubleshooting

Overview	page 83
Safety messages	page 83
Diagnostic messages	page 86
Disassembly procedures	page 89
Reassembly procedures	page 91

6.1 Overview

Table 6-1 provides summarized maintenance and troubleshooting suggestions for the most common operating problems.

If you suspect malfunction despite the absence of any diagnostic messages on the Field Communicator display, consider using Section 6.3 on page 86 to identify any potential problem.

6.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

6.2.1 Warnings

WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the approvals section of the 3051 reference manual for any restrictions associated with a safe installation.

- Before connecting a Field Communicator in an explosive atmosphere, ensure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- In an Explosion-Proof/Flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

- Install and tighten process connectors before applying pressure.

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

Table 6-1. Rosemount 3051 troubleshooting table for 4-20 mA output

Symptom	Corrective actions
Transmitter milliamp reading is zero	Verify terminal voltage is 10.5 to 42.4 Vdc at signal terminals
	Check power wires for reversed polarity
	Check that power wires are connected to signal terminals
	Check for open diode across test terminal
Transmitter Not Communicating with Field Communicator	Verify terminal voltage is 10.5 to 42.4 Vdc
	Check loop resistance, 250Ω minimum (PS voltage -transmitter voltage/loop current)
	Check that power wires are connected to signal terminals and not test terminals
	Verify clean DC Power to transmitter (Max AC noise 0.2 volts peak to peak)
	Verify the output is between 4 and 20 mA or saturation levels
	Have Field Communicator poll for all addresses
Transmitter milliamp reading is low or high	Verify applied pressure
	Verify 4 and 20 mA range points
	Verify output is not in alarm condition
	Perform analog trim
	Check that power wires are connected to the correct signal terminals (positive to positive, negative to negative) and not the test terminal
Transmitter will not respond to changes in applied pressure	Check impulse piping or manifold for blockage
	Verify applied pressure is between the 4 and 20 mA points
	Verify the output is not in alarm condition
	Verify transmitter is not in loop test mode
	verify transmitter is not in multidrop mode
	Check test equipment
Digital Pressure Variable reading is low or high	Check impulse piping for blockage or low fill in wet leg
	Verify transmitter is calibrated properly
	Check test equipment (verify accuracy)
	Verify pressure calculations for application
Digital Pressure Variable reading is erratic	Check application for faulty equipment in pressure line
	Verify transmitter is not reacting directly to equipment turning on/off
	Verify damping is set properly for application
Milliamp reading is erratic	Verify power source to transmitter has adequate voltage and current
	Check for external electrical interference
	Verify transmitter is properly grounded
	Verify shield for twisted pair is only grounded at one end

6.3 Diagnostic messages

Listed in the below sections are detailed table of the possible messages that will appear on either the LCD/LOI Display, a Field Communicator, or an AMS system. Use the tables below to diagnose particular status messages.

- Good
- Failed – fix now
- Maintenance – fix soon
- Advisory

Listed in the below sections are detailed tables of the possible messages that will appear on either: LCD/LOI Display, Field Communicator, or an AMS system.

6.3.1 Diagnostic message: failed - fix now

Table 6-2. Status: Failed – Fix now

Alert name	LCD screen	LOI screen	Problem	Recommended action
No Pressure Updates	NO P UPDATE	NO PRESS UPDATE	There are no pressure updates from the sensor to the electronics	1. Ensure the sensor cable connection to the electronics is tight. 2. Replace the pressure sensor.
Electronics Board Failure	FAIL BOARD	FAIL BOARD	A failure has been detected in the electronics circuit board	1. Replace the electronics board.
Critical Sensor Data Error	MEMRY ERROR	MEMORY ERROR	A user written parameter does not match the expected value	1. Confirm and correct all parameters listed in Device Information. 2. Perform a Device Reset. 3. Replace sensor module.
Critical Electronics Data Error			A user written parameter does not match the expected value	1. Confirm and correct all parameters listed in Device Information. 2. Perform a Device Reset. 3. Replace electronics board.
Sensor Failure	FAIL SENSOR	FAIL SENSOR	A failure has been detected in the pressure sensor	1. Replace the pressure sensor.
Incompatible Electronics and Sensor	XMTR MSMTCH	XMTR MSMTCH	The pressure sensor is incompatible with the attached electronics	1. Replace the electronics board or sensor with compatible hardware.

6.3.2 Diagnostic message: Maintenance - Fix Soon

Table 6-3. Status: Maintenance – fix soon

Alert name	LCD screen	LOI screen	Problem	Recommended action
No Temperature Updates	NO T UPDATE	NO TEMP UPDATE	There are no temperature updates from the sensor to the electronics	1. Ensure the sensor cable connection to the electronics is tight. 2. Replace the pressure sensor.
Pressure Out of Limits	PRES LIMITS	PRES OUT LIMITS	The pressure is either above or below the sensor limits	1. Check the transmitter pressure connection to ensure it is not plugged or the isolating diaphragms are not damaged. 2. Replace the pressure sensor.
Sensor Temperature Beyond Limits	TEMP LIMITS	TEMP OUT LIMITS	The sensor temperature has exceeded its safe operating range	1. Check the process and ambient conditions are within -85 to 194 °F (-65 to 90 °C). 2. Replace the pressure sensor.
Electronics Temperature Beyond Limits			The temperature of the electronics has exceeded its safe operating range.	1. Confirm electronics temperature is within limits of -85 to 194 °F (-65 to 90 °C). 2. Replace electronics board.
Power Advisory Diagnostic	POWER ADVISE	POWER ADVISE	The transmitter has detected a deviation of the terminal voltage outside of configured limits. This may indicate degraded electrical or loop integrity	1. Check the dc power supply to ensure power is correct, stable, and has minimal ripple. 2. Check loop wiring for degradation or improper grounding. 3. Remove the wiring compartment cover (considering hazardous location requirements) to check for presence or water or corrosion. Note If conditions have resumed to normal, clicking on Reset Alert will clear the alert
Electronics Board Parameter Error	MEMRY WARN (also in advisory)	MEMORY WARN (also in advisory)	A device parameter does not match the expected value. The error does not affect transmitter operation or analog output.	1. Replace the electronics board.
Configuration Buttons Operator Error	STUCK BUTTON	STUCK BUTTON	Device is not responding to button presses.	1. Check configuration buttons are not stuck. 2. Replace the electronics board.

6.3.3 Diagnostic message: Advisory

Table 6-4. Status: Advisory

Alert name	LCD screen	LOI screen	Problem	Recommended action
Non-Critical User Data Warning	MEMRY WARN	MEMORY WARN	A user written parameter does not match expected value	1. Confirm and correct all parameters listed in Device Information. 2. Perform a Device Reset. 3. Replace Electronics Board.
Sensor Parameter Warning			A user written parameter does not match expected value	1. Confirm and correct all parameters listed in Device Information. 2. Perform a Device Reset. 3. Replace pressure sensor.
Pressure Alert	PRESS ALERT	PRESSURE ALERT	The pressure alert diagnostic has gone beyond the configured trip points.	1. Verify that the process pressure is at an expected value. 2. Verify the pressure is beyond the trip points. 3. Modify the trip points or turn off alert.
Temperature Alert	TEMP ALERT	TEMP ALERT	The temperature alert diagnostic has detected that the temperature has gone beyond the configured trip points.	1. Verify that the process and environmental temperature is at an expected value. 2. Verify the temperature is beyond the trip points. 3. Modify the trip points or turn off alert.
LCD Display Update Failure	[If display is not updating]	[If display is not updating]	The LCD Display is not receiving updates from the pressure sensor.	1. Check the connection between the LCD and the circuit board. 2. Replace the LCD Display. 3. Replace the electronics board.
Configuration Changed	[none]	[none]	A recent change has been made the device by a secondary HART master such as a handheld device.	1. Verify that they configuration change of the device was intended and expected. 2. Clear this alert by selecting Clear Configuration Changed Status. 3. Connect a HART master such as AMS or similar which will automatically clear it.

Alert name	LCD screen	LOI screen	Problem	Recommended action
Analog Output Fixed	ANLOG FIXED	ANALOG FIXED	The analog output is fixed and does not represent the process measurement. This may be caused by other conditions in the device, or because the device has been set to loop test or multidrop mode	1. Take action on any other notifications from the device. 2. If the device is in loop test, and should no longer be, disable or momentarily remove power. 3. If the device is in multidrop mode and should not be, re-enable loop current by setting the polling address to 0.
Simulation Active	[none]	[none]	The device is in simulation mode and may not be reporting actual information	1. Verify that simulation is no longer required. 2. Disable simulation mode in service tools. 3. Perform a Device Reset.
Analog Output Saturated	ANLOG SAT	ANALOG SAT	The analog output is saturated either high or low due to the pressure either above or below the range values	1. Check the pressure applied to ensure it is between the 4-20mA points. 2. Check the transmitter pressure connection to make sure it is not plugged or isolating diaphragms are not damaged. 3. Replace the pressure sensor.

6.4 Disassembly procedures

 Do not remove the instrument cover in explosive atmospheres when the circuit is live.

6.4.1 Removing from service

Follow these steps:

1. Follow all plant safety rules and procedures.
2. Power down device.
3. Isolate and vent the process from the transmitter before removing the transmitter from service.
4. Remove all electrical leads and disconnect conduit.
5. Remove the transmitter from the process connection.

- a. The Rosemount 3051C transmitter is attached to the process connection by four bolts and two cap screws. Remove the bolts and screws and separate the transmitter from the process connection. Leave the process connection in place and ready for re-installation. Reference [Figure 3-4 on page 43](#) for coplanar flange.
 - b. The Rosemount 3051T transmitter is attached to the process by a single hex nut process connection. Loosen the hex nut to separate the transmitter from the process. Do not wrench on neck of transmitter. See warning in [“Inline process connection” on page 49](#).
6. Do not scratch, puncture, or depress the isolating diaphragms.
 7. Clean isolating diaphragms with a soft rag and a mild cleaning solution, and rinse with clear water.
 8. For the 3051C, whenever you remove the process flange or flange adapters, visually inspect the PTFE o-rings. Replace the o-rings if they show any signs of damage, such as nicks or cuts. Undamaged o-rings may be reused.

6.4.2 Removing terminal block

Electrical connections are located on the terminal block in the compartment labeled “FIELD TERMINALS.”

1. Remove the housing cover from the field terminal side.
2. Loosen the two small screws located on the assembly in the 9 o'clock and 5 o'clock positions relative to the top of the transmitter.
3. Pull the entire terminal block out to remove it.

6.4.3 Removing the electronics board

The transmitter electronics board is located in the compartment opposite the terminal side. To remove the electronics board see [Figure 4-1 on page 58](#) and perform following procedure:

1. Remove the housing cover opposite the field terminal side.
2. If you are disassembling a transmitter with a LCD/LOI Display, loosen the two captive screws that are visible (See [Figure 4.3 LCD Display](#) for screw locations). the meter display. The two screws anchor the LCD/LOI Display to the electronics board and the electronics board to the housing.

Note:

The electronics board is electrostatically sensitive; observe handling precautions for static-sensitive components

3. Using the two captive screws, slowly pull the electronics board out of the housing. The sensor module ribbon cable holds the electronics board to the housing. Disengage the ribbon cable by pushing the connector release.

Note:

If an LCD/LOI is installed, use caution as there is an electronic pin connector that interfaces between the LCD/LOI and electronics board.

6.4.4 Removing sensor module from the electronics housing

1. Remove the electronics board. Refer to “[Removing the electronics board](#)” on page 90.

Important

To prevent damage to the sensor module ribbon cable, disconnect it from the electronics board before you remove the sensor module from the electrical housing.

2. Carefully tuck the cable connector completely inside of the internal black cap.

Note

Do not remove the housing until after you tuck the cable connector completely inside of the internal black cap. The black cap protects the ribbon cable from damage that can occur when you rotate the housing.

3. Using a $\frac{5}{64}$ -inch hex wrench, loosen the housing rotation set screw one full turn.
4. Unscrew the module from the housing, making sure the black cap on the sensor module and sensor cable do not catch on the housing.

6.5 Reassembly procedures

1. Inspect all cover and housing (non-process wetted) O-rings and replace if necessary. Lightly grease with silicone lubricant to ensure a good seal.
2. Carefully tuck the cable connector completely inside the internal black cap. To do so, turn the black cap and cable counterclockwise one rotation to tighten the cable.
3. Lower the electronics housing onto the module. Guide the internal black cap and cable on the sensor module through the housing and into the external black cap.
4. Turn the module clockwise into the housing.

Important

Make sure the sensor ribbon cable and internal black cap remain completely free of the housing as you rotate it. Damage can occur to the cable if the internal black cap and ribbon cable become hung up and rotate with the housing.

-  5. Thread the housing completely onto the sensor module. The housing must be no more than one full turn from flush with the sensor module to comply with explosion proof requirements.
6. Tighten the housing rotation set screw using a $\frac{5}{64}$ -inch hex wrench.

6.5.1 Attaching electronics board

1. Remove the cable connector from its position inside of the internal black cap and attach it to the electronics board.
2. Using the two captive screws as handles, insert the electronics board into the housing. Make sure the power posts from the electronics housing properly engage the receptacles on the electronics board. Do not force. The electronics board should slide gently on the connections.
3. Tighten the captive mounting screws.
-  4. Replace the electronics housing cover. The transmitter covers must be engaged metal-to-metal to ensure a proper seal and to meet Explosion-Proof requirements.

6.5.2 Installing terminal block

-  1. Gently slide the terminal block into place, making sure the two power posts from the electronics housing properly engage the receptacles on the terminal block.
2. Tighten the captive screws.
3. Replace the electronics housing cover. The transmitter covers must be fully engaged to meet Explosion-Proof requirements.

6.5.3 Reassembling the 3051C process flange

1. Inspect the sensor module PTFE o-rings. Undamaged o-rings may be reused. Replace o-rings that show any signs of damage, such as nicks, cuts, or general wear.

Note

If you are replacing the o-rings, be careful not to scratch the o-ring grooves or the surface of the isolating diaphragm when removing the damaged o-rings.

2. Install the process connection. Possible options include:

- a. Coplanar Process Flange:
 - Hold the process flange in place by installing the two alignment screws to finger tightness (screws are not pressure retaining). Do not overtighten as this will affect module-to-flange alignment.
 - Install the four 1.75-in. flange bolts by finger tightening them to the flange.
- b. Coplanar Process Flange with Flange Adapters:
 - Hold the process flange in place by installing the two alignment screws to finger tightness (screws are not pressure retaining). Do not overtighten as this will affect module-to-flange alignment.
 - Hold the flange adapters and adapter o-rings in place while installing (in the desired of the four possible process connection spacing configurations) using four 2.88-inch bolts to mount securely to the coplanar flange. For gage pressure configurations, use two 2.88-inch bolts and two 1.75-inch bolts
- c. Manifold:
 - Contact the manifold manufacturer for the appropriate bolts and procedures.
3. Tighten the bolts to the initial torque value using a crossed pattern. See [Table 6-5 on page 93](#) for appropriate torque values.
4. Using same cross pattern, tighten bolts to final torque values seen in [Table 6-5 on page 93](#).

Table 6-5. Bolt installation torque values

Bolt material	Initial torque value	Final torque value
CS-ASTM-A445 Standard	300 in.-lb. (34 N-m)	650 in.-lb. (73 N-m)
316 SST—Option L4	150 in.-lb. (17 N-m)	300 in.-lb. (34 N-m)
ASTM-A-19 B7M—Option L5	300 in.-lb. (34 N-m)	650 in.-lb. (73 N-m)
ASTM-A-193 Class 2, Grade B8M—Option L8	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)

Note

If you replaced the PTFE sensor module o-rings, re-torque the flange bolts after installation to compensate for cold flow.

Note

For Range 1 transmitters: after replacing o-rings and re-installing the process flange, expose the transmitter to a temperature of 185 °F (85 °C) for two hours. Then re-tighten the flange bolts in a cross pattern, and again expose the transmitter to a temperature of 185 °F (85 °C) for two hours before calibration.

6.5.4 Installing drain/vent valve

1. Apply sealing tape to the threads on the seat. Starting at the base of the valve with the threaded end pointing toward the installer, apply five clockwise turns of sealing tape.
2. Tighten the drain/vent valve to 250 in-lb. (28.25 N-m).
3. Take care to place the opening on the valve so that process fluid will drain toward the ground and away from human contact when the valve is opened.

Section 7 Safety Instrumented Systems Requirements

Safety Instrumented Systems (SIS) Certification page 95

7.1 Safety Instrumented Systems (SIS) Certification

The safety-critical output of the 3051 is provided through a two-wire, 4 - 20 mA signal representing pressure. The 3051 safety certified pressure transmitter is certified to: Low Demand; Type B.

SIL 2 for random integrity @ HFT=0

SIL 3 for random integrity @ HFT=1

SIL 3 for systematic integrity

7.1.1 3051 safety certified identification

All 3051 transmitters must be identified as safety certified before installing into SIS systems.

To identify a safety certified 3051C, 3051T, 3051L:

1. Check Namur Software Revision located on the metal device tag. "SW _._._".

Namur Software Revision Number

SW⁽¹⁾ 1.0.x - 1.4.x

(1) *Namur Software Revision: Located on the metal device tag*

2. Verify that option code QT is included and "TR" is not included in the transmitter model code.

7.1.2 Installation in SIS applications

Installations are to be performed by qualified personnel. No special installation is required in addition to the standard installation practices outlined in this document. Always ensure a proper seal by installing the electronics housing cover(s) so that metal contacts metal.

Environmental and operational limits are available in [Appendix A: Specifications and Reference Data](#)

The loop should be designed so the terminal voltage does not drop below 10.5 Vdc when the transmitter output is set to 23 mA.

Position the security switch to the (🔒) position to prevent accidental or deliberate change of configuration data during normal operation.

7.1.3 Configuring in SIS applications

Use any HART capable configuration tool to communicate with and verify configuration of the 3051.

Note

Transmitter output is not safety-rated during the following: configuration changes, multidrop, and loop test. Alternative means should be used to ensure process safety during transmitter configuration and maintenance activities.

Damping


User-selected damping will affect the transmitters ability to respond to changes in the applied process. The *damping value + response time* must not exceed the loop requirements.

Reference “Damping” on page 19 to change damping value.

Alarm and saturation levels

DCS or safety logic solver should be configured to match transmitter configuration. [Figure 7-1](#) identifies the three alarm levels available and their operation values.

Figure 7-1. Alarm levels

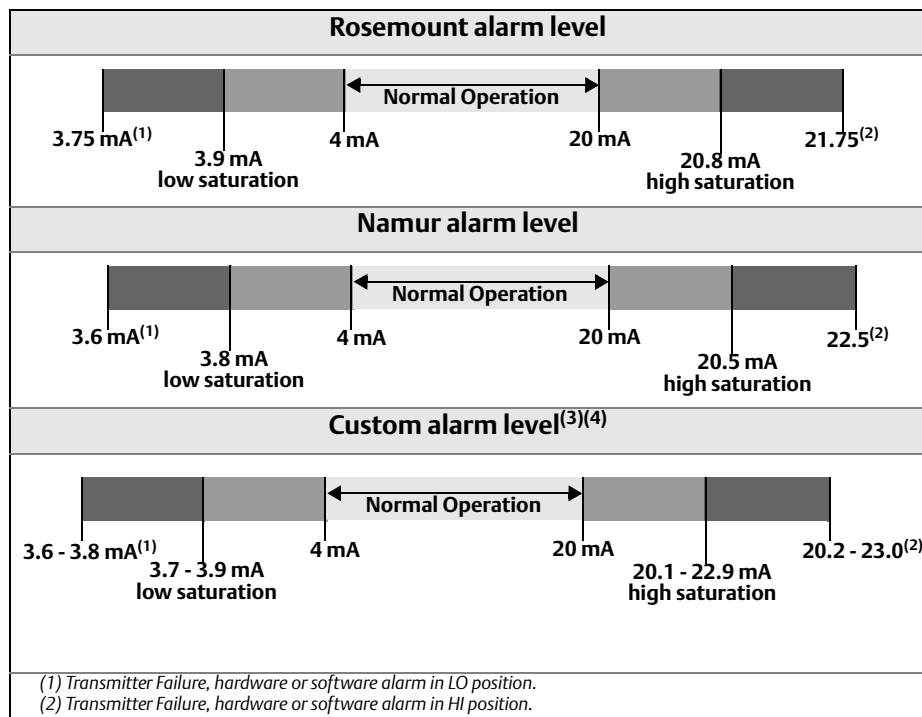

7.1.4 3051 SIS operation and maintenance

Proof test

The following proof tests are recommended.

In the event that an error is found in the safety and functionality, proof test results and corrective actions taken can be documented at http://rosemount.d1asia.ph/rose-mount/safety/ReportAFailure_newweb.asp. All proof test procedures must be carried out by qualified personnel.

Use “Field Communicator fast keys” on page 220 to perform a Loop Test, Analog Output Trim, or Sensor Trim. Security switch should be in the (🔓) position during proof test execution and repositioned in the (🔒) position after execution.

Simple proof test

The simple suggested proof test consists of a power cycle plus reasonability checks of the transmitter output. Reference the FMEDA Report for percent of possible DU failures in the device.

FMEDA report can be found at: www.rosemount.com/safety

Required tools: Field Communicator and mA meter.

1. Bypass the safety function and take appropriate action to avoid a false trip.
2. Use HART communications to retrieve any diagnostics and take appropriate action.
3. Send a HART command to the transmitter to go to the high alarm current output and verify that the analog current reaches that value⁽¹⁾. See [2.10.1: Verifying alarm level](#)
4. Send a HART command to the transmitter to go to the low alarm current output and verify that the analog current reaches that value⁽¹⁾.
5. Remove the bypass and otherwise restore the normal operation.
6. Place the Security switch in the () position.

Comprehensive proof test

The comprehensive proof test consists of performing the same steps as the simple suggested proof test but with a two point calibration of the pressure sensor in place of the reasonability check. Reference the FMEDA Report for percent of possible DU failures in the device.

Required tools: Field Communicator and pressure calibration equipment.

1. Bypass the safety function and take appropriate action to avoid a false trip.
2. Use HART communications to retrieve any diagnostics and take appropriate action.
3. Send a HART command to the transmitter to go to the high alarm current output and verify that the analog current reaches that value⁽¹⁾. See [2.10.1: Verifying alarm level](#)
4. Send a HART command to the transmitter to go to the low alarm current output and verify that the analog current reaches that value⁽²⁾.
5. Perform a two-point calibration of the sensor (see section 5.5 Trim the pressure signal) over the full working range and verify the current output at each point.
6. Remove the bypass and otherwise restore the normal operation.
7. Place the Security switch in the () position.

Note

- The user determines the proof test requirements for impulse piping.
 - Automatic diagnostics are defined for the corrected % DU: The tests performed internally by the device during runtime without requiring enabling or programming by the user.
-

(1) This tests for possible quiescent current related failures.

(2) This tests for compliance voltage problems such as a low loop power supply voltage or increased wiring distance. This also tests for other possible failures.

Calculation of average probability of failure on demand (PFD_{AVG})

PFD_{AVG} calculation can be found in the FMEDA report located at: www.rosemount.com/safety.

7.1.5 Inspection

Visual inspection

Not required

Special tools

Not required

Product repair

The 3051 is repairable by major component replacement.

All failures detected by the transmitter diagnostics or by the proof-test must be reported.

Feedback can be submitted electronically at

http://rosemount.d1asia.ph/rosemount/safety/ReportAFailure_newweb.asp

All product repair and part replacement should be performed by qualified personnel.

3051 SIS reference

The 3051 must be operated in accordance to the functional and performance specifications provided in [Appendix A: Specifications and Reference Data](#)

Failure rate data

The FMEDA report includes failure rates and common cause Beta factor estimates.

The report is available at www.rosemount.com/safety.

Failure values

Safety accuracy: $\pm 2.0\%$ Transmitter response time: 1.5 seconds Self-diagnostics Test: At least once every 60 minutes

Product life

50 years - based on worst case component wear-out mechanisms - not based on wear-out of process wetted materials

Report any safety related product information at:

http://rosemount.d1asia.ph/rosemount/safety/ReportAFailure_newweb.asp

Appendix A Specifications and Reference Data

Performance specifications	page 101
Functional specifications	page 106
Physical specifications	page 111
Dimensional drawings	page 115
Ordering Information	page 128
Options	page 166
Spare parts	page 171

A.1 Performance specifications

A.1.1 Conformance to specification ($\pm 3\sigma$ (Sigma))

Technology leadership, advanced manufacturing techniques and statistical process control ensure specification conformance to at least $\pm 3\sigma$.

A.1.2 Reference accuracy

Stated reference accuracy equations include terminal based linearity, hysteresis, and repeatability.

Models	Standard 3051	Enhanced 3051
3051C Ranges 2-4	$\pm 0.065\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.015 + 0.005 \left(\frac{\text{URL}}{\text{Span}} \right) \right] \% \text{ of Span}$	$\pm 0.04\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.015 + 0.005 \left(\frac{\text{URL}}{\text{Span}} \right) \right] \% \text{ of Span}$
Range 1	$\pm 0.10\%$ of span For spans less than 15:1, accuracy = $\pm \left[0.025 + 0.005 \left(\frac{\text{URL}}{\text{Span}} \right) \right] \% \text{ of Span}$	$\pm 0.10\%$ of span For spans less than 15:1 accuracy = $\pm \left[0.025 + 0.005 \left(\frac{\text{URL}}{\text{Span}} \right) \right] \% \text{ of Span}$
Range 0 (CD)	$\pm 0.10\%$ of span For spans less than 2:1 accuracy = $\pm 0.05\%$ of URL	$\pm 0.10\%$ of span For spans less than 2:1 accuracy = $\pm 0.05\%$ of URL

Ranges 5	$\pm 0.065\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.015 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$	$\pm 0.065\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.015 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$
3051CA Ranges 1-4	$\pm 0.065\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$	$\pm 0.04\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$
3051T Ranges 1-4	$\pm 0.065\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$	$\pm 0.04\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$
Range 5	$\pm 0.075\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$	$\pm 0.075\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$
3051L Ranges 2-4	$\pm 0.075\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$	$\pm 0.075\%$ of span For spans less than 10:1 accuracy = $\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$
3051L Range 1	$\pm 0.10\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$	$\pm 0.10\%$ of span For spans less than 10:1, accuracy = $\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$

A.1.3 Flow performance - flow reference accuracy

2051CFA Annubar Flowmeter		
Ranges 2-3		±2.00% of Flow Rate at 5:1 flow turndown
2051CFC Compact Orifice Flowmeter – Conditioning Option C		
Ranges 2-3	$\beta = 0.4$	±2.25% of Flow Rate at 5:1 flow turndown
	$\beta = 0.65$	±2.45% of Flow Rate at 5:1 flow turndown
2051CFC Compact Orifice Flowmeter – Orifice Type Option P ⁽¹⁾		
Ranges 2-3	$\beta = 0.4$	±2.50% of Flow Rate at 5:1 flow turndown
	$\beta = 0.65$	±2.50% of Flow Rate at 5:1 flow turndown
2051CFP Integral Orifice Flowmeter		
	$\beta < 0.1$	±3.10% of Flow Rate at 5:1 flow turndown
Ranges 2-3	$0.1 < \beta < 0.2$	±2.75% of Flow Rate at 5:1 flow turndown
	$0.2 < \beta < 0.6$	±2.25% of Flow Rate at 5:1 flow turndown
	$0.6 < \beta < 0.8$	±3.00% of Flow Rate at 5:1 flow turndown

(1) For smaller line sizes, see Rosemount Compact Orifice

A.1.4 Total performance

Total Performance is based on combined errors of reference accuracy, ambient temperature effect, and static pressure effect at normal operating conditions (70% of span typical reading, 740 psi (51 bar) line pressure).


For ±50 °F (28 °C) temperature changes; 0-100% relative humidity, from 1:1 to 5:1 rangedown

Models	3051	Enhanced 3051
	Standard	
3051C Ranges 2-5	±0.15% of span	± 0.14% of span
3051T Ranges 1-4	±0.15% of span	± 0.14% of span

A.1.5 Long term stability

Models	Long Term Stability (for 3051 and enhanced 3051)
3051C Ranges 2-5	$\pm 0.125\%$ of URL for 5 years $\pm 50^\circ\text{F}$ (28°C) temperature changes, and up to 1000 psi (6.9 MPa) line pressure.
3051CD, 3051CG Low/Draft Range Ranges 0-1	$\pm 0.2\%$ of URL for 1 year
3051CA Low Range Range 1	$\pm 0.125\%$ of URL for 5 years $\pm 50^\circ\text{F}$ (28°C) temperature changes, and up to 1000 psi (6.9 MPa) line pressure.
3051T Ranges 1-5	$\pm 0.125\%$ of URL for 5 years $\pm 50^\circ\text{F}$ (28°C) temperature changes, and up to 1000 psi (6.9 MPa) line pressure.

A.1.6 Dynamic performance

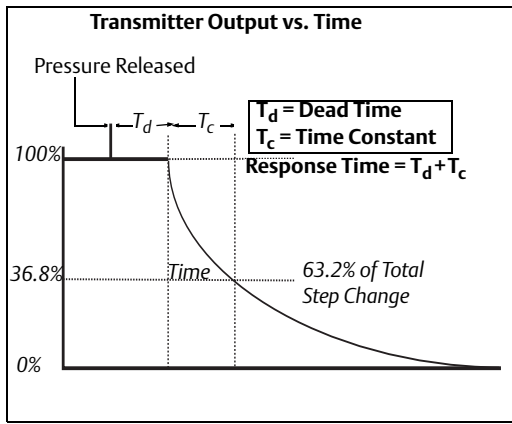4 - 20 mA HART ⁽¹⁾		Typical HART Transmitter Response Time
Total Response Time ($T_d + T_c$) ⁽²⁾ :		 Transmitter Output vs. Time Pressure Released 100% 36.8% 0% Time 63.2% of Total Step Change $T_d = \text{Dead Time}$ $T_c = \text{Time Constant}$ $\text{Response Time} = T_d + T_c$
3051C, Ranges 2-5:	100 ms	
Range 1:	255 ms	
Range 0:	700 ms	
3051T: 3051L:	100 ms See Instrument Toolkit®	
Dead Time (T_d)	45 ms (nominal)	
Update Rate	22 times per second	
(1) Dead time and update rate apply to all models and ranges; analog output only		
(2) Nominal total response time at 75°F (24°C) reference conditions.		

A.1.7 Line pressure effect per 1000 psi (6,9 MPa)

For line pressures above 2000 psi (13,7 MPa) and Ranges 4-5, see user manual	
Models	Line Pressure Effect (for 3051 and enhanced 3051)
3051CD, 3051CF	Zero Error
Ranges 2-3	$\pm 0.05\%$ of URL/1000 psi (68.9 bar) for line pressures from 0 to 2000 psi (0 to 13.7 MPa)
Range 1	$\pm 0.25\%$ of URL/1000 psi (68.9 bar)
Range 0	$\pm 0.125\%$ of URL/100 psi (6.89 bar)
	Span Error
Ranges 2-3	$\pm 0.1\%$ of reading/1000 psi (68.9 bar)
Range 1	$\pm 0.4\%$ of reading/1000 psi (68.9 bar)
Range 0	$\pm 0.15\%$ of reading/100 psi (6.89 bar)

A.1.8 Ambient temperature effect per 50 °F (28 °C)

Models	Ambient Temperature Effect (for 3051 and enhanced 3051)
3051C	
Ranges 2-5	$\pm(0.0125\% \text{ URL} + 0.0625\% \text{ span})$ from 1:1 to 5:1 $\pm(0.025\% \text{ URL} + 0.125\% \text{ span})$ from 5:1 to 150:1
Range 1	$\pm(0.1\% \text{ URL} + 0.25\% \text{ span})$ from 1:1 to 30:1
Range 0	$\pm(0.25\% \text{ URL} + 0.05\% \text{ span})$ from 1:1 to 30:1
3051CA	
Ranges 1-4	$\pm(0.025\% \text{ URL} + 0.125\% \text{ span})$ from 1:1 to 30:1 $\pm(0.035\% \text{ URL} + 0.125\% \text{ span})$ from 30:1 to 150:1
3051T	
Range 2-4	$\pm(0.025\% \text{ URL} + 0.125\% \text{ span})$ from 1:1 to 30:1 $\pm(0.035\% \text{ URL} + 0.125\% \text{ span})$ from 30:1 to 150:1
Range 1	$\pm(0.025\% \text{ URL} + 0.125\% \text{ span})$ from 1:1 to 10:1 $\pm(0.05\% \text{ URL} + 0.125\% \text{ span})$ from 10:1 to 150:1
Range 5	$\pm(0.1\% \text{ URL} + 0.15\% \text{ span})$
3051L	See Instrument Toolkit software.

A.1.9 Mounting position effects

Models	Mounting Position Effects (for 3051 and enhanced 3051)
3051C	Zero shifts up to $\pm 1.25 \text{ inH}_2\text{O}$ (3.11 mbar), which can be calibrated out. No span effect.
3051CA, 3051T	Zero shifts up to $2.5 \text{ inH}_2\text{O}$ (6.22 mbar), which can be calibrated out. No span effect.
3051L	With liquid level diaphragm in vertical plane, zero shift of up to $1 \text{ inH}_2\text{O}$ (2.49 mbar). With diaphragm in horizontal plane, zero shift of up to $5 \text{ inH}_2\text{O}$ (12.43 mbar) plus extension length on extended units. All zero shifts can be calibrated out. No span effect.

A.1.10 Vibration effect

Less than $\pm 0.1\%$ of URL when tested per the requirements of IEC60770-1: 1999 field or pipeline with high vibration level (10-60 Hz 0.21 mm displacement peak amplitude / 60-2000 Hz 3g).

A.1.11 Power supply effect

Less than $\pm 0.005\%$ of calibrated span per volt.

A.1.12 Electromagnetic compatibility (EMC)

Meets all relevant requirements of EN 61326 and Namur NE-21.

A.1.13 Transient protection (option code T1)

Meets IEEE C62.41, Category Location B

6 kV crest (0.5 ms - 100 kHz)
3 kA crest (8×20 microseconds)
6 kV crest (1.2×50 microseconds)

A.2 Functional specifications

A.2.1 Service

Liquid, gas, and vapor applications

A.2.2 Range and sensor limits

Table 1. 3051CD, 3051CG, 3051CF, and 3051L range and sensor limits

Range	Minimum Span	Range and Sensor Limits				
	3051CD ⁽¹⁾ , 3051CG, 3051CF, 3051L	Upper (URL)	Lower (LRL)			
			3051CD Differential 3051CF Flowmeters	3051CG Gage	3051L Differential	3051L Gage
0	0.1 inH ₂ O (0,25 mbar)	3.0 inH ₂ O (7,47 mbar)	-3.0 inH ₂ O (-7,47 mbar)	NA	NA	NA
1	0.5 inH ₂ O (1,2 mbar)	25 inH ₂ O (62,3 mbar)	-25 inH ₂ O (-62,1 mbar)	-25 inH ₂ O (-62,1 mbar)	NA	NA
2	1.7 inH ₂ O (4,2 mbar)	250 inH ₂ O (0,62 bar)	-250 inH ₂ O (-0,62 bar)	-250 inH ₂ O (-0,62 bar)	-250 inH ₂ O (-0,62 bar)	-250 inH ₂ O (-0,62 bar)
3	6.7 inH ₂ O (16,7 mbar)	1000 inH ₂ O (2,49 bar)	-1000 inH ₂ O (-2,49 bar)	0.5 psia (34,5 mbar abs)	-1000 inH ₂ O (-2,49 bar)	0.5 psia (34,5 mbar abs)
4	2.0 psi (137,7 mbar)	300 psi (20,6 bar)	-300 psi (-20,6 bar)	0.5 psia (34,5 mbar abs)	-300 psi (-20,6 bar)	0.5 psia (34,5 mbar abs)
5	13.3 psi (917,0 bar)	2000 psi (137,9 bar)	-2000 psi (-137,9 bar)	0.5 psia (34,5 mbar abs)	NA	NA

(1)Range 0 only available with 3051CD. Rang 1 only available with 3051CD, 3051CG, or 3051CF. Range 5 not available with 3051L Differential and 3051L Gage.

Table 2. 3051CA and 3051T range and sensor limits

Range	3051CA			Range	3051T			
	Minimum Span	Range and Sensor Limits			Minimum Span	Range and Sensor Limits		Lower ⁽¹⁾ (LRL) (Gage)
		Upper (URL)	Lower (LRL)			Upper (URL)	Lower (LRL)	
1	0.3 psia (20,7 mbar)	30 psia (2,07 bar)	0 psia (0 bar)	1	0.3 psi (20,6 mbar)	30 psi (2,07 bar)	0 psia (0 bar)	-14.7 psig (-1,01 bar)
2	1 psia (68,9 mbar)	150 psia (10,3 bar)	0 psia (0 bar)	2	1 psi (0,068 bar)	150 psi (10,3 bar)	0 psia (0 bar)	-14.7 psig (-1,01 bar)
3	5.3 psia (367,7 mbar)	800 psia (55,2 bar)	0 psia (0 bar)	3	5.3 psi (0,36 bar)	800 psi (55,2 bar)	0 psia (0 bar)	-14.7 psig (-1,01 bar)
4	26.7 psia (1,84 bar)	4000.00 psia (275,8 bar)	0 psia (0 bar)	4	26.6 psi (1,83 bar)	4000 psi (275,8 bar)	0 psia (0 bar)	-14.7 psig (-1,01 bar)
				5	2000 psi (137,9 bar)	10000 psi (689,4 bar)	0 psia (0 bar)	-14.7 psig (-1,01 bar)

(1)Assumes atmospheric pressure of 14.7 psig.

A.3 4–20 mA (output code A)


Power supply

External power supply required. Standard transmitter (4-20mA) operates on 10.5-42.4 Vdc with no load.

Load limitations

Maximum loop resistance is determined by the voltage level of the external power supply described by:

$$\text{Maximum Loop Resistance} = 43.5 * (\text{Power Supply Voltage} - 10.5)$$

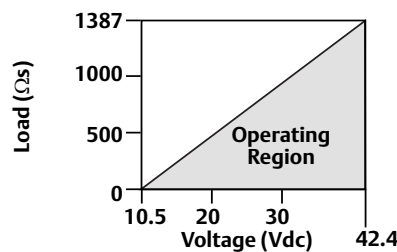

The Field Communicator requires a minimum loop resistance of 250Ω for communication.

For CSA approval, power supply must not exceed 42.4 V.

Indication

Optional two line LCD/LOI Display

Zero and Span adjustment requirements (HART)

Zero and span values can be set anywhere within the range limits stated in [Table 1](#) and [Table 2](#).

Span must be greater than or equal to the minimum span stated in [Table 1](#) and [Table 2](#).

Output

Two-wire 4-20mA, user selectable for linear or square root output. Digital process variable superimposed on 4-20 mA signal, available to any host that conforms to HART protocol.

The enhanced 3051 comes with Selectable HART Revisions. Digital communications based on HART Revision 5 (default) or Revision 7 (option code HR7) protocol can be selected. The HART revision can be switched in the field using any HART based configuration tool or the optional local operator interface (LOI).

Power Advisory Diagnostics

Power Advisory Diagnostics proactively detect and notify you of degraded electrical loop integrity. Example loop problems that can be detected include water in the terminal compartment, corrosion of terminals, improper grounding, and unstable power supplies.

The Power Advisory Diagnostic can be monitored via HART Alert or Analog Alarm. The monitoring action is set within the Device Dashboard. Troubleshooting information is available within the Device Dashboard when the diagnostic is triggered.

Local Operator Interface

The LOI utilizes a 2 menu display with internal and external configuration buttons. Internal buttons are always configured for Local Operator Interface. External Buttons can be ordered and configured as either LOI, (option code M4), Analog Zero and Span (option code D4) or Digital Zero Trim (option code DZ). See [Section D: Local Operator Interface](#) for menu.

A.3.1 Overpressure Limits

Rosemount 3051CD/CG/CF

- Range 0: 750 psi (51,7 bar)
- Range 1: 2000 psig (137,9 bar)
- Ranges 2-5: 3626 psig (250 bar)
4500 psig (310,3 bar) for option code P9

Rosemount 3051CA

- Range 1: 750 psia (51,7 bar)
- Range 2: 1500 psia (103,4 bar)
- Range 3: 1600 psia (110,3 bar)
- Range 4: 6000 psia (413,7 bar)

Rosemount 3051TG/TA

- Range 1: 750 psi (51,7 bar)
- Range 2: 1500 psi (103,4 bar)
- Range 3: 1600 psi (110,3 bar)
- Range 4: 6000 psi (413,7 bar)
- Range 5: 15000 psi (1034,2 bar)

For 3051L or Level Flange Option Codes FA, FB, FC, FD, FP, and FQ, limit is 0 psia to the flange rating or sensor rating, whichever is lower.

Table 3. 3051L and level flange rating limits

Standard	Type	CS Rating	SST Rating
ANSI/ASME	Class 150	285 psig	275 psig
ANSI/ASME	Class 300	740 psig	720 psig
ANSI/ASME	Class 600	1480 psig	1440 psig
<i>At 100 °F (38 °C), the rating decreases with increasing temperature, per ANSI/ASME B16.5.</i>			
DIN	PN 10-40	40 bar	40 bar

Table 3. 3051L and level flange rating limits

Standard	Type	CS Rating	SST Rating
DIN	PN 10/16	16 bar	16 bar
DIN	PN 25/40	40 bar	40 bar
At 248 °F (120 °C), the rating decreases with increasing temperature, per DIN 2401.			

A.3.2 Static pressure limit

Rosemount 3051CD Only

Operates within specifications between static line pressures of 0.5 psia and 3626 psig (4500 psig (310, 3 bar) for Option Code P9).

Range 0: 0.5 psia and 750 psig (3, 4 bar and 51, 7 bar)

Range 1: 0.5 psia and 2000 psig (3, 4 bar and 137, 9 bar)

A.3.3 Burst pressure limits

3051C, 3051CF coplanar or traditional process flange

10000 psig (69 MPa)

3051T In-line

Ranges 1-4: 11000 psi (75,8 MPa)

Range 5: 26000 psig (179 MPa)

A.3.4 Failure mode alarm

If self-diagnostics detect a sensor or microprocessor failure, the analog signal is driven either high or low to alert the user. High or low failure mode is user-selectable with a switch on the transmitter. The values to which the transmitter drives its output in failure mode depend on whether it is factory-configured to standard, NAMUR-compliant, or custom levels (see Alarm Configuration below). The values for each are as follows:

	High alarm	Low alarm
Default	≥ 21.75 mA	≤ 3.75 mA
NAMUR compliant ⁽¹⁾	≥ 22.5 mA	≤ 3.6 mA
Custom levels ⁽²⁾	20.2 - 23.0 mA	3.6 - 3.8 mA

(1) Analog output levels are compliant with NAMUR recommendation NE 43, see option codes C4 or C5.

(2) Low alarm must be 0.1 mA less than low saturation and high alarm must be 0.1 mA greater than high saturation.

A.3.5 Temperature limits

Ambient

–40 to 185 °F (–40 to 85 °C)

With LCD Display: –40 to 175 °F (–40 to 80 °C)

Storage⁽¹⁾

–50 to 230 °F (–46 to 110 °C)

With LCD Display: –40 to 185 °F (–40 to 85 °C)

(1) If storage temperature is above 85°C, perform a Sensor Trim prior to installation.

Process

At atmospheric pressures and above. See Table 4.

Table 4. 3051 process temperature limits

3051CD, 3051CG, 3051CF, 3051CA	
Silicone Fill Sensor ⁽¹⁾	
with Coplanar Flange	–40 to 250 °F (–40 to 121 °C) ⁽²⁾
with Traditional Flange	–40 to 300 °F (–40 to 149 °C) ⁽²⁾⁽³⁾
with Level Flange	–40 to 300 °F (–40 to 149 °C) ⁽²⁾
with 305 Integral Manifold	–40 to 300 °F (–40 to 149 °C) ⁽²⁾
Inert Fill Sensor ⁽¹⁾	–32 to 185 °F (–18 to 85 °C) ⁽⁴⁾⁽⁵⁾
3051T (process fill fluid)	
Silicone Fill Sensor ⁽¹⁾	–40 to 250 °F (–40 to 121 °C) ⁽²⁾
Inert Fill Sensor ⁽¹⁾	–22 to 250 °F (–30 to 121 °C) ⁽²⁾
3051L low-side temperature limits	
Silicone Fill Sensor ⁽¹⁾	–40 to 250 °F (–40 to 121 °C) ⁽²⁾
Inert Fill Sensor ⁽¹⁾	–40 to 185 °F (–18 to 85 °C) ⁽²⁾
3051L high-side temperature limits (process fill fluid)	
Syltherm [®] XLT	–100 to 300 °F (–73 to 149 °C)
D.C. Silicone 704 [®]	32 to 400 °F (0 to 205 °C)
D.C. Silicone 200	–40 to 400 °F (–40 to 205 °C)
Inert	–50 to 320 °F (–45 to 177 °C)
Glycerin and Water	5 to 200 °F (–18 to 93 °C)
Neobee M-20	5 to 400 °F (–18 to 205 °C)
Propylene Glycol and Water	5 to 200 °F (–18 to 93 °C)

(1) Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio.

(2) 220 °F (104 °C) limit in vacuum service; 130 °F (54 °C) for pressures below 0.5 psia.

(3) 3051CD0 process temperature limits are –40 to 212 °F (–45 to 100 °C).

(4) 160 °F (71 °C) limit in vacuum service.

(5) Not available for 3051CA.

A.3.6 Humidity limits

0–100% relative humidity

A.3.7 Turn-on time

Performance within specifications less than 2.0 seconds after power is applied to the transmitter

A.3.8 Volumetric displacement

Less than 0.005 in³ (0,08 cm³)

A.3.9 Damping

4-20 mA HART

Analog output response to a step input change is user-enterable from 0.0 to 60 seconds for one time constant. This software damping is in addition to sensor module response time.

A.4 Physical specifications

A.4.1 Process connections

Rosemount 3051C

$\frac{1}{4}$ –18 NPT on 2 $\frac{1}{8}$ -in. centers

$\frac{1}{2}$ –14 NPT on 2-, 2 $\frac{1}{8}$ -, or 2 $\frac{1}{4}$ -in. centers

Rosemount 3051L

High pressure side: 2-, 3-, or 4-in., ASME B 16.5 (ANSI) Class 150, 300 or 600 flange; 50, 80 or 100 mm, PN 40 or 10/16 flange

Low pressure side: $\frac{1}{4}$ –18 NPT on flange $\frac{1}{2}$ –14 NPT on adapter

Rosemount 3051T

$\frac{1}{2}$ –14 NPT female. A DIN 16288 Male (available in SST for Range 1–4 transmitters only), or Autoclave type F-250-C (Pressure relieved $\frac{9}{16}$ –18 gland thread; $\frac{1}{4}$ OD high pressure tube 60° cone; available in SST for Range 5 transmitters only).

Rosemount 3051CF

For 3051CFA, see 00813-01000-4485 Rosemount 485 Annubar

For 3051CFC, see 00813-01000-4485 Rosemount 405 Compact Orifice Plate

For 3051CFP, see 00813-01000-4485 Rosemount 1195 Integral Orifice

A.4.2 Process-wetted parts

Drain/Vent Valves

316 SST, Alloy C-276, or Alloy 400 material (Alloy 400 not available with 3051L)

Process flanges and adapters

Plated carbon steel, SST cast CF-8M (cast version of 316 SST, material per ASTM-A743), C-Type cast alloy CW12MW, or cast alloy M30C

Wetted O-rings

Glass-filled PTFE or Graphite-filled PTFE

Process isolating diaphragms

Isolating Diaphragm Material	3051CD	3051CG	3051T	3051CA
316L SST	•	•	•	•
Alloy C-276	•	•	•	•
Alloy 400	•	•	•	•
Tantalum	•	•	•	•
Gold-plated Alloy 400	•	•	•	•
Gold-plated SST	•	•	•	•

A.4.3 Rosemount 3051L process wetted parts

Flanged process connection (transmitter high side)

Process Diaphragms, including Process Gasket surface

316L SST, Alloy C-276, or Tantalum

Extension

CF-3M (Cast version of 316L SST, material per ASTM-A743), or Alloy C-276. Fits schedule 40 and 80 pipe.

Mounting flange

Zinc-cobalt plated CS or SST

Reference process connection (transmitter low side)

Isolating Diaphragms

316L SST or Alloy C-276

Reference flange and adapter

CF-8M (Cast version of 316 SST, material per ASTM-A743)

A.4.4 Non-wetted parts

Electronics housing

Low-copper aluminum or CF-8M (Cast version of 316 SST). Enclosure Type 4X, IP 65, IP 66, IP 68

Coplanar sensor module housing

CF-3M (Cast version of 316L SST, material per ASTM-A743)

Bolts

ASTM A449, Type 1 (zinc-cobalt plated carbon steel)

ASTM F593G, Condition CW1 (Austenitic 316 SST)

ASTM A193, Grade B7M (zinc plated alloy steel)

Alloy K-500

Sensor module fill fluid

Silicone or inert halocarbon

In-line series uses Fluorinert[®] FC-43

Process fill fluid (3051L only)

Syltherm XLT, D.C. Silicone 704,

D.C. Silicone 200, inert, glycerin and water, Neobee M-20 or propylene glycol and water

Paint

Polyurethane

Cover O-rings

Buna-N

A.4.5 Shipping weights

Table 5. Transmitter weights without options

Transmitter	Add Weight In lb. (kg)
3051C	6.0 (2,7)
3051T	3.0 (1,4)
3051L	Table 6 on page A-114

Table 6. 3051L weights without options


Flange	Flush lb. (kg)	2-in. Ext. lb. (kg)	4-in. Ext. lb. (kg)	6-in. Ext. lb. (kg)
2-in., 150	12.5 (5,7)	—	—	—
3-in., 150	17.5 (7,9)	19.5 (8,8)	20.5 (9,3)	21.5 (9,7)
4-in., 150	23.5 (10,7)	26.5 (12,0)	28.5 (12,9)	30.5 (13,8)
2-in., 300	17.5 (7,9)	—	—	—
3-in., 300	22.5 (10,2)	24.5 (11,1)	25.5 (11,6)	26.5 (12,0)
4-in., 300	32.5 (14,7)	35.5 (16,1)	37.5 (17,0)	39.5 (17,9)
2-in., 600	15.3 (6,9)	—	—	—
3-in., 600	25.2 (11,4)	27.2 (12,3)	28.2 (12,8)	29.2 (13,2)
DN 50/PN 40	13.8 (6,2)	—	—	—
DN 80/PN 40	19.5 (8,8)	21.5 (9,7)	22.5 (10,2)	23.5 (10,6)
DN 100/PN 10/16	17.8 (8,1)	19.8 (9,0)	20.8 (9,5)	21.8 (9,9)
DN 100/PN 40	23.2 (10,5)	25.2 (11,5)	26.2 (11,9)	27.2 (12,3)

Table 7. Transmitter option weights

Code	Option	Add lb. (kg)
J, K, L, M	Stainless Steel Housing (T)	3.9 (1,8)
J, K, L, M	Stainless Steel Housing (C, L, H, P)	3.1 (1,4)
M4/M5	LCD Display for Aluminum Housing	0.5 (0,2)
B4	SST Mounting Bracket for Coplanar Flange	1.0 (0,5)
B1, B2, B3	Mounting Bracket for Traditional Flange	2.3 (1,0)
B7, B8, B9	Mounting Bracket for Traditional Flange	2.3 (1,0)
BA, BC	SST Bracket for Traditional Flange	2.3 (1,0)
H2	Traditional Flange	2.4 (1,1)
H3	Traditional Flange	2.7 (1,2)
H4	Traditional Flange	2.6 (1,2)
H7	Traditional Flange	2.5 (1,1)
FC	Level Flange—3 in., 150	10.8 (4,9)
FD	Level Flange—3 in., 300	14.3 (6,5)
FA	Level Flange—2 in., 150	10.7 (4,8)
FB	Level Flange—2 in., 300	14.0 (6,3)
FP	DIN Level Flange, SST, DN 50, PN 40	8.3 (3,8)
FQ	DIN Level Flange, SST, DN 80, PN 40	13.7 (6,2)

A.5 Dimensional drawings

Enhanced 3051C exploded view

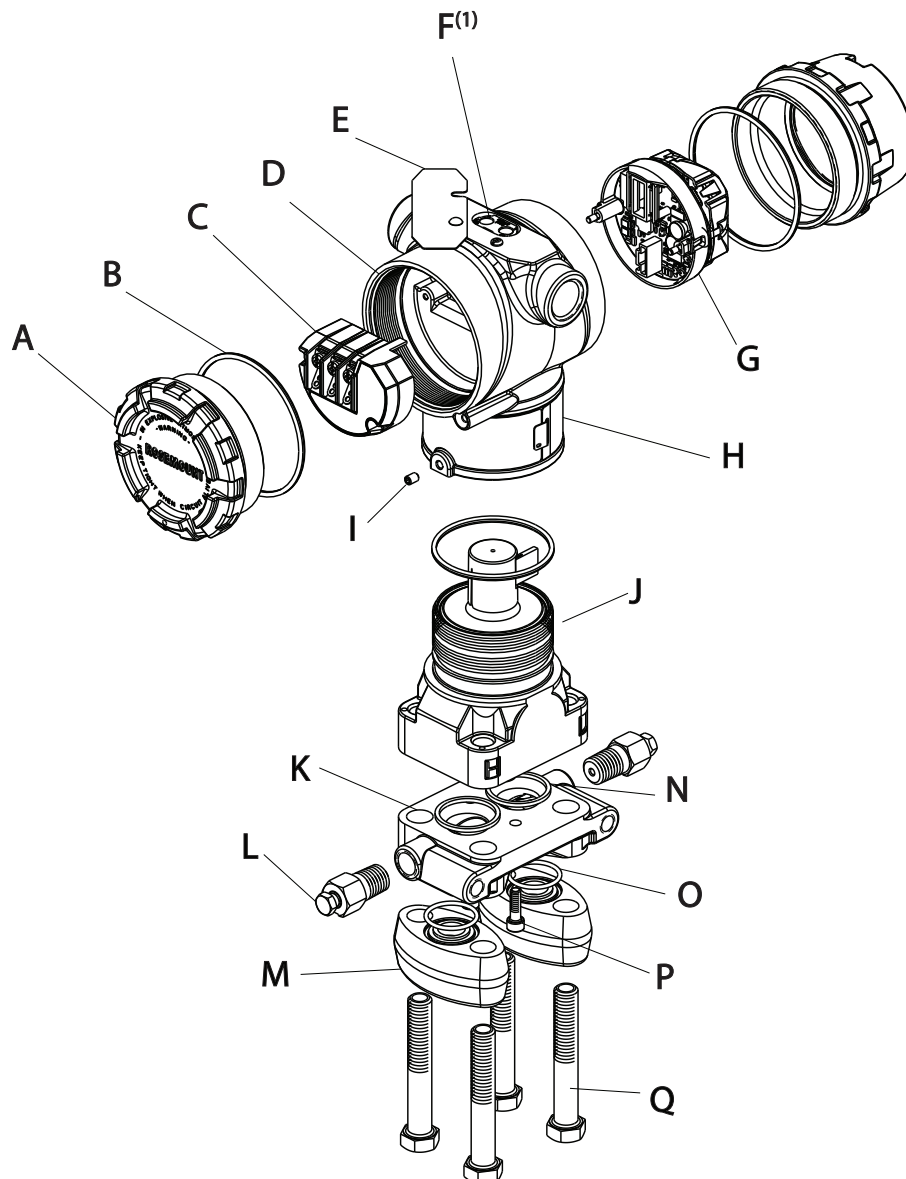


(1) Local Configuration Buttons are optional on the enhanced 3051, and can be ordered as Analog Zero and Span, Digital Zero or LOI buttons.


Enhanced 3051C exploded view labels

A. Cover	G. Electronics Board	M. Flange Adapters
B. Cover O-ring	H. Name Plate	N. Process O-Ring
C. Terminal Block	I. Housing Rotation Set Screw	O. Flange Adapter O-Ring
D. Electronics Housing	(180 degree maximum rotation without further disassembly)	P. Flange Alignment Screw (not pressure retaining)
E. Configuration Button Cover	J. Sensor Module	Q. Flange Bolts
F. Local Configuration Buttons	K. Coplanar Flange	
	L. Drain/Vent Valve	

Enhanced 3051C Coplanar Flange

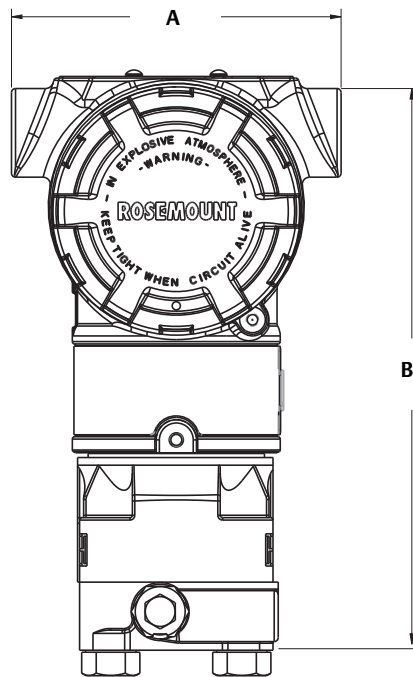


A. 4.1 (104)
B. 8.2 (209)

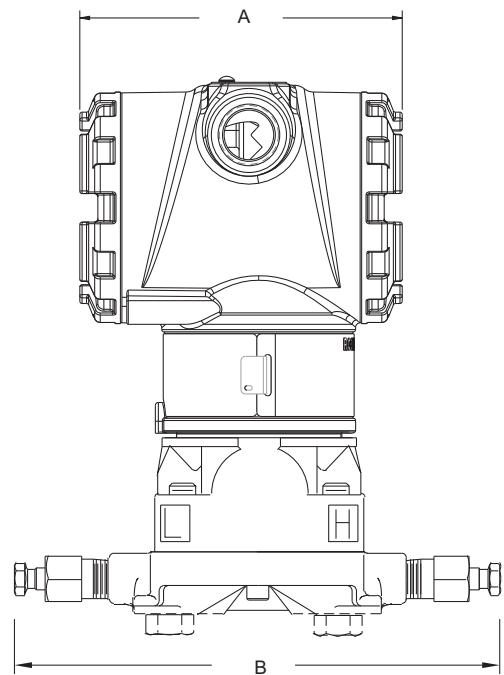


A. 4.3 (109)
B. 6.4 (163)

Enhanced 3051C Coplanar Flange with Rosemount 305 3-Valve Coplanar Integral Manifold




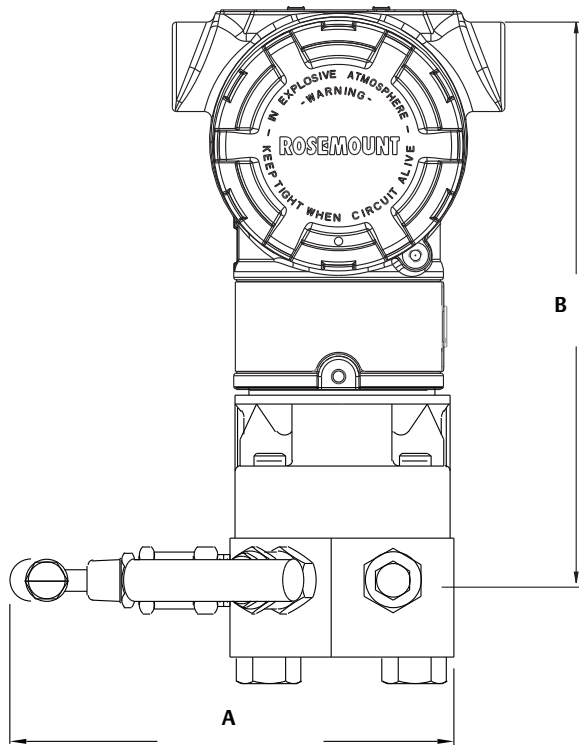


A. 5.5 (140) Max Open
B. 7.5 (192)

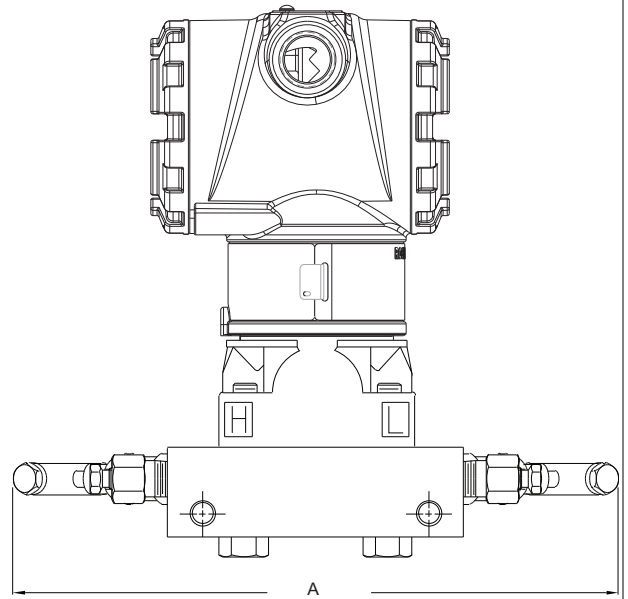


A. 10.6 (270) Max Open


Dimensions are in inches (millimeters)

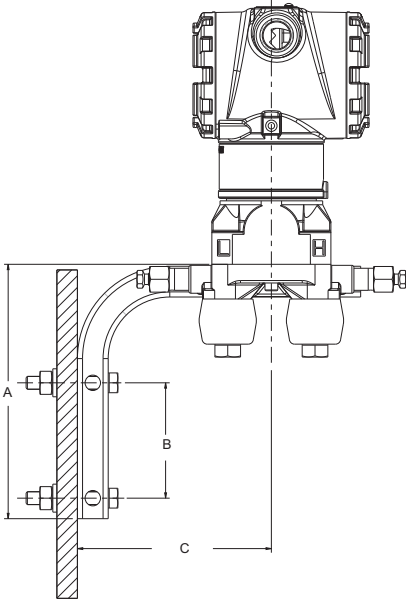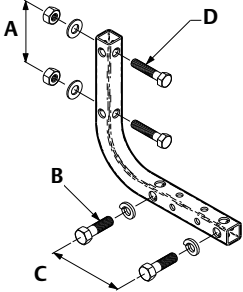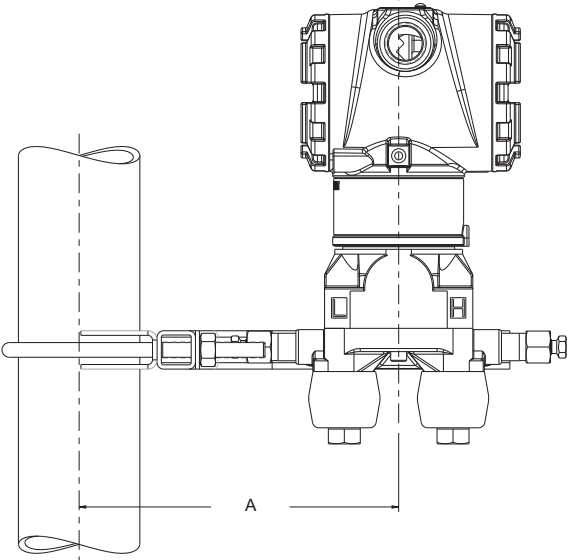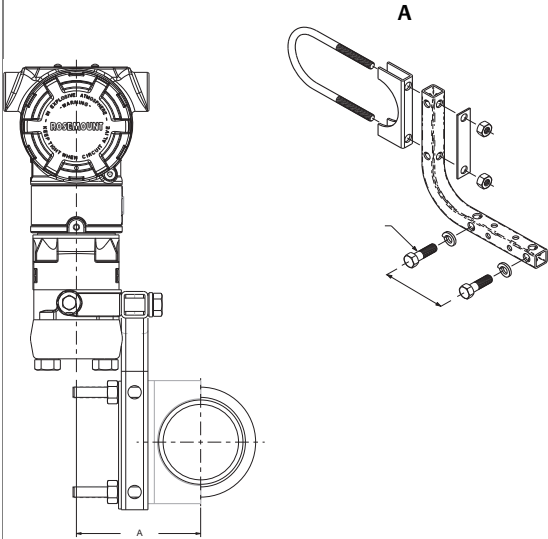Coplanar Flange mounting configurations with optional bracket (B4) for 2-in. Pipe or panel mounting		
PANEL MOUNTING	PANEL MOUNTING  A. 6.2 (157) B. 2.8 (71) C. 4.7 (120)	 A. 2.8 (71) B. $\frac{3}{8}$-16 x $1\frac{1}{4}$ Bolts for Mounting to Transmitter C. 3.4 (85) D. $\frac{3}{16}$ x $1\frac{1}{2}$ Bolts for Panel Mounting (Not Supplied)
PIPE MOUNTING	 A. 6.3 (159)	 A. 2-inch U-Bolt for Pipe Mounting B. 3.5 (89)
Dimensions are in inches (millimeters)		

Enhanced 3051C Coplanar with Traditional Flange

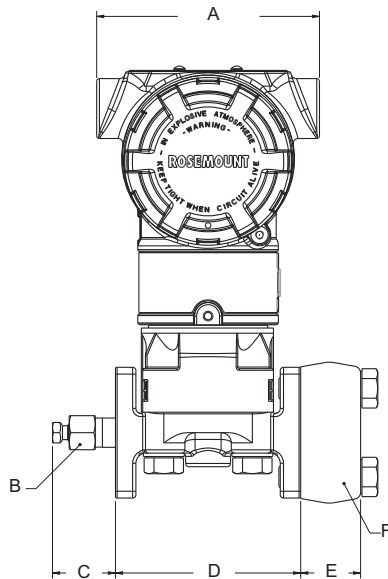


- A. 4.1 (104)
- B. Drain/vent valve
- C. 1.2 (29)
- D. 3.4 (86)
- E. 1.1 (28)
- F. Flange Adapters (optional)

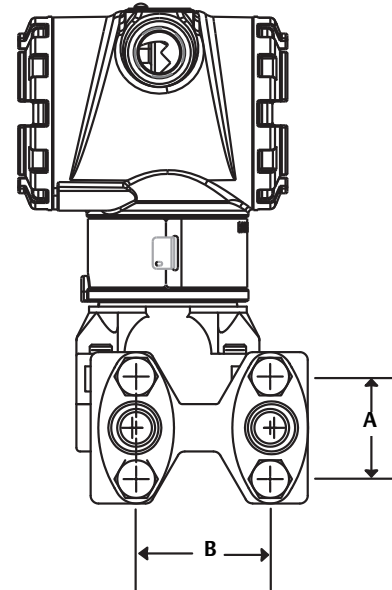


- A. 1.6 (41)
- B. 2.1 (54)



Enhanced 3051T dimensional drawings

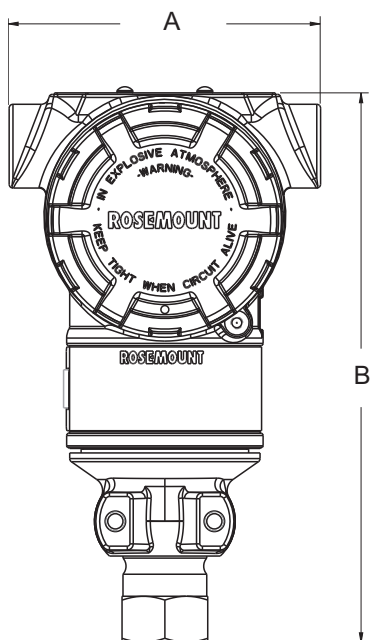



A. 4.1 (105)
B. 7.2 (183)

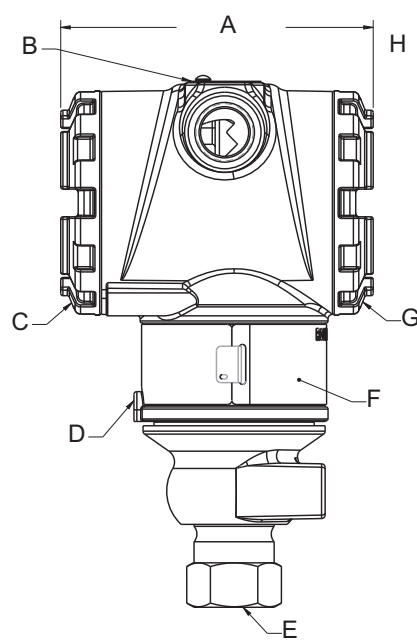


A. 4.3 (109)
B. Certification Label
C. Field Terminals (this side)
D. Housing Rotation Set Screw
E. $\frac{1}{4}$ -18 NPT female or $\frac{1}{2}$ -14 NPT female
F. Nameplate
G. Transmitter electronics (this side)
H. Conduit connection (2 places)

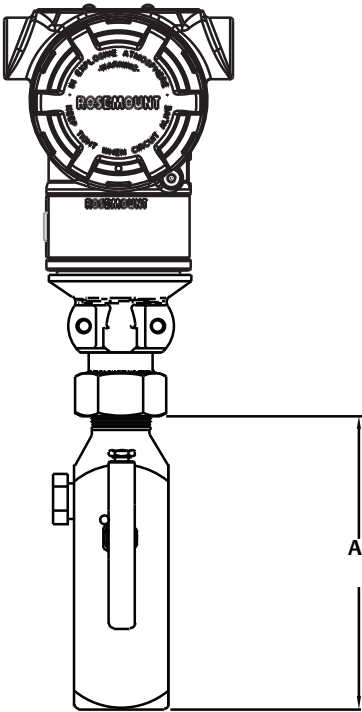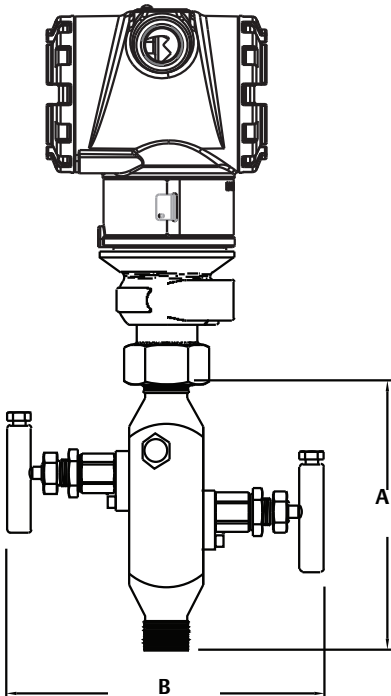Enhanced 3051T with Rosemount 306 2-Valve I Integral Manifold	
 A. 4.1 (105)	 A. 4.9 (123) B. 6.3 (159)

Dimensions are in inches (millimeters)

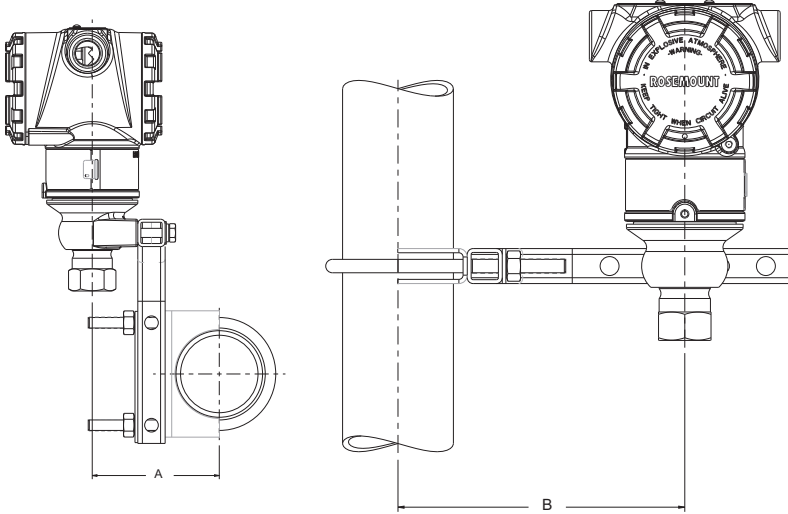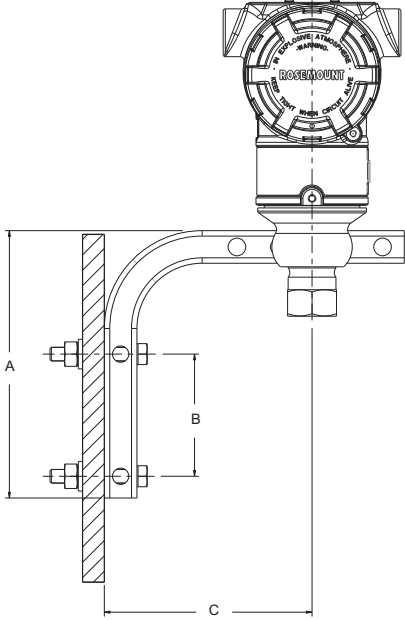Enhanced 3051T typical mounting configurations with optional mounting bracket	
Pipe Mounting	Panel Mounting
 A. 3.5 (89) B. 6.2 (156)	 A. 6.2 (156) B. 2.8 (71) C. 4.8 (121)

Dimensions are in inches (millimeters)

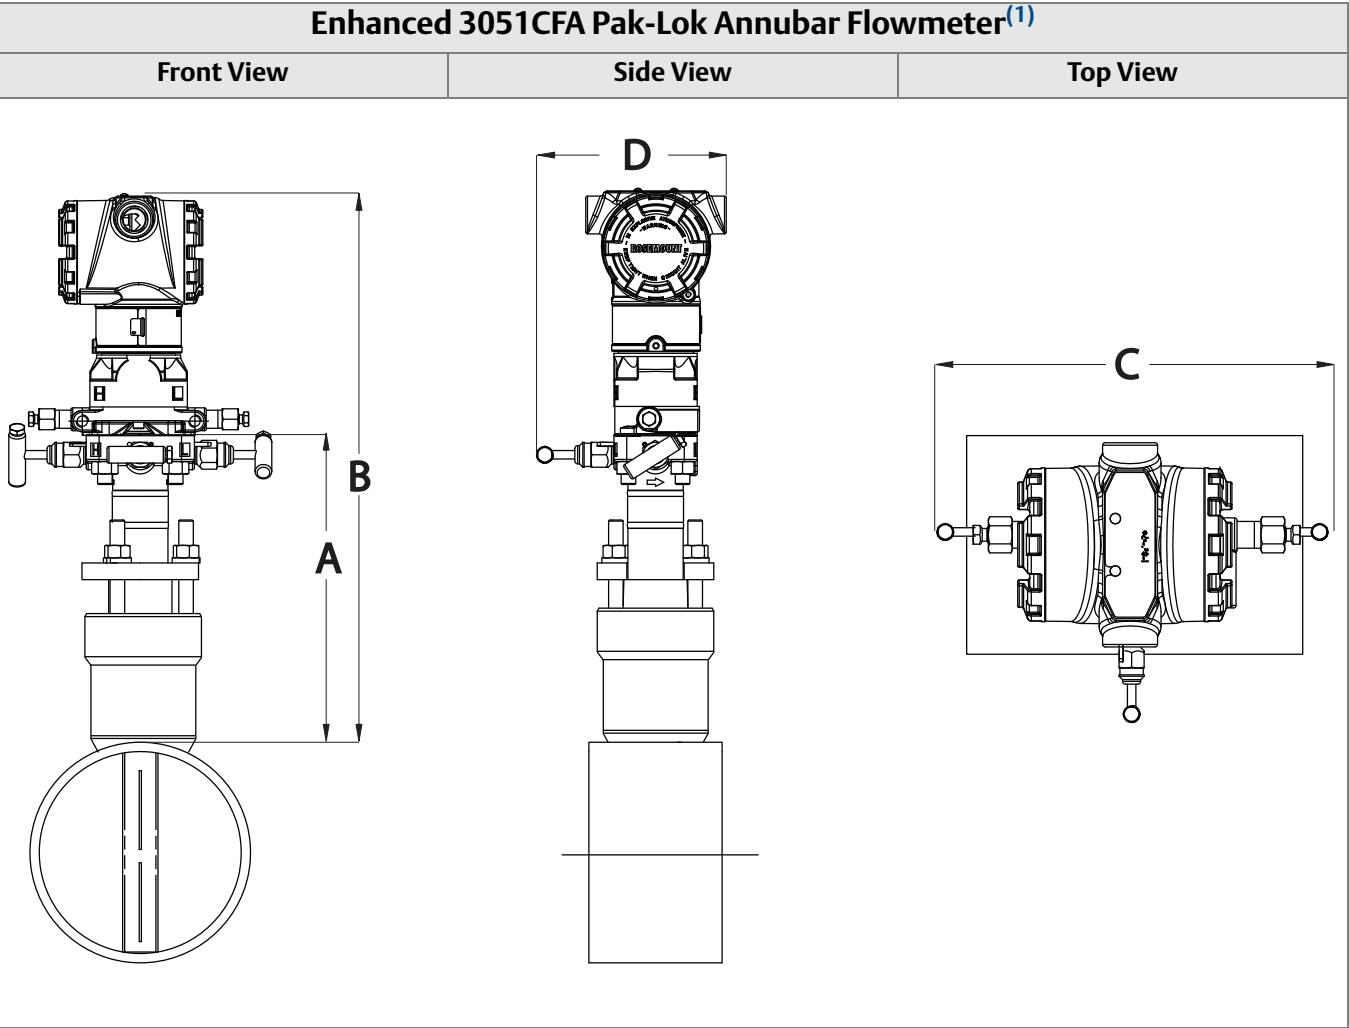

(1) The Pak-Lok Annubar model is available up to 600# ANSI (1440 psig at 100 °F (99 bar at 38 °C)).

Table 8. Enhanced 3051CFA Pak-Lok Annubar Flowmeter Dimensional Data

Sensor Size	A (Max)	B (Max)	C (Max)	D (Max)
1	8.5 (215.9)	14.6 (370.8)	9.0 (228.6)	6.0 (152.4)
2	11.0 (279.4)	16.4 (415.3)	9.0 (228.6)	6.0 (152.4)
3	12.0 (304.8)	19.1 (485.1)	9.0 (228.6)	6.0 (152.4)
Dimensions are in inches (millimeters)				







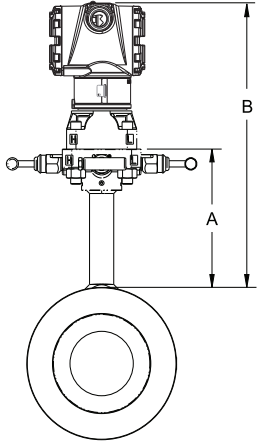
Enhanced 3051CFC Compact Orifice Flowmeter			
	Orifice Plate Side View	Orifice Plate Front View	Orifice Plate Top View
Compact Orifice Plate (Primary Element Type code P)			
Conditioning Orifice Plate (Primary Element Type code C)			

Table 9. Dimensional drawings

Primary Element Type	A	B	Transmitter Height	C	D
Type P and C	5.62 (143)	Transmitter Height + A	6.27 (159)	7.75 (197) - closed 8.25 (210) - open	6.00 (152) - closed 6.25 (159) - open






Dimensions are in inches (millimeters)

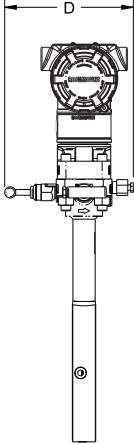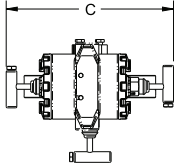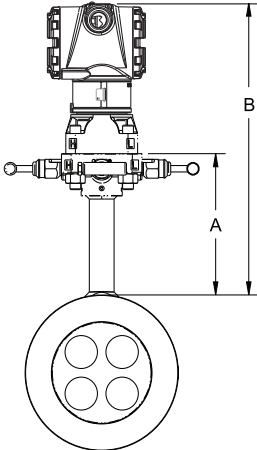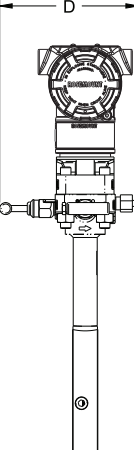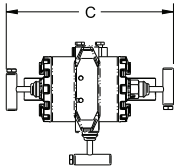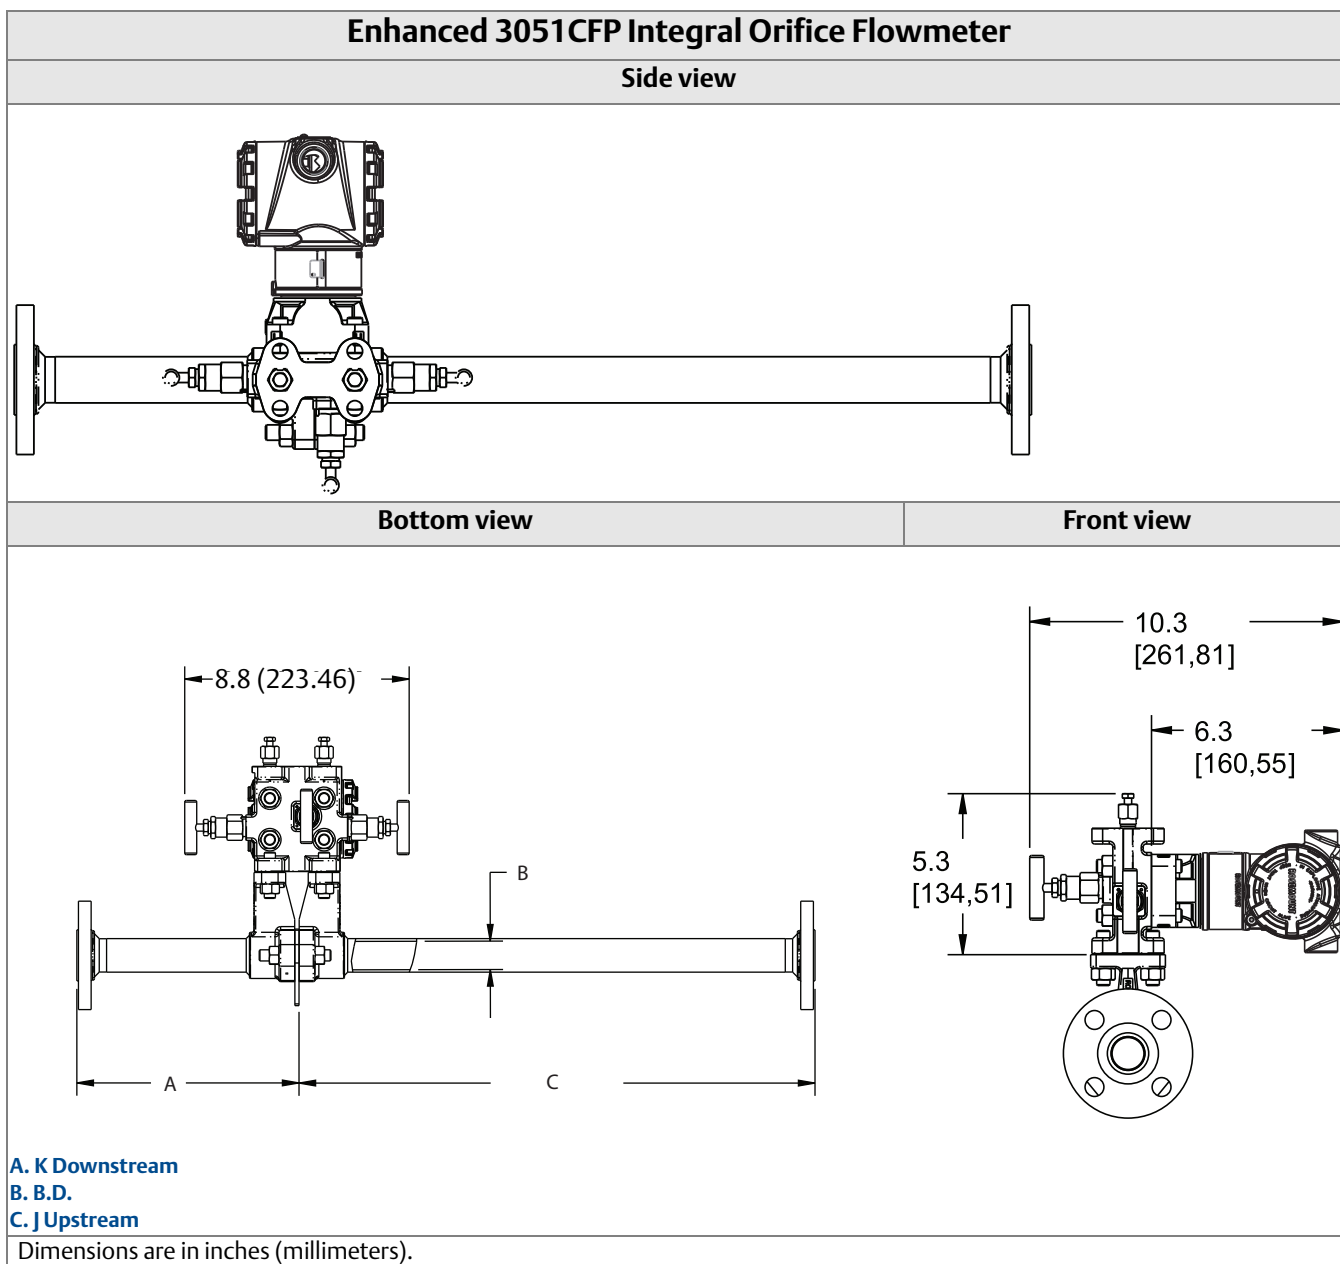

Dimension	Line size		
	1/2-in. (15 mm)	1-in. (25 mm)	1 1/2-in. (40 mm)
J (Beveled/Threaded pipe ends)	12.54 (318.4)	20.24 (514.0)	28.44 (722.4)
J (RF slip-on, RTJ slip-on, RF-DIN slip on)	12.62 (320.4)	20.32 (516.0)	28.52 (724.4)
J (RF 150#, weld neck)	14.37 (364.9)	22.37 (568.1)	30.82 (782.9)
J (RF 300#, weld neck)	14.56 (369.8)	22.63 (574.7)	31.06 (789.0)
J (RF 600#, weld neck)	14.81 (376.0)	22.88 (581.0)	31.38 (797.1)
K (Beveled/Threaded pipe ends)	5.74 (145.7)	8.75 (222.2)	11.91 (302.6)
K (RF slip-on, RTJ slip-on, RF-DIN slip on) ⁽¹⁾	5.82 (147.8)	8.83 (224.2)	11.99 (304.6)
K (RF 150#, weld neck)	7.57 (192.3)	10.88 (276.3)	14.29 (363.1)
K (RF 300#, weld neck)	7.76 (197.1)	11.14 (282.9)	14.53 (369.2)
K (RF 600#, weld neck)	8.01 (203.4)	11.39 (289.2)	14.85 (377.2)
B.D. (Bore Diameter)	0.664 (16.87)	1.097 (27.86)	1.567 (39.80)

Dimensions are in inches (millimeters).

(1) Downstream length shown here includes plate thickness of 0.162-in. (4.11 mm).

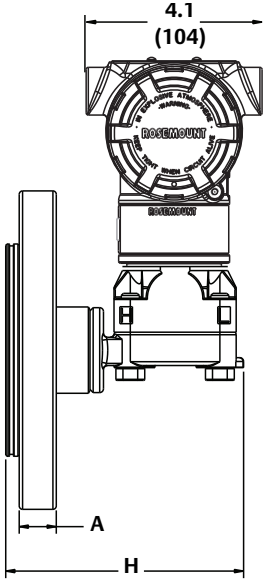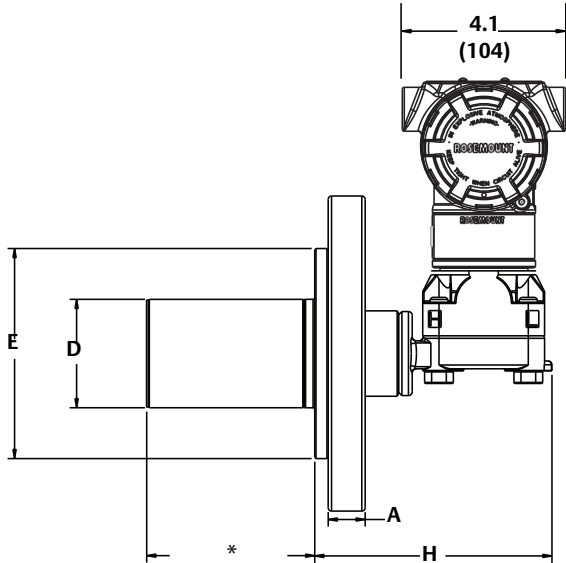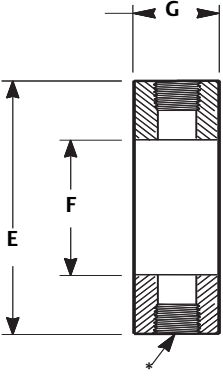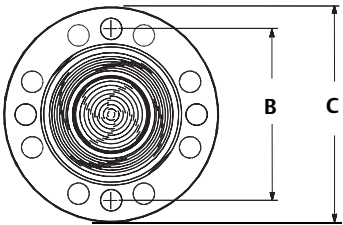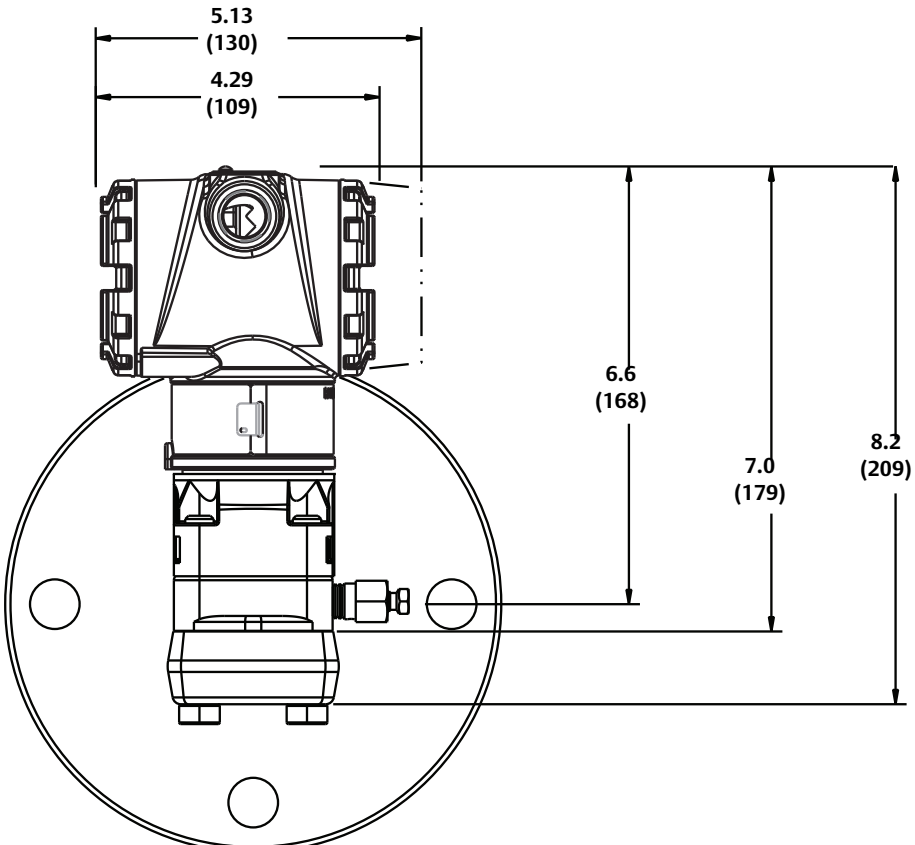Enhanced 3051L dimensional drawings	
2-in. Flange configuring (flush mount only)	3- and 4-in. flange configuration
	 * 2-in., 4-in., or 6-in. Extension (50.8, 101.6, or 152.4)
Optional flushing connection ring (lower housing)	
 * Flushing Connection	
Diaphragm Assembly and Mounting Flange	
	

Dimensions are in inches (millimeters)

Table 10. 3051L dimensional specifications

Except where indicated, dimensions are in inches (millimeters).

Class	Pipe size	Flange thickness A	Bolt circle diameter B	Outside diameter C	No. of bolts	Bolt hole diameter	Extension diameter ⁽¹⁾ D	O.D. gasket surface E
ASME B16.5 (ANSI) 150	2 (51)	0.69 (18)	4.75 (121)	6.0 (152)	4	0.75 (19)	NA	3.6 (92)
	3 (76)	0.88 (22)	6.0 (152)	7.5 (191)	4	0.75 (19)	2.58 (66)	5.0 (127)
	4 (102)	0.88 (22)	7.5 (191)	9.0 (229)	8	0.75 (19)	3.5 (89)	6.2 (158)
ASME B16.5 (ANSI) 300	2 (51)	0.82 (21)	5.0 (127)	6.5 (165)	8	0.75 (19)	NA	3.6 (92)
	3 (76)	1.06 (27)	6.62 (168)	8.25 (210)	8	0.88 (22)	2.58 (66)	5.0 (127)
	4 (102)	1.19 (30)	7.88 (200)	10.0 (254)	8	0.88 (22)	3.5 (89)	6.2 (158)
ASME B16.5 (ANSI) 600	2 (51)	1.00 (25)	5.0 (127)	6.5 (165)	8	0.75 (19)	NA	3.6 (92)
	3 (76)	1.25 (32)	6.62 (168)	8.25 (210)	8	0.88 (22)	2.58 (66)	5.0 (127)
DIN 2501 PN 10–40	DN 50	20 mm	125 mm	165 mm	4	18 mm	NA	4.0 (102)
DIN 2501 PN 25/40	DN 80	24 mm	160 mm	200 mm	8	18 mm	66 mm	5.4 (138)
	DN 100	24 mm	190 mm	235 mm	8	22 mm	89 mm	6.2 (158)
DIN 2501 PN 10/16	DN 100	20 mm	180 mm	220 mm	8	18 mm	89 mm	6.2 (158)

Class	Pipe size	Process side F	Lower housing G		H
			1/4 NPT	1/2 NPT	
ASME B16.5 (ANSI) 150	2 (51)	2.12 (54)	0.97 (25)	1.31 (33)	5.65 (143)
	3 (76)	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)
	4 (102)	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)
ASME B16.5 (ANSI) 300	2 (51)	2.12 (54)	0.97 (25)	1.31 (33)	5.65 (143)
	3 (76)	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)
	4 (102)	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)
ASME B16.5 (ANSI) 600	2 (51)	2.12 (54)	0.97 (25)	1.31 (33)	7.65 (194)
	3 (76)	3.6 (91)	0.97 (25)	1.31 (33)	7.65 (194)
DIN 2501 PN 10–40	DN 50	2.4 (61)	0.97 (25)	1.31 (33)	5.65 (143)
DIN 2501 PN 25/40	DN 80	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)
	DN 100	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)
DIN 2501 PN 10/16	DN 100	3.6 (91)	0.97 (25)	1.31 (33)	5.65 (143)

⁽¹⁾ Tolerances are 0.040 (1.02), –0.020 (0.51).

A.6 Ordering Information

A.6.1 Rosemount 3051C Coplanar Pressure Transmitter



This ordering table contains the following Rosemount 3051C configurations:

Configuration	Transmitter Output Code
4-20 mA HART® -3051 -Enhanced 3051 ⁽¹⁾	A
FOUNDATION™ fieldbus	F
Profibus	W

⁽¹⁾The enhanced 4-20 mA HART device can be ordered with Transmitter Output option code A plus any of the following new option codes: DA0, M4, QT, DZ, CR, CS, CT, HR5, HR7.

See Specifications and Options for more details on each configuration.

Additional Information

Specifications: [page 101](#)

Certifications: [page 183](#)

Dimensional Drawings: [page 115](#)

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter Type			
3051C	Coplanar Pressure Transmitter			
Measurement Type				
Standard				Standard
D	Differential			★
G	Gage			★
Expanded				
A	Absolute			
Pressure Range				
	3051CD	3051CG	3051CA	
Standard				Standard
1	–25 to 25 inH ₂ O (–62.2 to 62.2 mbar)	–25 to 25 inH ₂ O (–62,1 to 62.2 mbar)	0 to 30 psia (0 to 2.1 bar)	★
2	–250 to 250 inH ₂ O (–623 to 623 mbar)	–250 to 250 inH ₂ O (–621 to 623 mbar)	0 to 150 psia (0 to 10.3 bar)	★
3	–1000 to 1000 inH ₂ O (–2.5 to 2.5 bar)	–393 to 1000 inH ₂ O (–0.98 to 2.5 bar)	0 to 800 psia (0 to 55.2 bar)	★
4	–300 to 300 psi (–20.7 to 20.7 bar)	–14.2 to 300 psi (–0.98 to 20.7 bar)	0 to 4000 psia (0 to 275.8 bar)	★
5	–2000 to 2000 psi (–137.9 to 137.9 bar)	–14.2 to 2000 psi (–0.98 to 137.9 bar)	Not Applicable	★
Expanded				
0 ⁽¹⁾	–3 to 3 inH ₂ O (–7.5 to 7.5 mbar)	Not Applicable	Not Applicable	

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Transmitter Output				
Standard				Standard
A ⁽²⁾	4–20 mA with Digital Signal Based on HART Protocol			★
F	FOUNDATION fieldbus Protocol			★
W ⁽³⁾	Profibus PA Protocol			★
Materials of Construction				
	Process Flange Type	Flange Material	Drain/Vent	
Standard				Standard
2	Coplanar	SST	SST	★
3 ⁽⁴⁾	Coplanar	Cast Alloy C-276	Alloy C-276	★
4	Coplanar	Cast Alloy 400	Alloy 400/K-500	★
5	Coplanar	Plated CS	SST	★
7 ⁽⁴⁾	Coplanar	SST	Alloy C-276	★
8 ⁽⁴⁾	Coplanar	Plated CS	Alloy C-276	★
0	Alternate Process Connection			★
Isolating Diaphragm				
Standard				Standard
2 ⁽⁴⁾	316L SST			★
3 ⁽⁴⁾	Alloy C-276			★
Expanded				
4	Alloy 400			
5	Tantalum (Available on 3051CD and CG, Ranges 2–5 only. Not available on 3051CA)			
6	Gold-plated Alloy 400 (Use in combination with O-ring Option Code B.)			
7	Gold-plated SST			
O-ring				
Standard				Standard
A	Glass-filled PTFE			★
B	Graphite-filled PTFE			★
Sensor Fill Fluid				
Standard				Standard
1	Silicone			★
2	Inert (Differential and Gage only)			★
Housing Material			Conduit Entry Size	
Standard				Standard
A	Aluminum		½–14 NPT	★
B	Aluminum		M20 × 1.5	★
J	SST		½–14 NPT	★
K	SST		M20 × 1.5	★
Expanded				
D	Aluminum		G½	
M	SST		G½	

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Options (Include with selected model number)

Plantweb Control Functionality		
Standard		Standard
A01	FOUNDATION fieldbus Advanced Control Function Block Suite	★
Plantweb Diagnostic Functionality		
Standard		Standard
DA0 ⁽⁵⁾⁽⁶⁾	Power Advisory HART Diagnostic	★
D01	FOUNDATION fieldbus Diagnostics Suite	★
Alternate Flange⁽⁷⁾		
Standard		Standard
H2	Traditional Flange, 316 SST, SST Drain/Vent	★
H3 ⁽⁴⁾	Traditional Flange, Cast Alloy C, Alloy C-276 Drain/Vent	★
H4	Traditional Flange, Cast Alloy 400, Alloy 400/K-500 Drain/Vent	★
H7 ⁽⁴⁾	Traditional Flange, 316 SST, Alloy C-276 Drain/Vent	★
HJ	DIN Compliant Traditional Flange, SST, 1/16 in. Adapter/Manifold Bolting	★
FA	Level Flange, SST, 2 in., ANSI Class 150, Vertical Mount	★
FB	Level Flange, SST, 2 in., ANSI Class 300, Vertical Mount	★
FC	Level Flange, SST, 3 in., ANSI Class 150, Vertical Mount	★
FD	Level Flange, SST, 3 in., ANSI Class 300, Vertical Mount	★
FP	DIN Level Flange, SST, DN 50, PN 40, Vertical Mount	★
FQ	DIN Level Flange, SST, DN 80, PN 40, Vertical Mount	★
Expanded		
HK ⁽⁸⁾	DIN Compliant Traditional Flange, SST, 10 mm Adapter/Manifold Bolting	
HL	DIN Compliant Traditional Flange, SST, 12mm Adapter/Manifold Bolting (Not available on 3051CD0)	
Manifold Assembly⁽⁸⁾⁽⁹⁾		
Standard		Standard
S5	Assemble to Rosemount 305 Integral Manifold	★
S6	Assemble to Rosemount 304 Manifold or Connection System	★
Integral Mount Primary Element⁽⁸⁾⁽⁹⁾		
Standard		Standard
S3	Assemble to Rosemount 405 Compact Orifice Plate	★
S4 ⁽¹⁰⁾	Assemble to Rosemount Annubar or Rosemount 1195 Integral Orifice	★
Seal Assemblies⁽⁹⁾		
Standard		Standard
S1 ⁽¹¹⁾	Assemble to one Rosemount 1199 seal	★
S2 ⁽¹²⁾	Assemble to two Rosemount 1199 seals	★
S7	One Seal, All-Welded System (Capillary Connection Type)	
S8	Two Seals, All-Welded System (Capillary Connection Type)	
S9	Two Seals, All-Welded System (One Direct Mount and One Capillary Connection Type)	
S0	One Seal, All-Welded System (Direct Mount Connection Type)	

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Mounting Bracket ⁽¹³⁾			
Standard			Standard
B1	Traditional Flange Bracket for 2-in. Pipe Mounting, CS Bolts		★
B2	Traditional Flange Bracket for Panel Mounting, CS Bolts		★
B3	Traditional Flange Flat Bracket for 2-in. Pipe Mounting, CS Bolts		★
B4	Coplanar Flange Bracket for 2-in. Pipe or Panel Mounting, all SST		★
B7	B1 Bracket with Series 300 SST Bolts		★
B8	B2 Bracket with Series 300 SST Bolts		★
B9	B3 Bracket with Series 300 SST Bolts		★
BA	SST B1 Bracket with Series 300 SST Bolts		★
BC	SST B3 Bracket with Series 300 SST Bolts		★
Product Certifications			
Standard			Standard
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2		★
E2	INMETRO Flameproof		★
E3	China Flameproof		★
E4 ⁽¹⁴⁾	TIIS Flame-proof		★
E5	FM Explosion-proof, Dust Ignition-Proof		★
E7	IECEx Flameproof, Dust Ignition-proof		★
E8	ATEX Flameproof and Dust Certification		★
I1	ATEX Intrinsic Safety and Dust		★
I2	INMETRO Intrinsic Safety		★
I3	China Intrinsic Safety		★
I4 ⁽¹⁵⁾	TIIS Intrinsic Safety		★
I5	FM Intrinsically Safe, Division 2		★
I7	IECEx Intrinsic Safety		★
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION fieldbus protocol only		★
IE	FM FISCO Intrinsically Safe; for FOUNDATION fieldbus protocol only		★
K2	INMETRO Flameproof, Instrinsic Safety		★
K5	FM Explosion-proof, Dust Ignition-Proof, Intrinsically Safe, and Division 2		★
K6	CSA and ATEX Explosion-proof, Intrinsically Safe, and Division 2 (combination of C6 and K8)		★
K7	IECEx Flame-proof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of I7, N7, and E7)		★
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)		★
KB	FM and CSA Explosion-proof, Dust Ignition Proof, Intrinsically Safe, and Division 2 (combination of K5 and C6)		★
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)		★
N1	ATEX Type n Certification and Dust		★
N3	China Type n		★
N7	IECEx Type n Certification		★
Drinking Water Approval			
Standard			Standard
DW ⁽¹⁶⁾	NSF drinking water approval		★
Shipboard Approvals			
Standard			Standard
SBS	American Bureau of Shipping		★

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Custody Transfer		
Standard		Standard
C5 ⁽⁵⁾	Measurement Canada Accuracy Approval <i>(Limited availability depending on transmitter type and range. Contact an Emerson Process Management representative)</i>	★
Bolting Material		
Standard		Standard
L4	Austenitic 316 SST Bolts	★
L5	ASTM A 193, Grade B7M Bolts	★
L6	Alloy K-500 Bolts	★
Display and Interface Options		
Standard		Standard
M4 ⁽¹⁷⁾	LCD Display with Local Operator Interface	★
M5	LCD Display	★
Calibration Certificate		
Standard		Standard
Q4	Calibration Certificate	★
QG	Calibration Certificate and GOST Verification Certificate	★
QP	Calibration certification and tamper evident seal	★
Material Traceability Certification		
Standard		Standard
Q8	Material Traceability Certification per EN 10204 3.1.B	★
Quality Certification for Safety		
Standard		Standard
QS ⁽¹⁸⁾	Prior-use certificate of FMEDA data	★
QT ⁽⁵⁾⁽⁶⁾	Safety certified to IEC 61508 with certificate of FMEDA	★
Configuration Buttons		
Standard		Standard
D4 ⁽⁵⁾	Analog Zero and Span	★
DZ ⁽⁵⁾	Digital Zero Trim	★
Transient Protection		
Standard		Standard
T1 ⁽¹⁹⁾	Transient Protection Terminal Block	★
Software Configuration		
Standard		Standard
C1	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	★
Gage Pressure Calibration		
Standard		Standard
C3	Gage Calibration (Model 3051CA4 only)	★

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Alarm Levels		
Standard		Standard
C4 ⁽⁵⁾⁽¹⁹⁾	Analog Output Levels Compliant with NAMUR Recommendation NE 43, Alarm High	★
CN ⁽⁵⁾⁽¹⁹⁾	Analog Output Levels Compliant with NAMUR Recommendation NE 43, Alarm Low	★
CR ⁽⁵⁾⁽⁶⁾	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)	★
CS ⁽⁵⁾⁽⁶⁾	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)	★
CT ⁽⁵⁾⁽⁶⁾	Low alarm (standard Rosemount alarm and saturation levels)	★
Pressure Testing		
Expanded		
P1	Hydrostatic Testing with Certificate	
Cleaning Process Area		
Expanded		
P2	Cleaning for Special Service	
P3	Cleaning for <1 PPM Chlorine/Fluorine	
Pressure Calibration		
Expanded		
P4	Calibrate at Line Pressure (<i>Specify Q48 on order for corresponding certificate</i>)	
High Accuracy		
Standard		Standard
P8 ⁽²⁰⁾	0.04% Accuracy to 5:1 turndown (Range 2-4)	★
Flange Adapters		
Standard		Standard
DF ⁽²¹⁾	1/2-14 NPT flange adapter(s)	★
D3	1/4-18 NPT Process Connections (No flange adapters)	
D3	1/4-18 NPT Process Connections (No flange adapters)	
Vent/Drain Valves		
Expanded		
D7	Coplanar Flange Without Drain/Vent Ports	
Conduit Plug		
Standard		Standard
DO ⁽²²⁾	316 SST Conduit Plug	★
RC 1/4 RC 1/2 Process Connection		
Expanded		
D9 ⁽²³⁾	RC 1/4 Flange with RC 1/2 Flange Adapter, CS - SST	
D9	JIS Process Connection—RC 1/4 Flange with RC 1/2 Flange Adapter, 316SST	
Max Static Line Pressure		
Standard		Standard
P9	4500 psig (310 bar) Static Pressure Limit (3051CD Ranges 2-5 only)	★
Ground Screw		
Standard		Standard
V5 ⁽²⁴⁾	External Ground Screw Assembly	★

Table 11. 3051C Coplanar Pressure Transmitters Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Surface Finish		
Standard		Standard
Q16	Surface finish certification for sanitary remote seals	★
Toolkit Total System Performance Reports		
Standard		Standard
QZ	Remote Seal System Performance Calculation Report	★
Conduit Electrical Connector		
Standard		Standard
GE	M12, 4-pin, Male Connector (eurofast®)	★
GM	A size Mini, 4-pin, Male Connector (minifast®)	★
HART Revision Configuration		
Standard		Standard
HR5 ⁽⁵⁾⁽⁶⁾⁽²⁵⁾	Configured for HART Revision 5	★
HR7 ⁽⁵⁾⁽⁶⁾⁽²⁶⁾	Configured for HART Revision 7	★
Typical Model Number: 3051CD 2 A 2 2 A 1 A B4\$13857 780		

(1)3051CD0 is available only with Output Code A, Process Flange Code 0 (Alternate Flange H2, H7, HJ, or HK), Isolating Diaphragm Code 2, O-ring Code A, and Bolting Option L4.

(2)HART Revision 5 is the default HART output. The Enhanced 3051 can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.

(3)Option code M4 - LCD Display with Local Operator Interface required for local addressing and configuration.

(4)Materials of Construction comply with recommendations per NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

(5)Only available with HART 4-20 mA output (output code A).

(6)Select Configuration Buttons (option code D4 or DZ) or Local Operator Interface (option code M4) if local configuration buttons are required.

(7)Requires 0 code in Materials of Construction for Alternate Process Connection.

(8)Not valid with optional code P9 for 4500 psi Static Pressure.

(9)"Assemble-to" items are specified separately and require a completed model number.

(10)Process Flange limited to Coplanar (codes 2, 3, 5, 7, 8) or Traditional (H2, H3, H7).

(11)Not valid with optional code D9 for RC¹/2 Adaptors.

(12)Not valid for optional codes DF and D9 for Adaptors.

(13)Panel mounting bolts are not supplied.

(14)Available only with output codes A - 4-20 mA HART and F - FOUNDATION fieldbus.

(15)Available only with 3051CD and 3051CG and output code A - 4-20 mA HART.

(16)Not available with Alloy C-276 isolator (3 code), tantalum isolator (5 code), all Cast Alloy C-276 flanges, all plated CS flanges, all DIN flanges, all Level flanges, assemble-to manifolds (S5 and S6 codes), assemble-to seals (S1 and S2 codes), assemble-to primary elements (S3 and S4 codes), surface finish certification (Q16 code), and remote seal system report (QZ code).

(17)Not available with FOUNDATION fieldbus (output code F).

(18)Only available with standard 3051 4-20mA HART.

(19)NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field for the standard 3051.

(20)Only available with Standard 3051. See specification section for more information.

(21)Not valid with Alternate Process Connection options S3, S4, S5, and S6.

(22)Transmitter is shipped with a 316 SST Conduit plug (uninstalled) in place of standard carbon steel conduit plug.

(23)Not available with Alternate Process Connection; DIN Flanges and Level Flanges.

(24) The V5 options is not needed with the T1 option; external ground screw assembly is included with the T1 option.

(25)Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.

(26)Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.

A.6.2 Rosemount 3051T In-Line Pressure Transmitter



**3051T In-Line
Pressure Transmitter**

This ordering table contains the following Rosemount 3051T configurations:

Configuration	Transmitter Output Code
4-20 mA HART® -3051 -Enhanced 3051 ⁽¹⁾	A
FOUNDATION™ fieldbus	F
Profibus	W

⁽¹⁾The enhanced 4-20 mA HART device can be ordered with Transmitter Output option code A plus any of the following new option codes: DA0, M4, QT, DZ, CR, CS, CT, HR5, HR7.

See Specifications and Options for more details on each configuration.

Additional Information

Specifications: [page 101](#)

Certifications: [page 183](#)

Dimensional Drawings: [page 115](#)

Table 12. 3051T In-Line Pressure Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter Type		
3051T	In-Line Pressure Transmitter		
Pressure Type			
Standard			Standard
G	Gage		★
A	Absolute		★
Pressure Range			
	3051TG ⁽¹⁾	3051TA	
Standard			Standard
1	-14.7 to 30 psi (-1.0 to 2.1 bar)	0 to 30 psia (0 to 2.1 bar)	★
2	-14.7 to 150 psi (-1.0 to 10.3 bar)	0 to 150 psia (0 to 10.3 bar)	★
3	-14.7 to 800 psi (-1.0 to 55 bar)	0 to 800 psia (0 to 55 bar)	★
4	-14.7 to 4000 psi (-1.0 to 276 bar)	0 to 4000 psia (0 to 276 bar)	★
5	-14.7 to 10000 psi (-1.0 to 689 bar)	0 to 10000 psia (0 to 689 bar)	★
Transmitter Output			
Standard			Standard
A ⁽²⁾	4–20 mA with Digital Signal Based on HART Protocol		★
F	FOUNDATION fieldbus Protocol		★
W ⁽³⁾	Profibus PA Protocol		★
Process Connection Style			
Standard			Standard
2B	1/2–14 NPT Female		★
2C	G½ A DIN 16288 Male (Available in SST for Range 1–4 only)		★

Table 12. 3051T In-Line Pressure Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Expanded			
2F	Coned and Threaded, Compatible with Autoclave Type F-250-C (Range 5 only)		
61	Non-threaded Instrument flange (Range 1-4 only)		
Isolating Diaphragm		Process Connection Wetted Parts Material	
Standard			Standard
2 ⁽⁴⁾	316L SST	316L SST	★
3 ⁽⁴⁾	Alloy C-276	Alloy C-276	★
Sensor Fill Fluid			
Standard			Standard
1	Silicone		★
2	Inert		★
Housing Material		Conduit Entry Size	
Standard			Standard
A	Aluminum	½–14 NPT	★
B	Aluminum	M20 × 1.5	★
J	SST	½–14 NPT	★
K	SST	M20 × 1.5	★
Expanded			
D	Aluminum	G½	
M	SST	G½	

Options (Include with selected model number)

PlantWeb Control Functionality			
Standard			Standard
A01	Advanced Control Function Block Suite		★
PlantWeb Diagnostic Functionality			
Standard			Standard
DA0 ⁽⁵⁾ ⁽⁶⁾	Power Advisory HART Diagnostic		★
D01	FOUNDATION fieldbus Diagnostics Suite		★
Integral Assembly			
Standard			Standard
S5 ⁽⁷⁾	Assemble to Rosemount 306 Integral Manifold		★
Diaphragm Seal Assemblies			
Standard			Standard
S1 ⁽⁷⁾	Assemble to one Rosemount 1199 seal		★
Mounting Bracket ⁽⁸⁾			
Standard			Standard
B4	Bracket for 2-in. Pipe or Panel Mounting, All SST		★
Product Certifications			
Standard			Standard
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2		★
E2	INMETRO Flameproof		★
E3	China Flameproof		★

Table 12. 3051T In-Line Pressure Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Standard		Standard
E4	TIIS Flameproof	★
E5	FM Explosion-proof, Dust Ignition-proof	★
E7	IECEx Flameproof, Dust Ignition-proof	★
E8	ATEX Flameproof and Dust Certification	★
I1	ATEX Intrinsic Safety and Dust	★
I2	INMETRO Intrinsic Safety	★
I3	China Intrinsic Safety	★
I5	FM Intrinsically Safe, Division 2	★
I7	IECEx Intrinsic Safety	★
IA	ATEX Intrinsic Safety for FISCO; for FOUNDATION fieldbus protocol only	★
IE	FM FISCO Intrinsically Safe; for FOUNDATION fieldbus protocol only	★
K2	INMETRO Flameproof, Intrinsic Safety	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2	★
K6	CSA and ATEX Explosion-proof, Intrinsically Safe, and Division 2 (combination of C6 and K8)	★
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of I7, N7, and E7)	★
K8	ATEX Flame-proof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	★
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of K5 and C6)	★
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	★
N1	ATEX Type n Certification and Dust	★
N3	China Type n	★
N7	IECEx Type n Certification	★
Drinking Water Approval		
Standard		Standard
DW ⁽⁹⁾	NSF drinking water approval	★
Shipboard Approvals		
Standard		Standard
SBS	American Bureau of Shipping	★
Custody Transfer		
Standard		Standard
C5	Measurement Canada Accuracy Approval (<i>Limited availability depending on transmitter type and range. Contact an Emerson Process Management representative</i>)	★
Calibration Certification		
Standard		Standard
Q4	Calibration Certificate	★
QG	Calibration Certificate and GOST Verification Certificate	★
QP	Calibration Certification and tamper evident seal	★
Material Traceability Certification		
Standard		Standard
Q8	Material Traceability Certification per EN 10204 3.1.B	★
Quality Certification for Safety		
Standard		Standard
QS ⁽¹⁰⁾	Prior-use certificate of FMEDA Data	★
QT ⁽⁵⁾⁽⁸⁾	Safety certified to IEC 61508 with certificate of FMEDA	★

Table 12. 3051T In-Line Pressure Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Configuration Buttons			
Standard			Standard
D4 ⁽⁸⁾	Analog Zero and Span		★
DZ ⁽⁸⁾	Digital Zero Trim		★
Display and Interface Options			
Standard			Standard
M4 ⁽¹¹⁾	LCD Display with Local Operator Interface		★
M5	LCD Display		★
Conduit Plug			
Standard			Standard
DO ⁽¹²⁾	316 SST Conduit Plug		★
Transient Terminal Block			
Standard			Standard
T1 ⁽¹³⁾	Transient Protection Terminal Block		★
Software Configuration			
Standard			Standard
C1 ⁽⁸⁾	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)		★
Alarm Levels			
Standard			Standard
C4 ⁽⁸⁾⁽¹⁴⁾	Analog Output Levels Compliant with NAMUR Recommendation NE 43, Alarm High		★
CN ⁽⁸⁾⁽¹⁴⁾	Analog Output Levels Compliant with NAMUR Recommendation NE 43, Low Alarm		★
CR ⁽⁵⁾⁽⁸⁾	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)		★
CS ⁽⁵⁾⁽⁸⁾	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)		★
CT ⁽⁵⁾⁽⁸⁾	Low alarm (standard Rosemount alarm and saturation levels)		★
Pressure Testing			
Expanded			
P1	Hydrostatic Testing with Certificate		
Cleaning Process Area ⁽¹⁵⁾			
Expanded			
P2	Cleaning for Special Service		
P3	Cleaning for <1 PPM Chlorine/Fluorine		
High Accuracy			
Standard			Standard
P8 ⁽¹⁶⁾	0.04% Accuracy to 5:1 turndown (Range 2-4)		★
Ground Screw			
Standard			Standard
V5 ⁽¹⁷⁾	External Ground Screw Assembly		★
Surface Finish			
Standard			Standard
Q16	Surface finish certification for sanitary remote seals		★
Toolkit Total System Performance Reports			
Standard			Standard
QZ	Remote Seal System Performance Calculation Report		★

Table 12. 3051T In-Line Pressure Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Conduit Electrical Connector			
Standard			Standard
GE	M12, 4-pin, Male Connector (eurofast®)		★
GM	A size Mini, 4-pin, Male Connector (minifast®)		★
HART Revision Configuration			
Standard			
HR5 ⁽⁵⁾⁽⁸⁾⁽¹⁸⁾	Configured for HART Revision 5		★
HR7 ⁽⁵⁾⁽⁸⁾⁽¹⁹⁾	Configured for HART Revision 7		★
Typical Model Number:		3051T G 5 F 2A 2 1 A B4	

(1)3051TG lower range limit varies with atmospheric pressure.

(2)HART Revision 5 is the default HART output. The Enhanced 3051 can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.

(3)Option code M4 - LCD Display with Local Operator Interface required for local addressing and configuration.

(4)Materials of Construction comply with recommendations per NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

(5)Select Configuration Buttons (option code D4 or DZ) or Local Operator Interface (option code M4) if local configuration buttons are required.

(6)Only available with HART 4-20 mA output (output code A).

(7)"Assemble-to" items are specified separately and require a completed model number.

(8)Panel mounting bolts are not supplied.

(9)Not available with Alloy C-276 isolator (3 code), tantalum isolator (5 code), all Cast Alloy C-276 flanges, all plated CS flanges, all DIN flanges, all Level flanges, assemble-to manifolds (S5 and S6 codes), assemble-to seals (S1 and S2 codes), assemble-to primary elements (S3 and S4 codes), surface finish certification (Q16 code), and remote seal system report (QZ code).

(10)Only available with HART 4-20 mA output (output code A).

(11)Not available with FOUNDATION Fieldbus (output code F).

(12)Transmitter is shipped with 316 SST conduit plug (uninstalled) in place of standard carbon steel conduit plug.

(13)The T1 option is not needed with FISCO Product Certifications; transient protection is included in the FISCO product certification codes IA and IE.

(14)NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.

(15)Not valid with Alternate Process Connection S5.

(16)Only available with Standard 3051. See specification section for more information.

(17)The V5 option is not needed with T1 option; external ground screw assembly is included with the T1 option.

(18)Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.

(19)Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.

A.6.3 Rosemount 3051CF Flowmeter Series



This ordering table contains the following Rosemount 3051CF configurations:

Configuration	Transmitter Output Code
4-20 mA HART® -3051 -Enhanced 3051 ⁽¹⁾	A
FOUNDATION™ fieldbus	F
Profibus	W

(1) The enhanced 4-20 mA HART device can be ordered with Transmitter Output option code A plus any of the following new option codes: DA0, M4, QT, DZ, CR, CS, CT, HR5, HR7.

See Specifications and Options for more details on each configuration.

Rosemount 3051CFA Annubar Flowmeter

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Product Description	
3051CFA	Annubar Flowmeter	
Measurement Type		
Standard		Standard
D	Differential Pressure	★
Fluid Type		
Standard		Standard
L	Liquid	★
G	Gas	★
S	Steam	★
Line Size		
Standard		Standard
020	2-in. (50 mm)	★
025	2½-in. (63.5 mm)	★
030	3-in. (80 mm)	★
035	3½-in. (89 mm)	★
040	4-in. (100 mm)	★
050	5-in. (125 mm)	★
060	6-in. (150 mm)	★
070	7-in. (175 mm)	★
080	8-in. (200 mm)	★
100	10-in. (250 mm)	★
120	12-in. (300 mm)	★
Expanded		
140	14-in. (350 mm)	
160	16-in. (400 mm)	
180	18-in. (450 mm)	

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Expanded		
200	20-in. (500 mm)	
240	24-in. (600 mm)	
300	30-in. (750 mm)	
360	36-in. (900 mm)	
420	42-in. (1066 mm)	
480	48-in. (1210 mm)	
600	60-in. (1520 mm)	
720	72-in. (1820 mm)	
780	78-in. (1950 mm)	
840	84-in. (2100 mm)	
900	90-in. (2250 mm)	
960	96-in. (2400 mm)	
Pipe I.D. Range		
Standard		Standard
C	Range C from the Pipe I.D. table	★
D	Range D from the Pipe I.D. table	★
Expanded		
A	Range A from the Pipe I.D. table	
B	Range B from the Pipe I.D. table	
E	Range E from the Pipe I.D. table	
Z	Non-standard Pipe I.D. Range or Line Sizes greater than 12 inches	
Pipe Material / Mounting Assembly Material		
Standard		Standard
C	Carbon steel (A105)	★
S	316 Stainless Steel	★
0	No Mounting (Customer Supplied)	★
Expanded		
G	Chrome-Moly Grade F-11	
N	Chrome-Moly Grade F-22	
J	Chrome-Moly Grade F-91	
Piping Orientation		
Standard		Standard
H	Horizontal Piping	★
D	Vertical Piping with Downwards Flow	★
U	Vertical Piping with Upwards Flow	★
Annubar Type		
Standard		Standard
P	Pak-Lok	★
F	Flanged with opposite side support	★
Expanded		
L	Flange-Lok	
G	Gear-Drive Flo-Tap	
M	Manual Flo-Tap	

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Sensor Material				
Standard				Standard
S	316 Stainless Steel			★
Expanded				
H	Alloy C-276			
Sensor Size				
Standard				Standard
1	Sensor size 1 — Line sizes 2-in. (50 mm) to 8-in. (200 mm)			★
2	Sensor size 2 — Line sizes 6-in. (150 mm) to 96-in. (2400 mm)			★
3	Sensor size 3 — Line sizes greater than 12-in. (300 mm)			★
Mounting Type				
Standard				Standard
T1	Compression or Threaded Connection			★
A1	150# RF ANSI			★
A3	300# RF ANSI			★
A6	600# RF ANSI			★
D1	DN PN16 Flange			★
D3	DN PN40 Flange			★
D6	DN PN100 Flange			★
Expanded				
A9 ⁽¹⁾	900# RF ANSI			
AF ⁽¹⁾	1500# RF ANSI			
AT ⁽¹⁾	2500 # RF ANSI			
R1	150# RTJ Flange			
R3	300# RTJ Flange			
R6	600# RTJ Flange			
R9 ⁽¹⁾	900# RTJ Flange			
RF ⁽¹⁾	1500# RTJ Flange			
RT ⁽¹⁾	2500# RTJ Flange			
Opposite Side Support or Packing Gland				
Standard				Standard
0	No opposite side support or packing gland (Required for Pak-Lok and Flange-Lok models)			★
	Opposite Side Support – Required for Flanged Models			
C	NPT Threaded Opposite Support Assembly – Extended Tip			★
D	Welded Opposite Support Assembly – Extended Tip			★
Expanded				
	Packing Gland – Required for Flo-Tap Models			
	Packing Gland Material	Rod Material	Packing Material	
J	Stainless Steel Packing Gland / Cage Nipple	Carbon Steel	PTFE	
K	Stainless Steel Packing Gland / Cage Nipple	Stainless Steel	PTFE	
L	Stainless Steel Packing Gland / Cage Nipple	Carbon Steel	Graphite	
N	Stainless Steel Packing Gland / Cage Nipple	Stainless Steel	Graphite	
R	Alloy C-276 Packing Gland / Cage Nipple	Stainless Steel	Graphite	

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Isolation Valve for Flo-Tap Models			
Standard			Standard
0	Not Applicable or Customer Supplied		★
Expanded			
1	Gate Valve, Carbon Steel		
2	Gate Valve, Stainless Steel		
5	Ball Valve, Carbon Steel		
6	Ball Valve, Stainless Steel		
Temperature Measurement			
Standard			Standard
T	Integral RTD – not available with Flanged model greater than class 600#		★
0	No Temperature Sensor		★
Expanded			
R	Remote Thermowell and RTD		
Transmitter Connection Platform			
Standard			Standard
3	Direct-mount, Integral 3-valve Manifold– not available with Flanged model greater than class 600		★
5	Direct -mount, 5-valve Manifold – not available with Flanged model greater than class 600		★
7	Remote-mount NPT Connections (1/2-in. NPT)		★
Expanded			
6	Direct-mount, high temperature 5-valve Manifold – not available with Flanged model greater than class 600		
8	Remote-mount SW Connections (1/2-in.)		
Differential Pressure Range			
Standard			Standard
1	0 to 25 in H ₂ O (0 to 62,3 mbar)		★
2	0 to 250 in H ₂ O (0 to 623 mbar)		★
3	0 to 1000 in H ₂ O (0 to 2,5 bar)		★
Transmitter Output			
Standard			Standard
A ⁽²⁾	4–20 mA with digital signal based on HART Protocol		★
F	FOUNDATION fieldbus Protocol		★
W ⁽³⁾	Profibus PA Protocol		★
Transmitter Housing Material		Conduit Entry Size	
Standard			Standard
A	Aluminum	1/2-14 NPT	★
B	Aluminum	M20 x 1.5	★
J	SST	1/2-14 NPT	★
K	SST	M20 x 1.5	★
Expanded			
D	Aluminum	G1/2	
M	SST	G1/2	
Transmitter Performance Class			
Standard			Standard
1	1.6% flow rate accuracy, 8:1 flow turndown, 5-yr. stability		★

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Options (Include with selected model number)

Pressure Testing		
Expanded		
P1 ⁽⁴⁾	Hydrostatic Testing with Certificate	
PX ⁽⁴⁾	Extended Hydrostatic Testing	
Special Cleaning		
Expanded		
P2	Cleaning for Special Services	
PA	Cleaning per ASTM G93 Level D (Section 11.4)	
Material Testing		
Expanded		
V1	Dye Penetrant Exam	
Material Examination		
Expanded		
V2	Radiographic Examination	
Flow Calibration		
Expanded		
W1	Flow Calibration (Average K)	
Special Inspection		
Standard		Standard
QC1	Visual & Dimensional Inspection with Certificate	★
QC7	Inspection & Performance Certificate	★
Surface Finish		
Standard		Standard
RL	Surface finish for Low Pipe Reynolds # in Gas & Steam	★
RH	Surface finish for High Pipe Reynolds # in Liquid	★
Material Traceability Certification		
Standard		Standard
Q8 ⁽⁵⁾	Material Traceability Certification per EN 10474:2004 3.1	★
Code Conformance ⁽⁶⁾		
Expanded		
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
Materials Conformance		
Expanded		
J5 ⁽⁷⁾	NACE MR-0175 / ISO 15156	
Country Certification		
Standard		Standard
J6	European Pressure Directive (PED)	★
Expanded		
J1	Canadian Registration	
Installed in Flanged Pipe Spool Section		
Expanded		
H3	150# Flanged Connection with Rosemount Standard Length and Schedule	
H4	300# Flanged Connection with Rosemount Standard Length and Schedule	
H5	600# Flanged Connection with Rosemount Standard Length and Schedule	

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Instrument Connections for Remote Mount Options		
Standard		Standard
G2	Needle Valves, Stainless Steel	★
G6	OS&Y Gate Valve, Stainless Steel	★
Expanded		
G1	Needle Valves, Carbon Steel	
G3	Needle Valves, Alloy C-276	
G5	OS&Y Gate Valve, Carbon Steel	
G7	OS&Y Gate Valve, Alloy C-276	
Special Shipment		
Standard		Standard
Y1	Mounting Hardware Shipped Separately	★
Special Dimensions		
Expanded		
VM	Variable Mounting	
VT	Variable Tip	
VS	Variable length Spool Section	
PlantWeb Control Functionality		
Standard		Standard
A01 ⁽⁸⁾	FOUNDATION fieldbus Advanced Control Function Block Suite	★
PlantWeb Diagnostic Functionality		
Standard		Standard
DA0 ⁽⁹⁾⁽¹⁰⁾	Power Advisory HART Diagnostic	★
D01 ⁽⁸⁾	FOUNDATION fieldbus Diagnostics Suite	★
Product Certifications		
Standard		Standard
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E5	FM Explosion-proof, Dust Ignition-proof	★
E7	IECEx Flameproof, Dust Ignition-proof	★
E8	ATEX Flameproof, Dust	★
I1	ATEX Intrinsic Safety	★
I5	FM Intrinsically Safe, Division 2	★
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION fieldbus protocol only	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	★
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	★
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	★
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of K5 and C6)	★
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	★
N1	ATEX Type n	★
Sensor Fill Fluid and O-ring Options		
Standard		Standard
L1	Inert Sensor Fill Fluid <i>Note: Silicone fill fluid is standard.</i>	★
L2	Graphite-Filled (PTFE) O-ring	★
LA	Inert Sensor Fill Fluid and Graphite-Filled (PTFE) O-ring	★

Table 13. Rosemount 3051CFA Annubar Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Shipboard Approvals		
Standard		Standard
SBS	American Bureau of Shipping	★
Display and Interface Options		
Standard		Standard
M4 ⁽¹¹⁾	LCD Display with Local Operator Interface	★
M5	LCD Display	★
Transmitter Calibration Certification		
Standard		Standard
Q4	Calibration Certificate for Transmitter	★
Quality Certification for Safety		
Standard		Standard
QS ⁽¹²⁾	Prior-use certificate of FMEDA data	★
QT ⁽⁹⁾⁽¹⁰⁾	Safety certified to IEC 61508 with certificate of FMEDA	★
Transient Protection		
Standard		Standard
T1 ⁽¹³⁾	Transient terminal block	★
Manifold for Remote Mount Option		
Standard		Standard
F2	3-Valve Manifold, Stainless Steel	★
F6	5-Valve Manifold, Stainless Steel	★
Expanded		
F1	3-Valve Manifold, Carbon Steel	
F3	3-Valve Manifold, Alloy C-276	
F5	5-Valve Manifold, Carbon Steel	
F7	5-Valve Manifold, Alloy C-276	
Alarm Levels		
Standard		Standard
C4 ⁽¹⁰⁾⁽¹⁴⁾	NAMUR Alarm and Saturation Levels, High Alarm	★
CN ⁽¹⁰⁾⁽¹⁴⁾	NAMUR Alarm and Saturation Levels, Low Alarm	★
CR ⁽⁹⁾⁽¹⁰⁾	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)	★
CS ⁽⁹⁾⁽¹⁰⁾	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)	★
CT ⁽⁹⁾⁽¹⁰⁾	Low alarm (standard Rosemount alarm and saturation levels)	★
Configuration Buttons		
Standard		Standard
D4 ⁽¹⁰⁾	Analog Zero and Span	★
DZ ⁽¹⁰⁾	Digital Zero Trim	★
Ground Screw		
Standard		Standard
V5 ⁽¹⁵⁾	External Ground Screw Assembly	★
HART Revision Configuration		
Standard		Standard
HR5 ⁽⁹⁾⁽¹⁰⁾⁽¹⁶⁾	Configured for HART Revision 5	★
HR7 ⁽⁹⁾⁽¹⁰⁾⁽¹⁷⁾	Configured for HART Revision 7	★
Typical Model		
Number: 3051CFA D L 060 D C H P S 2 T1 0 0 0 3 2 A A 1		

-
- (1) Available in remote mount applications only.
 - (2) HART Revision 5 is the default HART output. The Enhanced 3051 can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.
 - (3) Option code M4 - LCD Display with Local Operator Interface required for local addressing and configuration.
 - (4) Applies to assembled flowmeter only, mounting not tested.
 - (5) Instrument Connections for Remote Mount Options and Isolation Valves for Flo-tap Models are not included in the Material Traceability Certification.
 - (6) Not available with Transmitter Connection Platform 6.
 - (7) Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
 - (8) Only valid with FOUNDATION fieldbus Output Code F.
 - (9) Select Configuration Buttons (option code D4 or DZ) or Local Operator Interface (option code M4) if local configuration buttons are required.
 - (10) Only available with 4-20 mA HART output (output Code A).
 - (11) Not available with FOUNDATION fieldbus (Output Code F).
 - (12) Only available with standard 4-20mA HART.
 - (13) The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA.
 - (14) NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field for the standard 3051.
 - (15) The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.
 - (16) Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.
 - (17) Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed



Rosemount 3051CFC Compact Flowmeter

Additional Information

Specifications: [page 101](#)
Certifications: [page 183](#)
Dimensional Drawings: 3

Table 14. Rosemount 3051CFC Compact Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Product Description	
3051CFC	Compact Flowmeter	
Measurement Type		
Standard		Standard
D	Differential Pressure	★
Primary Element Technology		
Standard		Standard
C	Conditioning Orifice Plate	★
P	Orifice Plate	★
Material Type		
Standard		Standard
S	316 SST	★
Line Size		
Standard		Standard
005 ⁽¹⁾	1/2-in. (15 mm)	★
010 ⁽¹⁾	1-in. (25 mm)	★
015 ⁽¹⁾	1 1/2-in. (40 mm)	★
020	2-in. (50 mm)	★
030	3-in. (80 mm)	★
040	4-in. (100 mm)	★
060	6-in. (150 mm)	★
080	8-in. (200 mm)	★
100	10-in. (250 mm)	★
120	12-in. (300 mm)	★
Primary Element Style		
Standard		Standard
N	Square Edged	★
Primary Element Type		
Standard		Standard
040	0.40 Beta Ratio	★
065 ⁽²⁾	0.65 Beta Ratio	★
Temperature Measurement		
Standard		Standard
0	No Temperature Sensor	★
Expanded		
R	Remote Thermowell and RTD	
Transmitter Connection Platform		
Standard		Standard
3	Direct-mount, Integral 3-valve Manifold	★
7	Remote-mount, 1/4-in. NPT Connections	★

Table 14. Rosemount 3051CFC Compact Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Differential Pressure Range			
Standard			Standard
1	0 to 25 in H ₂ O (0 to 62,3 mbar)		★
2	0 to 250 in H ₂ O (0 to 623 mbar)		★
3	0 to 1000 in H ₂ O (0 to 2,5 bar)		★
Transmitter Output			
Standard			Standard
A ⁽³⁾	4–20 mA with digital signal based on HART Protocol		★
F	FOUNDATION fieldbus Protocol		★
W ⁽⁴⁾	Profibus PA Protocol		★
Transmitter Housing Material		Conduit Entry Size	
Standard			Standard
A	Aluminum	1/2-14 NPT	★
B	Aluminum	M20 x 1.5	★
J	SST	1/2-14 NPT	★
K	SST	M20 x 1.5	★
Expanded			
D	Aluminum	G1/2	
M	SST	G1/2	
Transmitter Performance Class			
Standard			Standard
1	Up to ±1.75% flow rate accuracy, 8:1 flow turndown, 5-year stability		★

Options (Include with selected model number)

Installation Accessories			
Standard			Standard
AB	ANSI Alignment Ring (150#) (Only required for 10-in. (250 mm) and 12-in. (300mm) line sizes)		★
AC	ANSI Alignment Ring (300#) (Only required for 10-in. (250 mm) and 12-in. (300mm) line sizes)		★
AD	ANSI Alignment Ring (600#) (Only required for 10-in. (250 mm) and 12-in. (300mm) line sizes)		★
DG	DIN Alignment Ring (PN16)		★
DH	DIN Alignment Ring (PN40)		★
DJ	DIN Alignment Ring (PN100)		★
Expanded			
JB	JIS Alignment Ring (10K)		
JR	JIS Alignment Ring (20K)		
JS	JIS Alignment Ring (40K)		
Remote Adapters			
Standard			Standard
FE	Flange Adapters 316 SST (1/2-in NPT)		★
High Temperature Application			
Expanded			
HT	Graphite Valve Packing (Tmax = 850 °F)		
Flow Calibration			
Expanded			
WC ⁽⁵⁾	Flow Calibration Certification (3 point)		
WD ⁽⁵⁾	Discharge Coefficient Verification (full 10 point)		
Pressure Testing			
Expanded			
P1	Hydrostatic Testing with Certificate		

Table 14. Rosemount 3051CFC Compact Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Special Cleaning		
Expanded		
P2	Cleaning for Special Services	
PA	Cleaning per ASTM G93 Level D (Section 11.4)	
Special Inspection		
Standard		Standard
QC1	Visual & Dimensional Inspection with Certificate	★
QC7	Inspection and Performance Certificate	★
Transmitter Calibration Certification		
Standard		Standard
Q4	Calibration Certificate for Transmitter	★
Quality Certification for Safety		
Standard		Standard
QS ⁽⁶⁾	Prior-use certificate of FMEDA data	★
QT ⁽⁷⁾⁽⁸⁾	Safety certified to IEC 61508 with certificate of FMEDA	★
Material Traceability Certification		
Standard		Standard
Q8	Material Traceability Certification per EN 10204:2004 3.1	★
Code Conformance		
Expanded		
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
J4	ANSI/ASME B31.8	
Materials Conformance		
Expanded		
J5 ⁽⁹⁾	NACE MR-0175 / ISO 15156	
Country Certification		
Expanded		
J1	Canadian Registration	
Product Certifications		
Standard		Standard
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E5	FM Explosion-proof, Dust Ignition-proof	★
E7	IECEx Flameproof, Dust Ignition-proof	★
E8	ATEX Flameproof, Dust	★
I1	ATEX Intrinsic Safety	★
I5	FM Intrinsically Safe, Division 2	★
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION fieldbus protocol only	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	★
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	★
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	★
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of K5 and C6)	★
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	★
N1	ATEX Type n	★
Sensor Fill Fluid and O-ring Options		
Standard		Standard
L1	Inert Sensor Fill Fluid	★
L2	Graphite-Filled (PTFE) O-ring	★
LA	Inert Sensor Fill Fluid and Graphite-Filled (PTFE) O-ring	★

Table 14. Rosemount 3051CFC Compact Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Shipboard Approvals		
Standard		Standard
SBS	American Bureau of Shipping	★
Display and Interface Options		
Standard		Standard
M4 ⁽¹⁰⁾	LCD Display with Local Operator Interface	★
M5	LCD Display	★
Transient Protection		
Standard		Standard
T1 ⁽¹¹⁾	Transient terminal block	★
Manifold for Remote Mount Option		
Standard		Standard
F2	3-Valve Manifold, Stainless Steel	★
F6	5-Valve Manifold, Stainless Steel	★
PlantWeb Control Functionality		
Standard		Standard
A01 ⁽¹²⁾	FOUNDATION fieldbus Advanced Control Function Block Suite	★
PlantWeb Diagnostic Functionality		
Standard		Standard
DA0 ⁽⁶⁾⁽¹³⁾	Power Advisory HART Diagnostic	★
D01 ⁽⁸⁾⁽¹²⁾	FOUNDATION fieldbus Diagnostic Suite	★
Alarm Limit		
Standard		Standard
C4 ⁽⁶⁾⁽⁸⁾	NAMUR Alarm and Saturation Levels, High Alarm	★
CN ⁽⁶⁾⁽⁸⁾	NAMUR Alarm and Saturation Levels, Low Alarm	★
CR ⁽¹³⁾⁽⁶⁾	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)	★
CS ⁽¹³⁾⁽⁶⁾	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)	★
CT ⁽¹³⁾⁽⁶⁾	Low alarm (standard Rosemount alarm and saturation levels)	★
Ground Screw		
Standard		Standard
V5 ⁽¹⁴⁾	External Ground Screw Assembly	★
Configuration Buttons		
Standard		Standard
D4 ⁽⁶⁾	Analog Zero and Span	★
DZ ⁽⁶⁾⁽¹³⁾	Digital Zero Trim	★
HART Revision Configuration		
Standard		Standard
HR5 ⁽⁶⁾⁽¹³⁾⁽¹⁵⁾	Configured for HART Revision 5	★
HR7 ⁽⁶⁾⁽¹³⁾⁽¹⁶⁾	Configured for HART Revision 7	★
Typical Model Number: 3051CFC D C S 060 N 065 0 3 2 A A 1 WC E5 M5		

(1)Not available for Primary Element Technology C.

(2)For 2-in. (50 mm) line sizes the Primary Element Type is 0.6 for Primary Element Technology Code C.

(3)HART Revision 5 is the default HART output. The Enhanced 3051 can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.

(4)Option code M4 - LCD Display with Local Operator Interface required for local addressing and configuration.

(5)Not available with Primary Element Technology P.

(6)Only available with standard 3051 4-20mA HART.

(7)Only available with 4-20 mA HART Output.

(8)NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field for the standard 3051.

(9)Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

(10)NOT AVAILABLE WITH OUTPUT CODE F - FOUNDATION FIELDBUS.

(11)The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA.

(12)Only valid with FOUNDATION fieldbus Output Code F.

(13)Select Configuration Buttons (option code D4 or DZ) or Local Operator Interface (option code M4) if local configuration buttons are required.

(14)The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.

(15)Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.

(16)Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.



Rosemount 3051CFP Integral Orifice Flowmeter

Additional Information

Specifications: [page 101](#)
Certifications: [page 183](#)
Dimensional Drawings: [page 115](#)

Table 15. Rosemount 3051CFP Integral Orifice Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Model	Product Description	
3051CFP	Integral Orifice Flowmeter	
Measurement Type		
Standard		Standard
D	Differential Pressure	★
Body Material		
Standard		Standard
S	316 SST	★
Line Size		
Standard		Standard
005	1/2-in. (15 mm)	★
010	1-in. (25 mm)	★
015	1 1/2-in. (40 mm)	★
Process Connection		
Standard		Standard
T1	NPT Female Body (Not Available with Remote Thermowell and RTD)	★
S1 ⁽¹⁾	Socket Weld Body (Not Available with Remote Thermowell and RTD)	★
P1	Pipe Ends: NPT Threaded	★
P2	Pipe ends: Beveled	★
D1	Pipe Ends: Flanged, DIN PN16, slip-on	★
D2	Pipe Ends: Flanged, DIN PN40, slip-on	★
D3	Pipe Ends: Flanged, DIN PN100, slip-on	★
W1	Pipe Ends: Flanged, RF, ANSI Class 150, weld-neck	★
W3	Pipe Ends: Flanged, RF, ANSI Class 300, weld-neck	★
W6	Pipe Ends: Flanged, RF, ANSI Class 600, weld-neck	★
Expanded		
A1	Pipe Ends: Flanged, RF, ANSI Class 150, slip-on	
A3	Pipe Ends: Flanged, RF, ANSI Class 300, slip-on	
A6	Pipe Ends: Flanged, RF, ANSI Class 600, slip-on	
R1	Pipe Ends: Flanged, RTJ, ANSI Class 150, slip-on	
R3	Pipe Ends: Flanged, RTJ, ANSI Class 300, slip-on	
R6	Pipe Ends: Flanged, RTJ, ANSI Class 600, slip-on	
Orifice Plate Material		
Standard		Standard
S	316 SST	★

Table 15. Rosemount 3051CFP Integral Orifice Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Expanded		
H	Alloy C-276	
M	Alloy 400	
Bore Size Option		
Standard		Standard
0066	0.066-in. (1.68 mm) for 1/2-in. Pipe	★
0109	0.109-in. (2.77 mm) for 1/2-in. Pipe	★
0160	0.160-in. (4.06 mm) for 1/2-in. Pipe	★
0196	0.196-in. (4.98 mm) for 1/2-in. Pipe	★
0260	0.260-in. (6.60 mm) for 1/2-in. Pipe	★
0340	0.340-in. (8.64 mm) for 1/2-in. Pipe	★
0150	0.150-in. (3.81 mm) for 1-in. Pipe	★
0250	0.250-in. (6.35 mm) for 1-in. Pipe	★
0345	0.345-in. (8.76 mm) for 1-in. Pipe	★
0500	0.500-in. (12.70 mm) for 1-in. Pipe	★
0630	0.630-in. (16.00 mm) for 1-in. Pipe	★
0800	0.800-in. (20.32 mm) for 1-in. Pipe	★
0295	0.295-in. (7.49 mm) for 1 1/2-in. Pipe	★
0376	0.376-in. (9.55 mm) for 1 1/2-in. Pipe	★
0512	0.512-in. (13.00 mm) for 1 1/2-in. Pipe	★
0748	0.748-in. (19.00 mm) for 1 1/2-in. Pipe	★
1022	1.022-in. (25.96 mm) for 1 1/2-in. Pipe	★
1184	1.184-in. (30.07 mm) for 1 1/2-in. Pipe	★
Expanded		
0010	0.010-in. (0.25 mm) for 1/2-in. Pipe	
0014	0.014-in. (0.36 mm) for 1/2-in. Pipe	
0020	0.020-in. (0.51 mm) for 1/2-in. Pipe	
0034	0.034-in. (0.86 mm) for 1/2-in. Pipe	
Transmitter Connection Platform		
Standard		Standard
D3	Direct-mount, 3-Valve Manifold, SST	★
D5	Direct-mount, 5-Valve Manifold, SST	★
R3	Remote-mount, 3-Valve Manifold, SST	★
R5	Remote-mount, 5-Valve Manifold, SST	★
Expanded		
D4	Direct-mount, 3-Valve Manifold, Alloy C-276	
D6	Direct-mount, 5-Valve Manifold, Alloy C-276	
D7	Direct-mount, High Temperature, 5-Valve Manifold, SST	
R4	Remote-mount, 3-Valve Manifold, Alloy C-276	
R6	Remote-mount, 5-Valve Manifold, Alloy C-276	
Differential Pressure Ranges		
Standard		Standard
1	0 to 25 in H ₂ O (0 to 62,3 mbar)	★
2	0 to 250 in H ₂ O (0 to 623 mbar)	★
3	0 to 1000 in H ₂ O (0 to 2,5 bar)	★

Table 15. Rosemount 3051CFP Integral Orifice Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Transmitter Output			
Standard			Standard
A ⁽²⁾	4–20 mA with digital signal based on HART Protocol		★
F	FOUNDATION fieldbus Protocol		★
W ⁽³⁾	Profibus PA Protocol		★
Transmitter Housing Material		Conduit Entry Size	
Standard			Standard
A	Aluminum	1/2-14 NPT	★
B	Aluminum	M20 x 1.5	★
J	SST	1/2-14 NPT	★
K	SST	M20 x 1.5	★
Expanded			
D	Aluminum	G1/2	
M	SST	G1/2	
Transmitter Performance Class			
Standard			Standard
1	up to ±1.75% flow rate accuracy, 8:1 flow turndown, 5-year stability		★

Options (Include with selected model number)

Transmitter Body / Bolt Material		
Expanded		
GT	High Temperature (850 °F / 454 °C)	
Temperature Sensor		
Expanded		
RT ⁽⁴⁾	Thermowell and RTD	
Optional Connection		
Standard		Standard
G1	DIN 19213 Transmitter Connection	★
Pressure Testing		
Expanded		
P1 ⁽⁵⁾	Hydrostatic Testing with Certificate	
Special Cleaning		
Expanded		
P2	Cleaning for Special Services	
PA	Cleaning per ASTM G93 Level D (Section 11.4)	
Material Testing		
Expanded		
V1	Dye Penetrant Exam	
Material Examination		
Expanded		
V2	Radiographic Examination	
Flow Calibration		
Expanded		
WD ⁽⁶⁾	Discharge Coefficient Verification	

Table 15. Rosemount 3051CFP Integral Orifice Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Special Inspection		
Standard		Standard
QC1	Visual & Dimensional Inspection with Certificate	★
QC7	Inspection and Performance Certificate	★
Material Traceability Certification		
Standard		Standard
Q8	Material Traceability Certification per EN 10204:2004 3.1	★
Code Conformance		
Expanded		
J2 ⁽⁷⁾	ANSI/ASME B31.1	
J3 ⁽⁷⁾	ANSI/ASME B31.3	
J4 ⁽⁷⁾	ANSI/ASME B31.8	
Materials Conformance		
Expanded		
J5 ⁽⁸⁾	NACE MR-0175 / ISO 15156	
Country Certification		
Standard		Standard
J6	European Pressure Directive (PED)	★
Expanded		
J1	Canadian Registration	
Transmitter Calibration Certification		
Standard		Standard
Q4	Calibration Certificate for Transmitter	★
Quality Certification for Safety		
Standard		Standard
QS ⁽⁹⁾	Prior-use certificate of FMEDA data	★
QT ^{(10) (11)}	Safety certified to IEC 61508 with certificate of FMEDA	★
Product Certifications		
Standard		Standard
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E5	FM Explosion-proof, Dust Ignition-proof	★
E7	IECEx Flameproof, Dust Ignition-proof	★
E8	ATEX Flameproof, Dust	★
I1	ATEX Intrinsic Safety	★
I5	FM Intrinsically Safe, Division 2	★
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION fieldbus protocol only	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	★
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	★
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	★
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of K5 and C6)	★
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1 and E8)	★
N1	ATEX Type n	★

Table 15. Rosemount 3051CFP Integral Orifice Flowmeter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Sensor Fill Fluid and O-ring Options			
Standard			Standard
L1	Inert Sensor Fill Fluid		★
L2	Graphite-Filled (PTFE) O-ring		★
LA	Inert Sensor Fill Fluid and Graphite-Filled (PTFE) O-ring		★
Shipboard Approvals			
Standard			Standard
SBS	American Bureau of Shipping		★
Display and Interface Options			
Standard			Standard
M4 ⁽¹²⁾	LCD Display with Local Operator Interface		★
M5	LCD Display		★
Transient Protection			
Standard			Standard
T1 ⁽¹³⁾	Transient terminal block		★
PlantWeb Control Functionality			
Standard			Standard
A01 ⁽¹⁴⁾	FOUNDATION fieldbus Advanced Control Function Block Suite		★
PlantWeb Diagnostic Functionality			
Standard			Standard
DA0 ⁽¹⁰⁾⁽¹¹⁾	Power Advisory HART Diagnostic		★
D01 ⁽¹⁴⁾	FOUNDATION fieldbus Diagnostic Suite		★
Alarm Limit			
Standard			Standard
C4 ⁽¹⁰⁾⁽¹⁵⁾	NAMUR Alarm and Saturation Levels, High Alarm		★
CN ⁽¹⁰⁾⁽¹⁵⁾	NAMUR Alarm and Saturation Levels, Low Alarm		★
CR ⁽¹⁰⁾⁽¹¹⁾	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)		★
CS ⁽¹⁰⁾⁽¹¹⁾	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)		★
CT ⁽¹⁰⁾⁽¹¹⁾	Low alarm (standard Rosemount alarm and saturation levels)		★
Ground Screw			
Standard			Standard
V5 ⁽¹⁶⁾	External Ground Screw Assembly		★
Configuration Buttons			
Standard			Standard
D4 ⁽¹⁰⁾	Analog Zero and Span		★
DZ ⁽¹⁰⁾	Digital Zero Trim		★
HART Revision Configuration			
Standard			Standard
HR5 ⁽¹⁰⁾⁽¹¹⁾⁽¹⁷⁾	Configured for HART Revision 5		★
HR7 ⁽¹⁰⁾⁽¹¹⁾⁽¹⁸⁾	Configured for HART Revision 7		★
Typical Model Number: 3051CFP D S 010 W1 S 0500 D3 2 A A 1 E5 M5			

(1) To improve pipe perpendicularity for gasket sealing, socket diameter is smaller than standard pipe O.D.

(2) HART Revision 5 is the default HART output. The Enhanced 3051 can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.

(3) Option code M4 - LCD Display with Local Operator Interface required for local addressing and configuration.

(4) Thermowell Material is the same as the body material.

-
- (5) Does not apply to Process Connection codes T1 and S1.
- (6) Not available for bore sizes 0010, 0014, 0020, or 0034.
- (7) Not available with DIN Process Connection codes D1, D2, or D3.
- (8) Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- (9) Only available with standard 3051 4-20mA HART.
- (10) Only available with 4-20 mA HART output (Option code A).
- (11) Select Configuration Buttons (option code D4 or DZ) or Local Operator Interface (option code M4) if local configuration buttons are required.
- (12) Not available with FOUNDATION fieldbus (Output Code F).
- (13) The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA.
- (14) Only valid with FOUNDATION fieldbus Output Code F.
- (15) NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.
- (16) The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.
- (17) Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.
- (18) Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.

A.6.4 Rosemount 3051L Level Transmitter



3051L Level Transmitter

This ordering table contains the following Rosemount 3051L configurations:

Configuration	Transmitter Output Code
4-20 mA HART® -3051 -Enhanced 3051 ⁽¹⁾	A
FOUNDATION™ fieldbus	F
Profibus	W

⁽¹⁾The enhanced 4-20 mA HART device can be ordered with Transmitter Output option code A plus any of the following new option codes: DA0, M4, QT, DZ, CR, CS, CT, HR5, HR7.

See Specifications and Options for more details on each configuration.

Additional Information

Specifications: [page 101](#)

Certifications: [page 183](#)

Dimensional Drawings: [page 115](#)

Table 16. Rosemount 3051L Level Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter Type			
3051L	Level Transmitter			
Pressure Range				
Standard				Standard
2	–250 to 250 inH ₂ O (–0,6 to 0,6 bar)			★
3	–1000 to 1000 inH ₂ O (–2,5 to 2,5 bar)			★
4	–300 to 300 psi (–20,7 to 20,7 bar)			★
Transmitter Output				
Standard				Standard
A ⁽¹⁾	4–20 mA with Digital Signal Based on <i>HART</i> Protocol			★
F	FOUNDATION fieldbus Protocol			★
W ⁽²⁾	Profibus PA Protocol			★
Process Connection Size, Material, Extension length (High Side)				
Standard				Standard
Code	Process Connection Size	Material	Extension Length	
G0 ⁽³⁾	2-in./DN 50/A	316L SST	Flush Mount Only	★
H0 ⁽³⁾	2-in./DN 50	Alloy C-276	Flush Mount Only	★
J0	2-in./DN 50	Tantalum	Flush Mount Only	★
A0 ⁽³⁾	3-in./DN 80	316L SST	Flush Mount	★
A2 ⁽³⁾	3-in./DN 80	316L SST	2-in./50 mm	★
A4 ⁽³⁾	3-in./DN 80	316L SST	4-in./100 mm	★

Table 16. Rosemount 3051L Level Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Standard				Standard
Code	Process Connection Size	Material	Extension Length	
A6 ⁽³⁾	3-in./DN 80	316L SST	6-in./150 mm	★
B0 ⁽³⁾	4-in./DN 100	316L SST	Flush Mount	★
B2 ⁽³⁾	4-in./DN 100	316L SST	2-in./50 mm	★
B4 ⁽³⁾	4-in./DN 100	316L SST	4-in./100 mm	★
B6 ⁽³⁾	4-in./DN 100	316L SST	6-in./150 mm	★
C0 ⁽³⁾	3-in./DN 80	Alloy C-276	Flush Mount	★
C2 ⁽³⁾	3-in./DN 80	Alloy C-276	2-in./50 mm	★
C4 ⁽³⁾	3-in./DN 80	Alloy C-276	4-in./100 mm	★
C6 ⁽³⁾	3-in./DN 80	Alloy C-276	6-in./150 mm	★
D0 ⁽³⁾	4-in./DN 100	Alloy C-276	Flush Mount	★
D2 ⁽³⁾	4-in./DN 100	Alloy C-276	2-in./50 mm	★
D4 ⁽³⁾	4-in./DN 100	Alloy C-276	4-in./100 mm	★
D6 ⁽³⁾	4-in./DN 100	Alloy C-276	6-in./150 mm	★
E0	3-in./DN 80	Tantalum	Flush Mount Only	★
F0	4-in./DN 100	Tantalum	Flush Mount Only	★
Mounting Flange Size, Rating, Material (High Side)				
	Size	Rating	Material	
Standard				Standard
M	2-in.	ANSI/ASME B16.5 Class 150	CS	★
A	3-in.	ANSI/ASME B16.5 Class 150	CS	★
B	4-in.	ANSI/ASME B16.5 Class 150	CS	★
N	2-in.	ANSI/ASME B16.5 Class 300	CS	★
C	3-in.	ANSI/ASME B16.5 Class 300	CS	★
D	4-in.	ANSI/ASME B16.5 Class 300	CS	★
P	2-in.	ANSI/ASME B16.5 Class 600	CS	★
E	3-in.	ANSI/ASME B16.5 Class 600	CS	★
X ⁽³⁾	2-in.	ANSI/ASME B16.5 Class 150	SST	★
F ⁽³⁾	3-in.	ANSI/ASME B16.5 Class 150	SST	★
G ⁽³⁾	4-in.	ANSI/ASME B16.5 Class 150	SST	★
Y ⁽³⁾	2-in.	ANSI/ASME B16.5 Class 300	SST	★
H ⁽³⁾	3-in.	ANSI/ASME B16.5 Class 300	SST	★
J ⁽³⁾	4-in.	ANSI/ASME B16.5 Class 300	SST	★
Z ⁽³⁾	2-in.	ANSI/ASME B16.5 Class 600	SST	★
L ⁽³⁾	3-in.	ANSI/ASME B16.5 Class 600	SST	★
Q	DN 50	PN 10-40 per EN 1092-1	CS	★
R	DN 80	PN 40 per EN 1092-1	CS	★
S	DN 100	PN 40 per EN 1092-1	CS	★
V	DN 100	PN 10/16 per EN 1092-1	CS	★
K ⁽³⁾	DN 50	PN 10-40 per EN 1092-1	SST	★
T ⁽³⁾	DN 80	PN 40 per EN 1092-1	SST	★
U ⁽³⁾	DN 100	PN 40 per EN 1092-1	SST	★
W ⁽³⁾	DN 100	PN 10/16 per EN 1092-1	SST	★
7 ⁽³⁾	4 in.	ANSI/ASME B16.5 Class 600	SST	★

Table 16. Rosemount 3051L Level Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Expanded					
1	—	10K per JIS B2238		CS	
2	—	20K per JIS B2238		CS	
3	—	40K per JIS B2238		CS	
4 ⁽³⁾	—	10K per JIS B2238		316 SST	
5 ⁽³⁾	—	20K per JIS B2238		316 SST	
6 ⁽³⁾	—	40K per JIS B2238		316 SST	
Seal Fill Fluid (High Side)		Specific Gravity	Temperature Limits (Ambient Temperature of 70° F (21° C))		
Standard					Standard
A	Syltherm XLT	0.85	-102 to 293 °F (-75 to 145 °C)		★
C	Silicone 704	1.07	32 to 401 °F (0 to 205 °C)		★
D	Silicone 200	0.93	-49 to 401 °F (-45 to 205 °C)		★
H	Inert (Halocarbon)	1.85	-49 to 320 °F (-45 to 160 °C)		★
G	Glycerine and Water	1.13	5 to 203 °F (-15 to 95 °C)		★
N	Neobee M-20	0.92	5 to 401 °F (-15 to 205 °C)		★
P	Propylene Glycol and Water	1.02	5 to 203 F (-15 to 95 °C)		★
Low Pressure Side					
	Configuration	Flange Adapter	Diaphragm Material	Sensor Fill Fluid	
Standard					Standard
11 ⁽³⁾	Gage	SST	316L SST	Silicone	★
21 ⁽³⁾	Differential	SST	316L SST	Silicone	★
22 ⁽³⁾	Differential	SST	Alloy C-276	Silicone	★
2A ⁽³⁾	Differential	SST	316L SST	Inert (Halocarbon)	★
2B ⁽³⁾	Differential	SST	Alloy C-276	Inert (Halocarbon)	★
31 ⁽³⁾	Tuned-System Assembly with Remote Seal	None	316L SST	Silicone (Requires Option Code S1)	★
O-ring					
Standard					Standard
A	Glass-filled PTFE				★
Housing Material			Conduit Entry Size		
Standard					Standard
A	Aluminum		½–14 NPT		★
B	Aluminum		M20 × 1.5		★
J	SST		½–14 NPT		★
K	SST		M20 × 1.5		★
Expanded					
D	Aluminum		G½		
M	SST		G½		

Table 16. Rosemount 3051L Level Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Options (Include with selected model number)

PlantWeb Control Functionality		
Standard		Standard
A01 ⁽⁴⁾	FOUNDATION fieldbus Advanced Control Function Block Suite	★
PlantWeb Diagnostic Functionality		
Standard		Standard
DA0 ⁽⁵⁾ ⁽⁶⁾	Power Advisory HART Diagnostic	★
D01 ⁽⁴⁾	FOUNDATION fieldbus Diagnostics Suite	★
Seal Assemblies		
Standard		Standard
S1 ⁽⁷⁾	Assembled to One Rosemount 1199 Seal (Requires 1199M)	★
Product Certifications		
Standard		Standard
E5	FM Explosion-proof, Dust Ignition-proof	★
I5	FM Intrinsically Safe, Division 2	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2	★
I1	ATEX Intrinsic Safety and Dust	★
N1	ATEX Type n Certification and Dust	★
E8	ATEX Flameproof and Dust Certification	★
E4	TIIS Flameproof	★
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2	★
K6	CSA and ATEX Explosion-proof, Intrinsically Safe, and Division 2 (combination of C6 and K8)	★
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of K5 and C6)	★
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of I7, N7 and E7)	★
K8	ATEX Flame-proof and Intrinsic Safety Approvals (combination of I1 and E8)	★
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	★
I7	IECEx Intrinsic Safety	★
E7	IECEx Flameproof, Dust Ignition-proof	★
N7	IECEx Type n Certification	★
IA	ATEX FISCO Intrinsic Safety	★
IE	FM FISCO Intrinsically Safe	★
E2	INMETRO Flameproof	★
I2	INMETRO Intrinsic Safety	★
K2	INMETRO Flameproof, Intrinsic Safety	★
E3	China Flameproof	★
I3	China Intrinsic Safety	★
N3	China Type n	★
Shipboard Approvals		
Standard		Standard
SBS	American Bureau of Shipping	★

Table 16. Rosemount 3051L Level Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Bolting Material		
Standard		Standard
L4	Austenitic 316 SST Bolts	★
L5	ASTM A 193, Grade B7M bolts	★
L6	Alloy K-500 Bolts	★
L8	ASTM A 193 Class 2, Grade B8M Bolts	★
Display and Interface Options		
Standard		Standard
M4 ⁽⁸⁾	LCD Display with Local Operator Interface	★
M5	LCD Display	★
Calibration Certification		
Standard		Standard
Q4	Calibration Certificate	★
QP	Calibration Certificate and tamper evident seal	★
QG	Calibration Certificate and GOST Verification Certificate	★
Material Traceability Certification		
Standard		Standard
Q8	Material Traceability Certification per EN 10204 3.1	★
Quality Certification for Safety		
Standard		Standard
QS ⁽⁹⁾	Prior-use certificate of FMEDA data	★
QT ⁽⁵⁾⁽⁶⁾	Safety certified to IEC 61508 with certificate of FMEDA	★
Toolkit Total System Performance Reports		
Standard		Standard
QZ	Remote Seal System Performance Calculation Report	★
Conduit Electrical Connector		
Standard		Standard
GE	M12, 4-pin, Male Connector (eurofast®)	★
GM	A size Mini, 4-pin, Male Connector (minifast®)	★
Configuration Buttons		
Standard		Standard
D4 ⁽⁶⁾	Analog Zero and Span	★
DZ ⁽⁶⁾	Digital Zero Trim	★
Transient Protection		
Standard		Standard
T1 ⁽¹⁰⁾	Transient Protection	★
Software Configuration		
Standard		Standard
C1 ⁽⁶⁾	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	★

Table 16. Rosemount 3051L Level Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Alarm Levels				
Standard				Standard
C4 ⁽⁶⁾⁽¹¹⁾	NAMUR alarm and saturation levels, high alarm			★
CN ⁽⁶⁾⁽¹¹⁾	NAMUR alarm and saturation levels, low alarm			★
CR ⁽⁵⁾⁽⁶⁾	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)			★
CS ⁽⁵⁾⁽⁶⁾	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)			★
CT ⁽⁵⁾⁽⁶⁾	Low alarm (standard Rosemount alarm and saturation levels)			★
Conduit Plug				
Standard				Standard
DO	316 SST Conduit Plug			★
Ground Screw				
Standard				Standard
V5 ⁽¹²⁾	External Ground Screw Assembly			★
Lower Housing Flushing Connection Options				
	Ring Material	Number	Size (NPT)	
Standard				Standard
F1	316 SST	1	1/4-18 NPT	★
F2	316 SST	2	1/4-18 NPT	★
F3	Alloy C-276	1	1/4-18 NPT	★
F4	Alloy C-276	2	1/4-18 NPT	★
F7	316 SST	1	1/2-14 NPT	★
F8	316 SST	2	1/2-14 NPT	★
F9	Alloy C-276	1	1/2-14 NPT	★
F0	Alloy C-276	2	1/2-14 NPT	★
HART Revision Configuration				
Standard				Standard
HR5 ⁽⁵⁾⁽⁶⁾⁽¹³⁾	Configured for HART Revision 5			★
HR7 ⁽⁵⁾⁽⁶⁾⁽¹⁴⁾	Configured for HART Revision 7			★
Typical Model Number: 3051L 2 A A0 D 21 A A F1				

(1) HART Revision 5 is the default HART output. The Enhanced 3051 can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.

(2) Option code M4 - LCD Display with Local Operator Interface required for local addressing and configuration.

(3) Materials of Construction comply with metallurgical requirements highlighted within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

(4) Only valid with FOUNDATION fieldbus Output Code F.

(5) Select Configuration Buttons (option code D4 or DZ) or Local Operator Interface (option code M4) if local configuration buttons are required.

(6) Only available with HART 4-20 mA output (output code A).

(7) "Assemble-to" items are specified separately and require a completed model number.

(8) Not available with FOUNDATION fieldbus (Output Code F).

(9) Only available with standard 3051 4-20mA HART.

- (10)The T1 option is not needed with FISCO Product Certifications; transient protection is included in the FISCO product certification codes IA, IE, IF, and IG.*
- (11)NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.*
- (12)The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.*
- (13)Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.*
- (14)Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.*

A.7 Options

Standard configuration

Unless otherwise specified, transmitter is shipped as follows:

Engineering units	
Differential/Gage:	inH ₂ O (Range 0, 1, 2, and 3) psi (Range 4 and 5) psi (all ranges)
Absolute/3051TA:	
4 mA:	0 (engineering units above)
20 mA:	Upper range limit
Output:	Linear
Flange type:	Specified model code option
Flange material:	Specified model code option
O-ring material:	Specified model code option
Drain/vent:	Specified model code option
LCD Display:	Installed or none
Alarm:	High
Software tag:	(Blank)

Custom configuration

If Option Code C1 is ordered, the customer may specify the following data in addition to the standard configuration parameters.

- Output Information
- Transmitter Information
- LCD Display Configuration
- Hardware Selectable Information
- Signal Selection

Refer to the “Rosemount Enhanced 3051 Configuration Data Sheet” document number 00806-0100-4007.

Tagging (3 options available)

- Standard SST hardware tag is wired to the transmitter. Tag character height is 0.125 in. (3,18 mm), 56 characters maximum.
- Tag may be permanently stamped on transmitter nameplate upon request, 56 characters maximum.
- Tag may be stored in transmitter memory. Character limit is dependent on protocol.
 - HART Revision 5: 8 characters
 - HART Revision 7: 32 characters

Optional Rosemount 304, 305, or 306 Integral Manifolds

Factory assembled to 3051C and 3051T transmitters. Refer to the following Product Data Sheet (document number 00813-0100-4839 for Rosemount 304 and 00813-0100-4733 for Rosemount 305 and 306) for additional information.

Other seals

Refer to Product Data Sheet 00813-0100-4016 for additional information.

Output information

Output range points must be the same unit of measure. Available units of measure include:

Pressure			
atm	inH ₂ O@4 °C	g/cm ²	psi
mbar	mmH ₂ O	kg/cm ²	torr
bar	mmHg	Pa	cmH ₂ O@4 °C
inH ₂ O	mmH ₂ O@4 °C	kPa	cmHG@0 °C
inHg	ftH ₂ O	MPa	ftH ₂ O@60 °F
hPa	inH ₂ O@60 °F	kg/SqM	mH ₂ O@4 °C
mHg@0 °C	Psf	ftH ₂ O@4 °C	

Display and interface options

Both display options provide diagnostic messages for local troubleshooting and have 90-degree rotation capability for easy viewing.

M4⁽¹⁾ Digital Display with Local Operator Interface (LOI)

- Commission the device with internal and external Local Configuration Buttons⁽¹⁾

M5 Digital Display

- 2-Line, 5-Digit LCD for 4-20 mA HART

Configuration buttons

Enhanced Rosemount 3051 requires option D4 (Analog Zero and Span), DZ (Digital Zero), or M4 (LOI) for local configuration buttons.

Transient protection

T1 Integral Transient Protection Terminal Block
Meets IEEE C62.41, Category Location B

6 kV crest (0.5 ms - 100 kHz)

3 kA crest (8 × 20 microseconds)

6 kV crest (1.2 × 50 microseconds)

Bolts for flanges and adapters

- Options permit bolts for flanges and adapters to be obtained in various materials
- Standard material is plated carbon steel per ASTM A449, Type 1

(1) LOI configuration buttons will be internal when either D4 or DZ option codes are ordered.

L4 Austenitic 316 Stainless Steel Bolts

L5 ASTM A 193, Grade B7M Bolts

L6 Alloy K-500 Bolts

Conduit plug

DO 316 SST Conduit Plug

Single 316 SST conduit plug replaces carbon steel plug

Rosemount 3051C Coplanar Flange and 3051T bracket option

B4 Bracket for 2-in. Pipe or Panel Mounting

- For use with the standard Coplanar flange configuration
- Bracket for mounting of transmitter on 2-in. pipe or panel
- Stainless steel construction with stainless steel bolts

Rosemount 3051C Traditional Flange bracket options

B1 Bracket for 2-in. Pipe Mounting

- For use with the traditional flange option
- Bracket for mounting on 2-in. pipe
- Carbon steel construction with carbon steel bolts
- Coated with polyurethane paint

B2 Bracket for Panel Mounting

- For use with the traditional flange option
- Bracket for mounting transmitter on wall or panel
- Carbon steel construction with carbon steel bolts
- Coated with polyurethane paint

B3 Flat Bracket for 2-in. Pipe Mounting

- For use with the traditional flange option
- Bracket for vertical mounting of transmitter on 2-in. pipe
- Carbon steel construction with carbon steel bolts
- Coated with polyurethane paint

B7 B1 Bracket with SST Bolts

- Same bracket as the B1 option with Series 300 stainless steel bolts

B8 B2 Bracket with SST Bolts

- Same bracket as the B2 option with Series 300 stainless steel bolts

B9 B3 Bracket with SST Bolts

- Same bracket as the B3 option with Series 300 stainless steel bolts

BA Stainless Steel B1 Bracket with SST Bolts

- B1 bracket in stainless steel with Series 300 stainless steel bolts

BC Stainless Steel B3 Bracket with SST Bolts

- B3 bracket in stainless steel with Series 300 stainless steel bolts

Shipping weights

Table 17. Transmitter weights without options

Transmitter	Add weight In lb (kg)
3051C	6.0 (2,7)
3051L	Table 18
3051T	3.0 (1,4)

Table 18. 3051L weights without options

Flange	Flush lb. (kg)	2-in. Ext. lb (kg)	4-in. Ext. lb (kg)	6-in. Ext. lb (kg)
2-in., 150	12.5 (5,7)	—	—	—
3-in., 150	17.5 (7,9)	19.5 (8,8)	20.5 (9,3)	21.5 (9,7)
4-in., 150	23.5 (10,7)	26.5 (12,0)	28.5 (12,9)	30.5 (13,8)
2-in., 300	17.5 (7,9)	—	—	—
3-in., 300	22.5 (10,2)	24.5 (11,1)	25.5 (11,6)	26.5 (12,0)
4-in., 300	32.5 (14,7)	35.5 (16,1)	37.5 (17,0)	39.5 (17,9)
2-in., 600	15.3 (6,9)	—	—	—
3-in., 600	25.2 (11,4)	27.2 (12,3)	28.2 (12,8)	29.2 (13,2)
DN 50/PN 40	13.8 (6,2)	—	—	—
DN 80/PN 40	19.5 (8,8)	21.5 (9,7)	22.5 (10,2)	23.5 (10,6)
DN 100/PN 10/16	17.8 (8,1)	19.8 (9,0)	20.8 (9,5)	21.8 (9,9)
DN 100/PN 40	23.2 (10,5)	25.2 (11,5)	26.2 (11,9)	27.2 (12,3)

Table 19. Transmitter options weights

Code	Option	Add lb (kg)
J, K, L, M	Stainless Steel Housing (T)	3.9 (1,8)
J, K, L, M	Stainless Steel Housing (C, L, H, P)	3.1 (1,4)
M5	LCD Display for Aluminum Housing	0.5 (0,2)
M6	LCD Display for SST Housing	1.25 (0,6)
B4	SST Mounting Bracket for Coplanar Flange	1.0 (0,5)
B1 B2 B3	Mounting Bracket for Traditional Flange	2.3 (1,0)
B7 B8 B9	Mounting Bracket for Traditional Flange	2.3 (1,0)
BA, BC	SST Bracket for Traditional Flange	2.3 (1,0)
H2	Traditional Flange	2.4 (1,1)
H3	Traditional Flange	2.7 (1,2)
H4	Traditional Flange	2.6 (1,2)
H7	Traditional Flange	2.5 (1,1)
FC	Level Flange—3 in., 150	10.8 (4,9)
FD	Level Flange—3 in., 300	14.3 (6,5)
FA	Level Flange—2 in., 150	10.7 (4,8)
FB	Level Flange—2 in., 300	14.0 (6,3)
FP	DIN Level Flange, SST, DN 50, PN 40	8.3 (3,8)
FQ	DIN Level Flange, SST, DN 80, PN 40	13.7 (6,2)

A.8 Spare parts

Model 3051C Sensor Modules (Min. Span/Range)	Silicone Fill	Inert Fill
	Part Number	Part Number
<i>Note: One spare part is recommended for every 50 transmitters.</i> <i>Note: Listed by Range and Process Isolator Order Numbers.</i>		
–3 to 3/0.1 inH₂O, Range 0 (includes Traditional SST flange and SST bolts).		
316L SST	03031-1045-0002	03031-1145-0002
–25 to 25 inH₂O/0.5 inH₂O, Range 1		
316L SST	03031-1045-0012	03031-1145-0012
Alloy C-276	03031-1045-0013	03031-1145-0013
Alloy 400	03031-1045-0014	03031-1145-0014
Gold-plated Alloy 400	03031-1045-0016	03031-1145-0016
Gold-plated 316 SST	03031-1045-0017	03031-1145-0017
–250 to 250 inH₂O/2.5 inH₂O, Range 2		
316L SST	03031-1045-0022	03031-1145-0022
Alloy C-276	03031-1045-0023	03031-1145-0023
Alloy 400	03031-1045-0024	03031-1145-0024
Tantalum	03031-1045-0025	03031-1145-0025
Gold-plated Alloy 400	03031-1045-0026	03031-1145-0026
Gold-plated 316 SST	03031-1045-0027	03031-1145-0027
–1000 to 1000 inH₂O/10 inH₂O, Range 3		
316L SST	03031-1045-0032	03031-1145-0032
Alloy C-276	03031-1045-0033	03031-1145-0033
Alloy 400	03031-1045-0034	03031-1145-0034
Tantalum	03031-1045-0035	03031-1145-0035
Gold-plated Alloy 400	03031-1045-0036	03031-1145-0036
Gold-plated 316 SST	03031-1045-0037	03031-1145-0037
–300 to 300 psi/3 psi, Range 4		
316L SST	03031-1045-2042	03031-1145-2042
Alloy C-276	03031-1045-2043	03031-1145-2043
Alloy 400	03031-1045-2044	03031-1145-2044
Tantalum	03031-1045-2045	03031-1145-2045
Gold-plated Alloy 400	03031-1045-2046	03031-1145-2046
Gold-plated 316 SST	03031-1045-2047	03031-1145-2047

–2000 to 2000/20 psi, Range 5		
316L SST	03031-1045-2052	03031-1145-2052
Alloy C-276	03031-1045-2053	03031-1145-2053
Alloy 400	03031-1045-2054	03031-1145-2054
Tantalum	03031-1045-2055	03031-1145-2055
Gold-plated Alloy 400	03031-1045-2056	03031-1145-2056
Gold-plated 316 SST	03031-1045-2057	03031-1145-2057

Rosemount 3051C gage and differential sensor modules (Min. Span/Range)			Silicone fill	Inert fill
			Part number	Part number
<i>Note: One spare part is recommended for every 50 transmitters.</i> <i>Note: Listed by Range and Process Isolator Order Numbers.</i>				
	Gage pressure range	Differential pressure range		
Range 1	–25 to 25 in H ₂ O/0.5 in H ₂ O	–25 to 25 in H ₂ O/0.5 in H ₂ O		
316L SST		03031-1045-0012	03031-1145-0012	
Alloy C-276		03031-1045-0013	03031-1145-0013	
Alloy 400		03031-1045-0014	03031-1145-0014	
Gold-plated Alloy 400		03031-1045-0016	03031-1145-0016	
Gold-plated 316 SST		03031-1045-0017	03031-1145-0017	
Range 2	–250 to 250 inH ₂ O/2.5 inH ₂ O	–250 to 250 inH ₂ O/2.5 inH ₂ O		
316L SST		03031-1045-0022	03031-1145-0022	
Alloy C-276		03031-1045-0023	03031-1145-0023	
Alloy 400		03031-1045-0024	03031-1145-0024	
Tantalum		03031-1045-0025	03031-1145-0025	
Gold-plated Alloy 400		03031-1045-0026	03031-1145-0026	
Gold-plated 316 SST		03031-1045-0027	03031-1145-0027	
Range 3	–407 to 1000 inH ₂ O/10 inH ₂ O	–1000 to 1000 inH ₂ O/10 inH ₂ O		
316L SST		03031-1045-0032	03031-1145-0032	
Alloy C-276		03031-1045-0033	03031-1145-0033	
Alloy 400		03031-1045-0034	03031-1145-0034	
Tantalum		03031-1045-0035	03031-1145-0035	
Gold-plated Alloy 400		03031-1045-0036	03031-1145-0036	
Gold-plated 316 SST		03031-1045-0037	03031-1145-0037	

Range 4	-14.2 to 300 psi/3 psi	-300 to 300 psi/3 psi		
316L SST			03031-1045-2042	03031-1145-2042
Alloy C-276			03031-1045-2043	03031-1145-2043
Alloy 400			03031-1045-2044	03031-1145-2044
Tantalum			03031-1045-2045	03031-1145-2045
Gold-plated Alloy 400			03031-1045-2046	03031-1145-2046
Gold-plated 316 SST			03031-1045-2047	03031-1145-2047
Range 5	-14.2 to 2000 psi/20 psi	-2000 to 2000psi/20 psi		
316L SST			03031-1045-2052	03031-1145-2052
Alloy C-276			03031-1045-2053	03031-1145-2053
Alloy 400			03031-1045-2054	03031-1145-2054
Tantalum			03031-1045-2055	03031-1145-2055
Gold-plated Alloy 400			03031-1045-2056	03031-1145-2056
Gold-plated 316 SST			03031-1045-2057	03031-1145-2057

Rosemount 3051C absolute sensor modules (Min. Span/Range)	Silicone fill	Inert fill
	Part number	Part number
<i>Note: One spare part is recommended for every 50 transmitters.</i> <i>Note: Listed by Range and Process Isolator Order Numbers.</i>		
Range 1, 0 to 30 psia/0.3 psia		
316L SST	03031-2020-0012	—
Alloy C-276	03031-2020-0013	—
Alloy 400	03031-2020-0014	—
Gold-plated Alloy 400	03031-2020-0016	—
Gold-plated 316 SST	03031-2020-0017	—
Range 2, 0 to 150/1.5 psia		
316L SST	03031-2020-0022	—
Alloy C-276	03031-2020-0023	—
Alloy 400	03031-2020-0024	—
Gold-plated Alloy 400	03031-2020-0026	—
Gold-plated 316 SST	03031-2020-0027	—

Range 3, 0 to 800 psia/8 psia		
316L SST	03031-2020-0032	—
Alloy C-276	03031-2020-0033	—
Alloy 400	03031-2020-0034	—
Gold-plated Alloy 400	03031-2020-0036	—
Gold-plated 316 SST	03031-2020-0037	—
Range 4, 0 to 400 psia/40 psia		
316L SST	03031-2020-0042	—
Alloy C-276	03031-2020-0043	—
Alloy 400	03031-2020-0044	—
Gold-plated Alloy 400	03031-2020-0046	—
Gold-plated 316 SST	03031-2020-0047	—

Rosemount 3051T Sensor Modules (Min. Span/Range)		Silicone Fill	Inert Fill
		Part Number	Part Number
Note: One spare part is recommended for every 50 transmitters.			
Range 1	Gage pressure range		
	0-0.3/30 psig		
Aluminum, 316L SST Isolator			
1/4 –18 NPT Female		03031-3112-3112	03031-3112-1112
1/2 –14 NPT Female		03031-3102-3112	03031-3102-1112
G1/2 A DIN 16288 Male		03031-3132-3112	03031-3132-1112
Aluminum, Alloy C-276 Isolator			
1/4 –18 NPT Female		03031-3112-3113	03031-3112-1113
1/2 –14 NPT Female		03031-3102-3113	03031-3102-1113
SST, 316L SST Isolator			
1/4 –18 NPT Female		03031-3111-3112	03031-3111-1112
1/2 –14 NPT Female		03031-3101-3112	03031-3101-1112
SST, AlloyC-276 Isolator			
1/4 –18 NPT Female		03031-3111-3113	03031-3111-1113
1/2 –14 NPT Female		03031-3101-3113	03031-3111-1113
Range 2	0-1.5/150 psig		
Aluminum, 316L SST Isolator			
1/4 –18 NPT Female		03031-3112-3122	03031-3112-1112
1/2 –14 NPT Female		03031-3102-3122	03031-3102-1122
G1/2 A DIN 16288 Male		03031-3132-3122	03031-3132-3122

Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3122	03031-3112-1112
1/2 – 14 NPT Female	03031-3102-3122	03031-3102-1122
G1/2 A DIN 16288 Male	03031-3132-3122	03031-3132-3122
Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3123	03031-3112-1123
1/2 – 14 NPT Female	03031-3102-3123	03031-3102-1123
SST, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3111-3122	03031-3111-1122
1/2 – 14 NPT Female	03031-3101-3122	03031-3101-1122
SST, AlloyC-276 Isolator		
1/4 – 18 NPT Female	03031-3111-3123	03031-3111-1123
1/2 – 14 NPT Female	03031-3101-3123	03031-3101-1123
Range 3	0-8/800 psig	
Aluminum, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3112-3132	03031-3112-1132
1/2 – 14 NPT Female	03031-3102-3132	03031-3102-1132
G1/2 A DIN 16288 Male	03031-3132-3132	03031-3132-1132
Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3133	03031-3112-1133
1/2 – 14 NPT Female	03031-3102-3133	03031-3102-1133
SST, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3111-3132	03031-3111-1132
1/2 – 14 NPT Female	03031-3101-3132	03031-3101-1132
SST, AlloyC-276 Isolator		
1/4 – 18 NPT Female	03031-3111-3133	03031-3111-1133
1/2 – 14 NPT Female	03031-3101-3133	03031-3101-1133
Range4	0-40/4,000 psig	
Aluminum, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3112-3142	03031-3112-1142
1/2 – 14 NPT Female	03031-3102-3142	03031-3102-1142
G1/2 A DIN 16288 Male	03031-3132-3142	03031-3132-1142
Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3143	03031-3112-1143
1/2 – 14 NPT Female	03031-3102-3143	03031-3102-1143
SST, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3111-3142	03031-3111-1142
1/2 – 14 NPT Female	03031-3101-3142	03031-3101-1142

SST, AlloyC-276 Isolator			
1/4 – 18 NPT Female		03031-3111-3143	03031-3111-1143
1/2 – 14 NPT Female		03031-3101-3143	03031-3101-1143
Range 1	Gage pressure range		
	0-0.3/30 psia		
Aluminum, 316L SST Isolator			
1/4 – 18 NPT Female		03031-3112-3012	03031-3112-1012
1/2 – 14 NPT Female		03031-3102-1012	03031-3102-1012
G1/2 A DIN 16288 Male		03031-3132-3012	03031-3132-3012
Aluminum, Alloy C-276 Isolator			
1/4 – 18 NPT Female		03031-3112-3013	03031-3112-1013
1/2 – 14 NPT Female		03031-3102-3013	03031-3102-1013
SST, 316L SST Isolator			
1/4 – 18 NPT Female		03031-3111-3012	03031-3111-1012
1/2 – 14 NPT Female		03031-3101-3012	03031-3101-1012
SST, AlloyC-276 Isolator			
1/4 – 18 NPT Female		03031-3111-3013	03031-3111-1013
1/2 – 14 NPT Female		03031-3101-3013	03031-3101-1013
Range 2	0-1.5/150 psia		
Aluminum, 316L SST Isolator			
1/4 – 18 NPT Female		03031-3112-3022	03031-3112-1022
1/2 – 14 NPT Female		03031-3112-3022	03031-3112-3022
G1/2 A DIN 16288 Male		03031-3132-3022	03031-3132-1022
Aluminum, Alloy C-276 Isolator			
1/4 – 18 NPT Female		03031-3112-3023	03031-3112-1023
1/2 – 14 NPT Female		03031-3102-3023	03031-3102-1023
SST, 316L SST Isolator			
1/4 – 18 NPT Female		03031-3111-3022	03031-3111-1022
1/2 – 14 NPT Female		03031-3101-3022	03031-3101-1022
SST, AlloyC-276 Isolator			
1/4 – 18 NPT Female		03031-3111-3023	03031-3111-1023
1/2 – 14 NPT Female		03031-3101-3023	03031-3101-1023
Range 3	0-8/800 psia		
Aluminum, 316L SST Isolator			
1/4 – 18 NPT Female		03031-3112-3032	03031-3112-1032
1/2 – 14 NPT Female		03031-3102-3032	03031-3102-1032
G1/2 A DIN 16288 Male		03031-3132-3032	03031-3132-1032

Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3033	03031-3112-1033
1/2 – 14 NPT Female	03031-3102-3033	03031-3102-1033
SST, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3111-3032	03031-3111-1032
1/2 – 14 NPT Female	03031-3101-3032	03031-3101-1032
SST, AlloyC-276 Isolator		
1/4 – 18 NPT Female	03031-3111-3033	03031-3111-1033
1/2 – 14 NPT Female	03031-3101-3033	03031-3101-1033
Range 4	0-40/4,000 psia	
Aluminum, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3112-3042	03031-3112-1042
1/2 – 14 NPT Female	03031-3102-3042	03031-3102-1042
G 1/2 A DIN 16288 Male	03031-3132-3042	03031-3132-1042
Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3043	03031-3112-1043
1/2 – 14 NPT Female	03031-3102-3043	03031-3102-1043
SST, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3111-3042	03031-3111-1042
1/2 – 14 NPT Female	03031-3101-3042	03031-3101-1042
SST, AlloyC-276 Isolator		
1/4 – 18 NPT Female	03031-3111-3043	03031-3111-1043
1/2 – 14 NPT Female	03031-3101-3043	03031-3101-1043
Range 5	0-2000/10,000 psia	
Aluminum, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3112-3052	03031-3112-1052
1/2 – 14 NPT Female	03031-3102-3052	03031-3102-1052
Autoclave type F-250-C	03031-3122-3052	03031-3122-1052
Aluminum, Alloy C-276 Isolator		
1/4 – 18 NPT Female	03031-3112-3053	03031-3112-1053
1/2 – 14 NPT Female	03031-3102-3053	03031-3102-1053
SST, 316L SST Isolator		
1/4 – 18 NPT Female	03031-3111-3052	03031-3111-1052
1/2 – 14 NPT Female	03031-3101-3052	03031-3101-1052
Autoclave type F-250-C	03031-3121-3052	03031-3121-1052
SST, AlloyC-276 Isolator		
1/4 – 18 NPT Female	03031-3111-3053	03031-3111-1053
1/2 – 14 NPT Female	03031-3101-3053	03031-3101-1053

Enhanced 3051 Upgrade Kits	Part number
<i>The following come with electronics board and respective configuration buttons (if applicable).</i>	
Aluminum/SST	
4-20 mA HART with no configuration buttons	03031-0020-3100
4-20 mA HART with Digital Zero Trim	03031-0020-3110
4-20 mA HART with Analog Zero and Span	03031-0020-3120
Enhanced 3051 LOI Upgrade Kit	Part number
<i>The following come with electronics board, LOI display, and LOI configuration buttons. Order display cover if needed.</i>	
4-20 mA HART with LOI	03031-0020-3139
Enhanced 3051 LCD Display	Part number
<i>The following come with an Enhanced 3051 LCD display and a housing cover</i>	
4-20mA HART - Aluminum	03031-0199-0011
4-20 mA HART - 316 SST	03031-0199-0021
Enhanced 3051 LOI Display	Part number
<i>The following come with an Enhanced 3051 LOI display and housing cover</i>	
4-20 mA HART - Aluminum	03031-0199-0012
4-20 mA HART - 316 SST	03031-0199-0022
Terminal block assemblies	Part number
4-20mA HART Output	
Standard terminal block	03031-0332-0015
Transient terminal block (option T1)	03031-0332-0012
Electrical housings (without terminal block)	Part number
Standard - Aluminum	
1/2 - 14 NPT conduit entry	03031-2302-0001
M20 conduit entry	03031-2302-0002
G1/2 conduit entry	03031-2302-0004
Standard - 316 SST	
1/2 - 14 NPT conduit entry	03031-2322-0001
M20 conduit entry	03031-2322-0002
Housing conduit plugs	Part number
1/2 NPT Conduit plug	03031-0544-0003
M20 Conduit plug	03031-0544-0001
G1/2 Conduit plug	03031-0544-0004
Housing covers (include o-ring)	Part number
Field terminal cover - Aluminum	03031-0292-0001
Field terminal cover - 316 SST	03031-0292-0002

HART electronics cover - Aluminum	03031-0292-0001
HART electronics cover - 316 SST	03031-0292-0002
HART LCD Display cover - Aluminum	03031-0193-0002
HART LCD Display cover - 316 SST	03031-0193-0012
Miscellaneous hardware	Part number
Local Zero and Span Kit	03031-0293-0002
External ground screw assembly (option V5)	03031-0383-0001
Flanges	Part number
Differential Coplanar Flange	
316 SST	03031-0388-0022
Cast Alloy C-276	03031-0388-0023
Cast Alloy 400	03031-0388-0024
Nickel-plated carbon steel	03031-0388-0025
Gage/Absolute Coplanar Flange	
316 SST	03031-0388-1022
Cast Alloy C-276	03031-0388-1023
Cast Alloy 400	03031-0388-1024
Nickel-plated carbon steel	03031-0388-1025
Coplanar flange alignment screw (package of 12)	03031-0309-0001
Traditional Flange	
316 SST	03031-0320-0002
Cast Alloy C-276	03031-0320-0003
Cast Alloy 400	03031-0320-0004
316 SST - DIN Compliant (Option Code HJ)	03031-1350-0012
Level Flange, Vertical Mount	
2 in., class 150, SST	03031-0393-0221
2 in., class 300, SST	03031-0393-0222
3 in., class 150, SST	03031-0393-0231
3 in., class 300, SST	03031-0393-0232
DIN, DN 50, PN 40	03031-0393-1002
DIN, DN 80, PN 40	03031-0393-1012
Flange adapter kits (each kit contains parts for one DP transmitter or two GP/AP transmitters)	Part number
CS bolts, glass-filled PTFE O-Rings	
SST adapters	03031-1300-0002
Cast Alloy C-276 adapters	03031-1300-0003
Alloy 400 adapters	03031-1300-0004

Nickel-plated carbon steel adapters	03031-1300-0005
SST bolts, glass-filled PTFE O-Rings	
SST adapters	03031-1300-0012
Cast Alloy C-276 adapters	03031-1300-0013
Alloy 400 adapters	03031-1300-0014
Nickel-plated carbon steel adapters	03031-1300-0015
CS bolts, graphite-filled PTFE O-Rings	
SST adapters	03031-1300-0102
Cast Alloy C-276 adapters	03031-1300-0103
Alloy 400 adapters	03031-1300-0104
Nickel-plated carbon steel adapters	03031-1300-0105
SST bolts, graphite-filled PTFE O-Rings	
SST adapters	03031-1300-0112
Cast Alloy C-276 adapters	03031-1300-0113
Alloy 400 adapters	03031-1300-0114
Nickel-plated carbon steel adapters	03031-1300-0115
Flange adapters	Part number
1/2 - 14 NPT Adapters	
316 SST	02024-0069-0002
Cast Alloy C-276	02024-0069-0003
Cast Alloy 400	02024-0069-0004
Nickel-plated carbon steel	02024-0069-0005
Socket Weld Adapters	
316 SST	02024-0069-1002
Cast Alloy C-276	02024-0069-1003
Cast Alloy 400	02024-0069-1004
O-Ring packages (package of 12)	Part number
Electronics housing, cover	03031-0232-0001
Electronics housing, module	03031-0233-0001
Process flange, glass-filled PTFE (White)	03031-0234-0001
Process flange, graphite-filled PTFE (Black)	03031-0234-0002
Flange adapter, glass-filled PTFE (Light Brown)	03031-0242-0001
Flange adapter, graphite-filled PTFE (Black)	03031-0242-0002
Bolt kits	Part number
COPLANAR FLANGE	
Flange Bolt Kit [44mm (1.75 in.)] (set of 4)	

Carbon steel	03031-0312-0001
316 SST	03031-0312-0002
ASTM A 193, Grade B7M	03031-0312-0003
Alloy K-500	03031-0312-0004
Flange/Adapter Bolt Kit [73mm (2.88 in.)] (set of 4)	
Carbon steel	03031-0306-0001
316 SST	03031-0306-0002
ASTM A 193, Grade B7M	03031-0306-0003
Alloy K-500	03031-0306-0004
TRADITIONAL FLANGE	
Differential Flange/Adapter Bolt Kit [44mm (1.75 in.)] (set of 8)	
Carbon steel	03031-0307-0001
316 SST	03031-0307-0002
ASTM A 193, Grade B7M	03031-0307-0003
Alloy K-500	03031-0307-0004
Gage/Absolute Flange/Adapter Bolt Kit [44mm (1.75 in.)] (set of 6)	
Carbon steel	03031-0307-1001
316 SST	03031-0307-1002
ASTM A 193, Grade B7M	03031-0307-1003
Alloy K-500	03031-0307-1004
Conventional Manifold/Traditional Flange Bolts	
Carbon steel	Use bolts supplied with manifold
316 SST	Use bolts supplied with manifold
Level Flange, Vertical Mount Bolt Kit (Set of 4)	
Carbon steel	03031-0395-0001
316 SST	03031-0395-0002
Drain/Vent valve kits (each kit contains parts for one transmitter)	Part number
Differential Drain/Vent Kits	
316 SST stem and seat kit	01151-0028-0022
Alloy C-276 stem and seat kit	01151-0028-0023
Alloy K-500 stem and Alloy 400 seat kit	01151-0028-0024
316 SST ceramic ball drain/vent kit	03031-0378-0022
Alloy C-276 ceramic ball drain/vent kit	03031-0378-0023
Alloy 400/K-500 ceramic ball drain/vent kit	03031-0378-0024
Gage/Absolute Drain/Vent Kits	
316 SST stem and seat kit	01151-0028-0012
Alloy C-276 stem and seat kit	01151-0028-0013

Alloy K-500 stem and Alloy 400 seat kit	01151-0028-0014
316 SST ceramic ball drain/vent kit	03031-0378-0012
Alloy C-276 ceramic ball drain/vent kit	03031-0378-0013
Alloy 400/K-500 ceramic ball drain/vent kit	03031-0378-0014
Mounting brackets	Part number
3051C and 3051L Coplanar Flange Bracket kit	
B4 bracket, SST, 2-in. pipe mount, SST bolts	03031-0189-0003
3051T Inline Bracket Kit	
B4 bracket, SST, 2-in. pipe mount, SST bolts	03031-0189-0004
3051C Traditional Flange Bracket Kits	
B1 bracket, 2-in. pipe mount, CS bolts	03031-0313-0001
B2 bracket, panel mount, CS bolts	03031-0313-0002
B3 flat bracket, 2-in. pipe mount, CS bolts	03031-0313-0003
B7 (B1 bracket, SST bolts)	03031-0313-0007
B8 (B2 bracket, SST bolts)	03031-0313-0008
B9 (B3 bracket, SST bolts)	03031-0313-0009
BA (SST B1 bracket, SST bolts)	03031-0313-0011
BC (SST B3 bracket, SST bolts)	03031-0313-0013

Appendix B Product Certifications

Overview	page 183
Safety messages	page 183
Product certifications	page 184
Hazardous locations certifications	page 185
Approval drawings	page 192

B.1 Overview

This Appendix contains information on Approved manufacturing locations, European directive information, Ordinary Location certification, Hazardous Locations Certifications and approval drawings for HART protocol.

B.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (). Refer to the following safety messages before performing an operation preceded by this symbol.

B.2.1 Warnings

WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review this section of the Model 3051 reference manual for any restrictions associated with a safe installation.

- Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- In an Explosion-Proof/Flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

- Install and tighten process connectors before applying pressure.

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

WARNING

Cable gland and plug must comply with the requirements listed on the certificates.

B.3 Safety Instrumented Systems installation

See [Section 7](#) for Safety Instrumented Systems installation information.

B.4 Product certifications

B.4.1 Approved manufacturing locations

Rosemount Inc. — Chanhassen, Minnesota USA

Emerson Process Management Asia Pacific Private Limited — Singapore

Emerson Process Management GmbH & Co. — Wessling, Germany

Beijing Rosemount Far East Instrument Co., LTD — Beijing, China

Emerson Process Management (India) Pvt. Ltd. — Daman, India

Emerson Process Management LTDA — Sorocaba, Brazil

Emerson Process Management, Russia — Chelyabinsk, Russia

Emerson Process Management, Emerson FZE — Dubai, United Arab Emirates

B.4.2 European directive information

The most recent revision of EC declaration of conformity can be found at www.emersonprocess.com.

B.4.3 Ordinary location certification from FM approvals

As standard, the transmitter has been examined and tested to determine that the design meets basic electrical, mechanical, and fire protection requirements by FM Approvals, a nationally recognized testing laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

B.5 Hazardous locations certifications

B.5.1 North American certifications

FM Approvals

- E5** Explosion-Proof and Dust Ignition Proof
Certificate No: 0T2H0.AE
Applicable Standards: FM Class 3600 – 1998, FM Class 3615 – 2006, FM Class 3810 – 2005, ANSI/NEMA 250 - 2003
Markings: Explosion-Proof for Class I, Division 1, Groups B, C, and D.
Dust-Ignition-Proof for Class II, Division 1, Groups E, F, G; and Class III, Division 1.
T5 (Ta=85 °C), Factory Sealed, Enclosure Type 4x
- I5** Intrinsically Safe and Non-Incendive
Certificate No: 1Q4A4.AX
Applicable Standards: FM Class 3600 – 1998, FM Class 3610 – 2010, FM Class 3611 – 200, FM Class 3810 – 2005, ANSI/NEMA 250 - 2003
Markings: Intrinsically Safe for use in Class I, Division 1, Groups A, B, C, and D; Class II, Division 1, Groups E, F, and G; Class III, Division 1 when connected per Rosemount drawing 03031-1019 and 00375-1130 (When used with a Field Communicator);
Non-incendive for Class I, Division 2, Groups A, B, C, and D.
Temperature Code: T4 (Ta=40 °C), T3 (Ta=85 °C), Enclosure Type 4x

Special Conditions for Safe Use (X):

1. The Model 3051 transmitter housing contains aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.
2. The Model 3051 transmitter with the transient terminal block (Option code T1) will not pass the 500Vrms dielectric strength test and this must be taken into account during installation.

CSA international

All CSA hazardous location approved transmitters are certified to ANSI/ISA 12.27.02-2003.

- E6** Explosion-Proof, Dust Ignition Proof and Class I Division 2
Certificate No.: 1053834
Applicable Standards: CSA Std. C22.2 No. 142 – M1987, CSA Std. C22.2 No. 30 – M1986, CSA Std. C22.2 No. 213 – M1987, ANSI/ISA 12.27.02-2003
Markings: Explosion-Proof for Class I, Division 1, Groups B, C, and D. Dust-Ignition-Proof for Class II and Class III, Division 1, Groups E, F, and G. Suitable for Class I, Division 2 Groups A, B, C, and D. Enclosure type 4X, factory sealed. Single Seal (See Drawing 03031-1053)
- I6** Intrinsically Safe
Certificate No.: 1053834
Applicable Standards: CSA Std. C22.2 No. 142 – M1987, CSA Std. C22.2 No. 157 – 92, ANSI/ISA 12.27.02-2003
Markings: Intrinsically safe for Class I, Division 1, Groups A, B, C, and D when connected in accordance with Rosemount drawings 03031-1024. Temperature Code T3C. Enclosure Type 4X, Single Seal. Single Seal (See Drawing 03031-1053)

B.5.2 European certifications

- E8** ATEX Flame-Proof and Dust
Certification No.: KEMA 00ATEX2013X
Applicable Standards: EN60079-0: 2006, EN60079-1: 2007, EN60079-26: 2007, EN61241-0: 2006, EN61241-1: 2004
Markings: Ⓔ II 1/2 GD, Ex d IIC T6 ($-50 \leq T_a \leq 65^\circ\text{C}$),
Ex d IIC T5 ($-50 \leq T_a \leq 80^\circ\text{C}$), Ex tD A20/A21 T90 $^\circ\text{C}$, IP66
cE 1180
- I1** ATEX Intrinsic Safety and Dust
Certificate No.: BAS 97ATEX1089X
Applicable Standards: EN 60079-0: 2009, EN60079-11: 2007, EN60079-31: 2009,
Markings: Ⓔ II 1 GD, Ex ia IIC T4 Ga ($-60 \leq T_a \leq +70^\circ\text{C}$),
Ex ia IIC T5 Ga ($-60 \leq T_a \leq +40^\circ\text{C}$)
Ex t IIIIC T50 $^\circ\text{C}$ T500 60 $^\circ\text{C}$ Da, $U_i=30\text{ V}$ $I_i=200\text{ mA}$ $P_i=0.9\text{ W}$ $C_i=0.012\text{ }\mu\text{F}$, IP66,
cE 1180
- Special Conditions for Safe Use (X):**
1. The apparatus is not capable of withstanding the 500 V insulation test required by clause 6.3.12 of EN 60079-11:2007. This must be taken into account when installing the apparatus.
 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact or abrasion if located in Zone 0.
- N1** ATEX Non-incendive/Type n and Dust
Certification No.: BAS 00ATEX3105X
Applicable Standards: EN 60079-0: 2006, EN60079-15: 2005, EN60079-31: 2009
Markings: Ⓔ II 3 GD, Ex nA nL IIC T5 ($-40 \leq T_a \leq 70^\circ\text{C}$),
Ex t IIIIC T50 $^\circ\text{C}$ T500 60 $^\circ\text{C}$ Da, IP66
cE 1180

Special Conditions for Safe Use (X):

1. The apparatus is not capable of withstanding the 500 V insulation test required by clause 6.8.1 of EN 60079-15:2005. This must be taken into account when installing the apparatus.
2. This device contains a thin wall diaphragm. Installation, maintenance, and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime. In case of repair, contact the manufacturer for more information on the dimensions of the flameproof joints.

B.5.3 Japanese certifications

E4 TIIS Flameproof

Certificate	Description
TC15850	3051C/D/1 4–20 mA HART — no meter
TC15851	3051C/D/1 4–20 mA HART — with meter
TC15854	3051T/G/1 4–20 mA HART, SST, Silicon — no meter
TC15855	3051T/G/1 4–20 mA HART, Alloy C-276, Silicon — no meter
TC15856	3051T/G/1 4–20 mA HART, SST, Silicon — with meter
TC15857	3051T/G/1 4–20 mA HART, Alloy C-276, Silicon — with meter

Markings: Ex d IIC T6

I4 TIIS Intrinsic Safety
Certification No.: TC16406
Markings: Ex ia IIC T4

B.5.4 IECEx certifications

E7 IECEx Explosion-proof and Dust
Certification No.: IECEx KEM 09.0034X
Applicable Standards: IEC60079-0:2004, IEC60079-1:2007-04, IEC60079-26:2006, IEC 61241-0:2004, IEC 61241-1:2004
Markings: Ex d IIC T5 or T6 Ga/Gb, T5 ($-50^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$)/T6 ($-50^{\circ}\text{C} \leq T_a \leq 65^{\circ}\text{C}$)
Ex tD A20/A21 IP66 T90 $^{\circ}\text{C}$ ($-50^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$)

Conditions of Certification (X):

This device contains a thin wall diaphragm. Installation, maintenance, and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
For information on the dimensions of the flameproof joints the manufacturer shall be contacted.

- I7** IECEx Intrinsic Safety
Certification No.: IECEx BAS 09.0076X
Applicable Standards: IEC 60079-0:2007-10, IEC 60079-11:2006
Markings: Ex ia IIC T5 Ga ($-60^{\circ}\text{C} \leq T_a \leq 40^{\circ}\text{C}$), Ex ia IIC T4 Ga ($-60^{\circ}\text{C} \leq T_a \leq 70^{\circ}\text{C}$)
 $U_i=30\text{V}$, $I_i=200\text{ mA}$, $P_i=0.9\text{W}$, $C_i=0.012\text{ }\mu\text{F}$, $L_i=0$
Conditions of Certification (X):
1. If the apparatus is fitted with an optional 90V transient suppressor, it is not capable of withstanding the 500V insulation test required by clause 6.3.12 of IEC 60079-11: 2006. This must be taken into account when installing the apparatus.
2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in Zone 0.
- N7** IECEx Type 'n'
Certification No.: IECEx BAS 09.0077X
Applicable Standards: IEC60079-0:2007, IEC60079-15 2005
Markings: Ex nA nL IIC T5 ($-40 \leq T_a \leq 70^{\circ}\text{C}$)
Conditions of Certification (X):
The apparatus is not capable of withstanding the 500V insulation test required by clause 6.8.1 of IEC 60079-15: 2005. This must be taken into account when installing the apparatus.

B.5.5 Inmetro certifications

- E2** Flameproof
Certificate No: CEPEL Ex-073/97-1 (Mfg USA and Singapore)
Certificate No: CEPEL Ex-1383/07 (Mfg Brazil)
Applicable Standards: IEC60079-0:2004, IEC60079-1:2003, IEC 60529:2001
Markings: BR-Ex d IIC T* IP66W, Tamb: de -50 a +65 °C para T6,
Tamb: de -50 a +80 °C para T5
- I2** Intrinsic Safety
Certificate No.: CEPEL Ex-072/97-1X (Mfg USA and Singapore)
Certificate No.: CEPEL Ex-1412/07X (Mfg Brazil)
Applicable Standards: IEC60079-0:2000, IEC60079-11:1999, IEC 60529:2001
Markings: BR- Ex ia IIC T5(Tamb=-20 a 40) °C T4(Tamb=-20 a 70) °C IP66W, $U_i=30\text{V}$, $I_i=200\text{mA}$, $P_i=0.9\text{W}$, $C_i=0.012\text{ }\mu\text{F}$, $L_i=\text{Desprezível}$
Specific Conditions for Safe Use (X):
See Certificate.

B.5.6 China certifications

- E3** Flameproof and Dust
NEPSI Certificate No.: GYJ091065X
Applicable Standards: GB3836.1-2000, GB3836.4-2000, GB4208-1993, GB12476-2000
Markings: Ex d II C T5/T6, $-50^{\circ}\text{C}+80^{\circ}\text{C}$ (T5), $-50^{\circ}\text{C}+65^{\circ}\text{C}$ (T6), DIP A21 TA T90 °C, IP66
1. Specific Conditions for Safe Use:
The symbol "X" placed after the certificate number indicates special condition for safe use, that is the transmitter contains a thin wall diaphragm. Installation, maintenance, and use shall not only take into account the environmental condition, but also follow the manufacturer's instructions.

2. Conditions for safe use

2.1 The relation between ambient temperature range and temperature class is as follows:

T_a	Temperature class
-50 °C to 80 °C	T5
-50 °C to 65 °C	T6

When used in combustible dust environment, the maximum ambient temperature is 80 °C.

2.2 The earth connection facility in the enclosure should be connected reliably.

2.3 Cable entry certified by notified body with type of protection Ex d II C in accordance with GB3836.1-2000 and GB3836.2-2000, should be applied when installing in hazardous location. When used in combustible dust environment, cable entry in accordance with IP66 or higher level should be applied.

2.4 Obey the warning “Keep tight when the circuit is alive.”

2.5 End users are not permitted to change any component’s insides.

2.6 When installing, using, and maintaining the transmitter, observe the following standards

GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”

GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)”

GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”

GB50257-1996 “Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering”

GB12476.2-2006 “Electrical apparatus for use in the presence of combustible dust Part 1-2: Electrical apparatus protected by enclosures and surface temperature limitation-Selection, installation and maintenance”

GB15577-2007 “Safety regulations for dust explosion prevention and protection”

I3 Intrinsic Safety and Dust

NEPSI Certificate No: GYJ091066X

Applicable Standards: GB3836.1-2000, GB3836.2-2000, GB4208-1993, GB12476-2000

Markings: Ex ia II C T4/T5, -60 °C+40 °C (T5), -60 °C+70 °C (T4), DIP A21 TA T80 °C

Specific Conditions for Safe Use (X):

1. The relation between ambient temperature range and temperature class is as following:

T_a	Temperature Class
-60 °C +40 °C	T5
-60 °C +70 °C	T4

When used in combustible dust environment, the maximum ambient temperature is -20 °C+40 °C.

2. The earth connection facility in the enclosure should be connected reliably.
3. The maximum internal parameters of the transmitter are as following:
 $U_i = 30 \text{ V}$, $I_i = 200 \text{ mA}$, $P_i = 0.9 \text{ W}$, $L_i = 0 \text{ mH}$, $C_i = 0.012 \mu\text{F}$
4. End users is not permitted to change any components insides.
5. When installing, using, and maintaining transmitter, observe following standards:
GB3836.1 1997 "Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"
GB3836.15-2000 "Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)"
GB3836.16-2006 "Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)"
GB50257-1996 "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering"
GB12476.2-2006 "Electrical apparatus for use in the presence of combustible dust Part 1-2: Electrical apparatus protected by enclosures and surface temperature limitation-Selection, installation and maintenance"
GB15577-2007 "Safety regulations for dust explosion prevention and protection"

$U_i = 30 \text{ V}$
$I_i = 200 \text{ mA}$
$P_i = 1 \text{ W}$
$C_i = 0.012 \mu\text{F}$
$L_i = 0$

- N3** China Type n - Non-Sparking
NEPSI Certificate No.: GYJ101111X
Applicable Standards: GB3836.1-2000, GB3836.8-2003
Markings: Ex nA nL IIC T5 (-40 °C ≤ TA ≤ 70 °C)

Specific Conditions for Safe Use (X):

1. Symbol “X” is used to denote specific conditions of use: The apparatus is not capable of withstanding the 500 V test to earth for one minute. This must be taken into consideration during installation.
2. The ambient temperature range is: $-40\text{ }^{\circ}\text{C} \leq T_a \leq +70\text{ }^{\circ}\text{C}$
3. Maximum input voltage: 42.4 V.
4. Cable glands, conduit or blanking plugs, certified by NEPSI with Ex e or Ex n protection type and IP66 degree of protection provided by enclosure, should be used on external connections and redundant cable entries.
5. Maintenance should be done in non-hazardous location.
6. End users are not permitted to change any components inside, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
7. When installing, using, and maintaining transmitter, observe following standards:
GB3836.1 1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”
GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)”
GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”
GB50257-1996 “Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering”

B.5.7 Combinations of certifications

Stainless steel certification tag is provided when optional approval is specified. Once a device labeled with multiple approval types is installed, it should not be reinstalled using any other approval types. Permanently mark the approval label to distinguish it from unused approval types.

K1 – E1, N1

K5 – E5, I5

K6 – E5, I5, E6, I6, E1, I1

K7 – E7, I7, N7

K8 – E8, I1

KA – E1, I1, N1, E6, I6

KB – E5, I5, E1, I1


KC – E5, I5, E1, I1

KD – E5, I5, E6, I6, I1

B.6 Approval drawings

B.6.1 Factory mutual 03031-1019

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY	REVISIONS				
	REV	DESCRIPTION	CHG. NO.	APP'D	DATE
	AF	ADD FISCO DETAILS	RTC1021913	N.J.H.	7/9/06
	AG	ADD FISCO ENTITY PARAMETERS TO SHT 12	RTC1022876	N.J.H.	10/27/06
	AH	UPDATE FOR HART 7	RTC1051594	D.R.S.	8/22/11
ENTITY APPROVALS FOR 3051C 3051L 3051H 3051CA 3051T 3051G OUTPUT CODE A (4-20 mA HART) I.S. SEE SHEETS 2-4 OUTPUT CODE M (LOW POWER) I.S. SEE SHEETS 5-6 OUTPUT CODE F/W (FIELD BUS) I.S. SEE SHEETS 7-10 ALL OUTPUT CODES NONINCENDIVE SEE SHEET 12 THE ROSEMOUNT TRANSMITTERS LISTED ABOVE ARE F.M. APPROVED AS INTRINSICALLY SAFE WHEN USED IN CIRCUIT WITH F.M. APPROVED BARRIERS WHICH MEET THE ENTITY PARAMETERS LISTED IN THE CLASS I, II, AND III, DIVISION 1 GROUPS INDICATED, TEMP CODE T4. ADDITIONALLY, THE ROSEMOUNT 751 FIELD SIGNAL INDICATOR IS F.M. APPROVED AS INTRINSICALLY SAFE WHEN CONNECTED IN CIRCUIT WITH ROSEMOUNT TRANSMITTERS (FROM ABOVE) AND F.M. APPROVED BARRIERS WHICH MEET THE ENTITY PARAMETERS LISTED FOR CLASS I, II, AND III, DIVISION 1, GROUPS INDICATED, TEMP CODE T4. TO ASSURE AN INTRINSICALLY SAFE SYSTEM, THE TRANSMITTER AND BARRIER MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURER'S FIELD WIRING INSTRUCTIONS AND THE APPLICABLE CIRCUIT DIAGRAM.					
CAD MAINTAINED (MicroStation)					
UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES [mm]. REMOVE ALL BURRS AND SHARP EDGES, MACHINE SURFACE FINISH 125	CONTRACT NO.		 ROSEMOUNT® 8200 Market Boulevard • Chanhassen, MN 55317 USA		
	DR. MIKE DOBE 03/21/89		TITLE INDEX OF I.S. & NONINCENDIVE F.M. FOR 3051C/L/P/H/T AND 3001C/S		
	CHK'D				
	APP'D. KELLY ORTH 03/22/89		SIZE A FSCM NO. DWG NO. 03031-1019		
-TOLERANCE- .X ± .1 [2,5] .XX ± .02 [0,5] .XXX ± .010 [0,25] FRACTIONS ± 1/32 ANGLES ± 2° DO NOT SCALE PRINT	APP'D. GOVT.		SCALE N/A	WT. _____	SHEET 1 OF 13

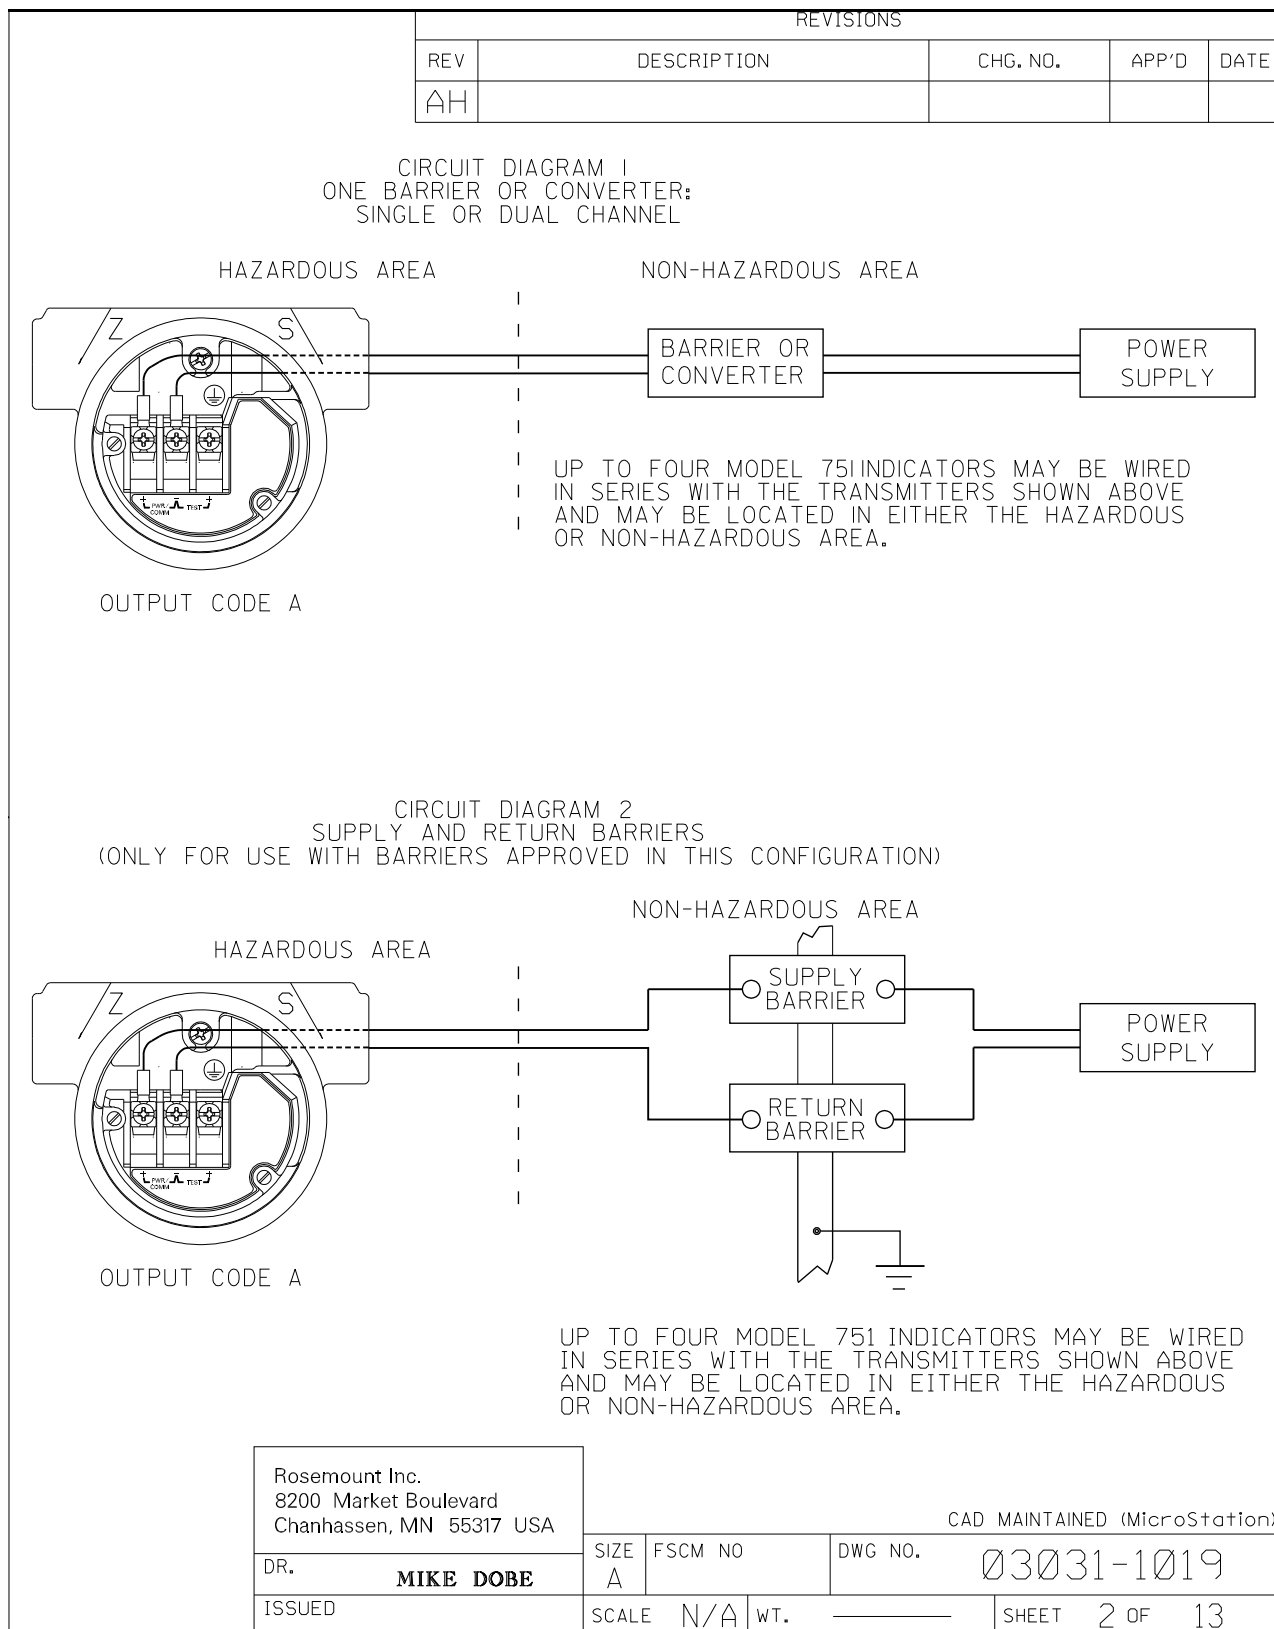

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AH				

ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAX. OPEN CIRCUIT VOLTAGE (V_{oc} OR V_t) AND MAX. SHORT CIRCUIT CURRENT (I_{sc} OR I_t) AND MAX. POWER ($V_{oc} \times I_{sc}/4$) OR ($V_t \times I_t/4$), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (V_{max}), MAXIMUM SAFE INPUT CURRENT (I_{max}), AND MAXIMUM SAFE INPUT POWER (P_{max}) OF THE INTRINSICALLY SAFE APPARATUS. IN ADDITION, THE APPROVED MAX. ALLOWABLE CONNECTED CAPACITANCE (C_a) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE CAPACITANCE AND THE UNPROTECTED INTERNAL CAPACITANCE (C_i) OF THE INTRINSICALLY SAFE APPARATUS, AND THE APPROVED MAX. ALLOWABLE CONNECTED INDUCTANCE (L_a) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE INDUCTANCE AND THE UNPROTECTED INTERNAL INDUCTANCE (L_i) OF THE INTRINSICALLY SAFE APPARATUS.


FOR OUTPUT CODE A NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

CLASS I, DIV. 1, GROUPS A AND B

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 165mA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 165mA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{oc} \times I_{sc}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .01\mu f$	C_A IS GREATER THAN $.01\mu f$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H$

CLASS I, DIV. 1, GROUPS C AND D

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 225mA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 225mA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{oc} \times I_{sc}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .01\mu f$	C_A IS GREATER THAN $.01\mu f$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H$

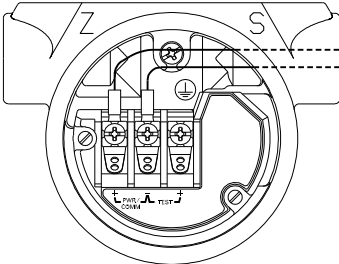

HAZARDOUS AREA

OUTPUT CODE A

NON-HAZARDOUS AREA

ASSOCIATED APPARATUS

(SEE SHEET 2)

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	MIKE DOBE	SIZE A	FSCM NO. DWG NO. 03031-1019
ISSUED	SCALE	N/A	WT. SHEET 3 OF 13

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AH				

FOR OUTPUT CODE M

CLASS I, DIV. 1, GROUPS A AND B

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 165mA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 165mA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .042\mu f$	C_A IS GREATER THAN $.042\mu f$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H$

* FOR T1 OPTION:


$L_I = 0.75mH$	L_A IS GREATER THAN $0.75mH$
----------------	--------------------------------

CLASS I, DIV. 1, GROUPS C AND D

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 225mA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 225mA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .042\mu f$	C_A IS GREATER THAN $.042\mu f$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H$

* FOR T1 OPTION:

$L_I = 0.75mH$	L_A IS GREATER THAN $0.75mH$
----------------	--------------------------------

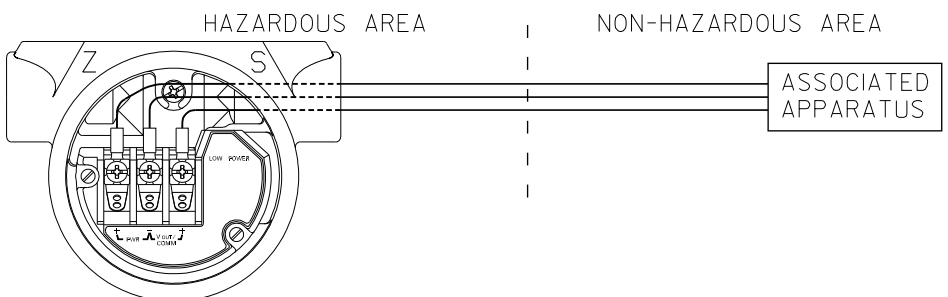


HAZARDOUS AREA


NON-HAZARDOUS AREA

ASSOCIATED APPARATUS

OUTPUT CODE M

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	MIKE DOBE	SIZE	FSCM NO.
		A	
ISSUED		SCALE	N/A WT.
		DWG NO.	03031-1019
		SHEET	5 OF 13

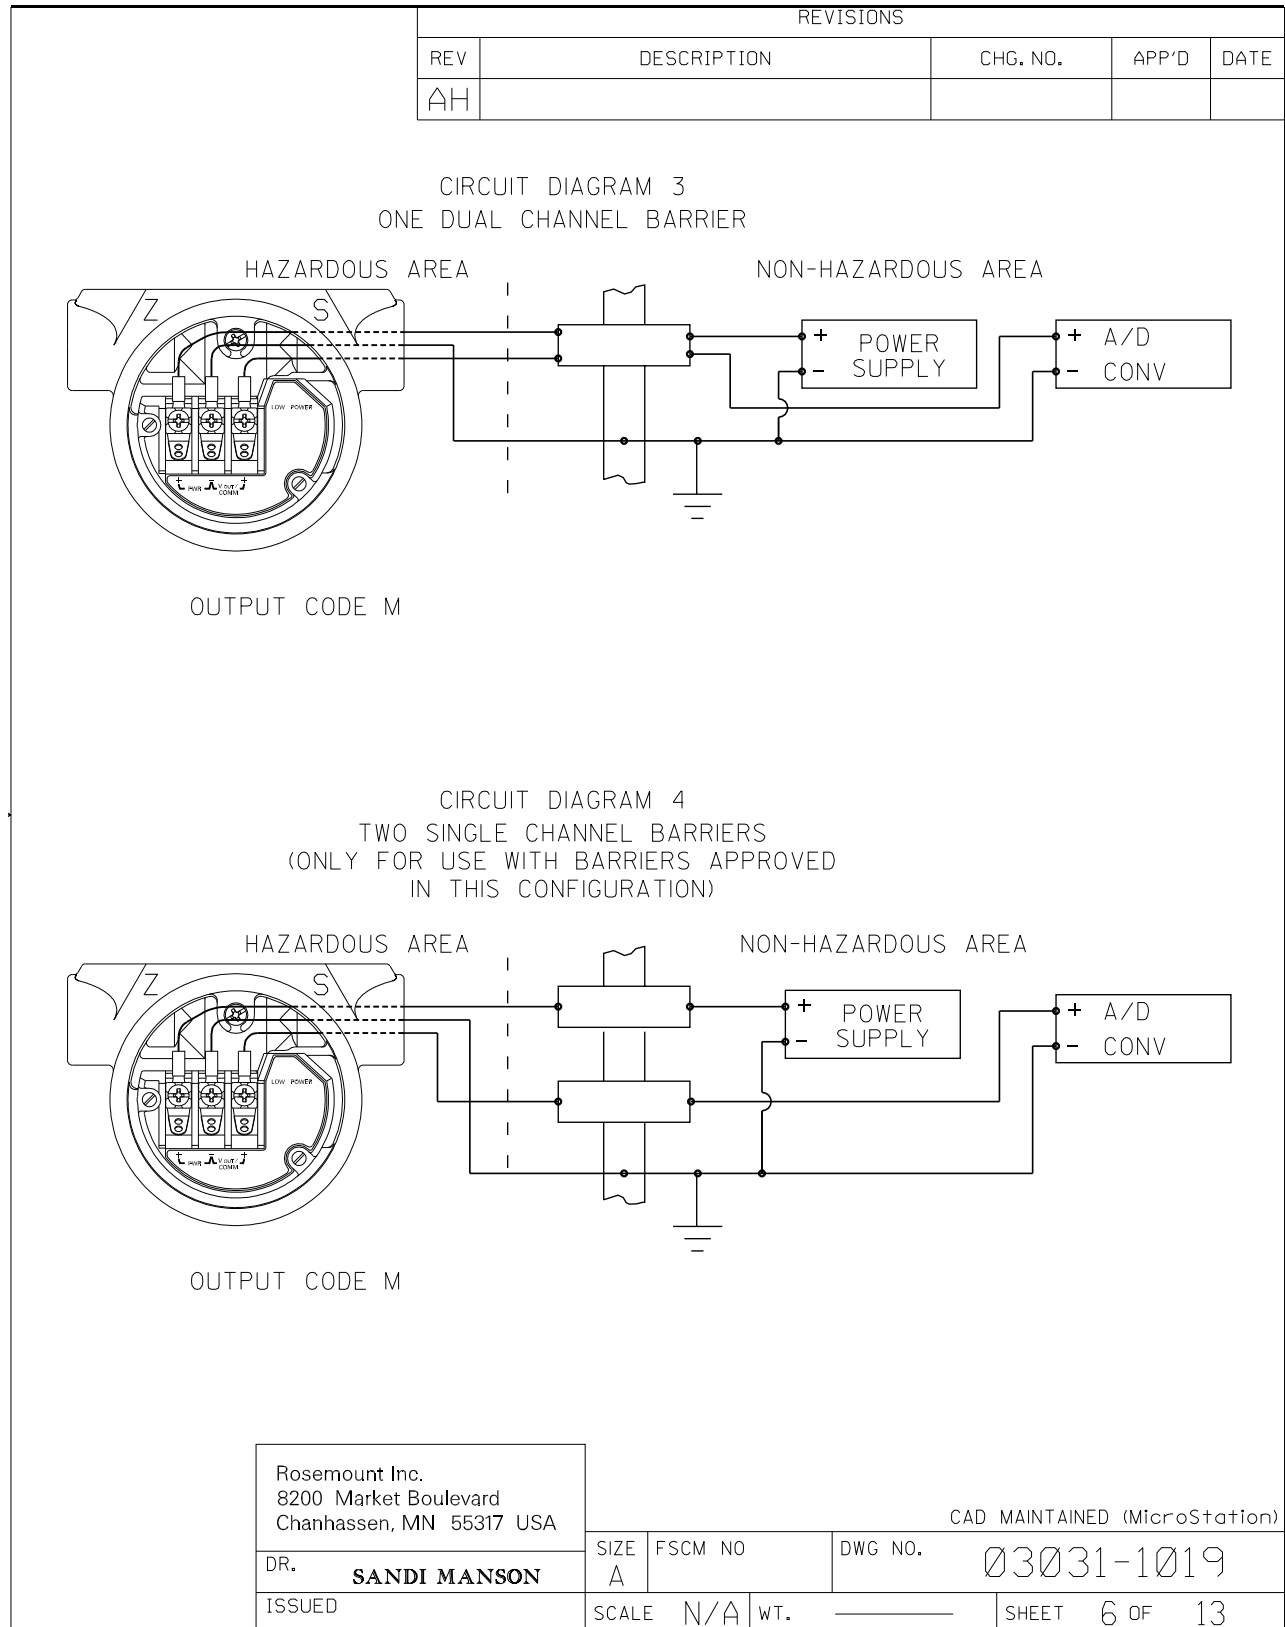

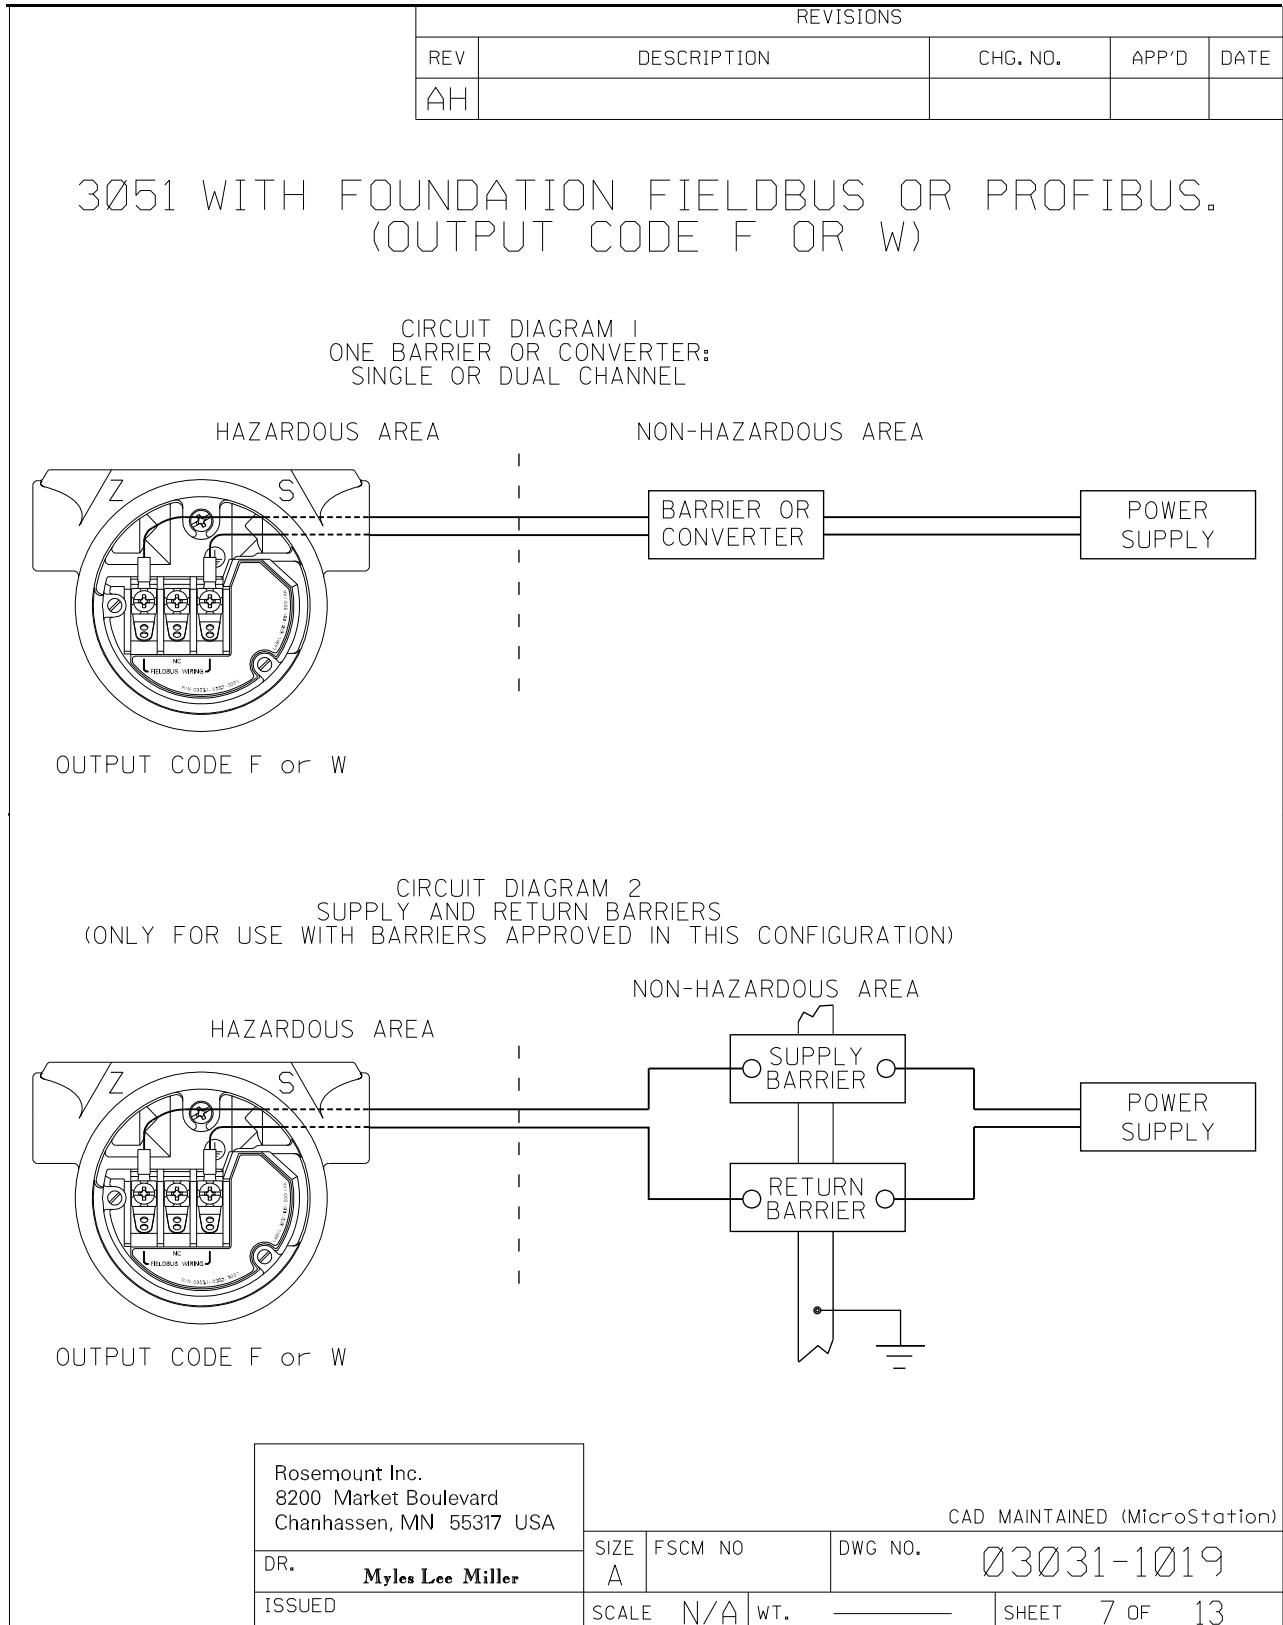


REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AH				

FOR OUTPUT CODE F or W

CLASS I, DIV. 1, GROUPS A, B, C AND D

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 300mA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 300mA
$P_{MAX} = 1.3 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1.3 WATT
$C_I = 0\mu f$	C_A IS GREATER THAN $0\mu f$
$L_I = 0\mu H$	L_A IS GREATER THAN $0\mu H$

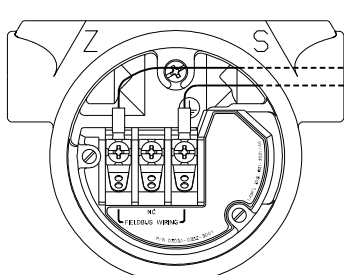

HAZARDOUS AREA | NON-HAZARDOUS AREA

OUTPUT CODE F | ASSOCIATED APPARATUS

| (SEE SHEET 3)

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	Myles Lee Miller	SIZE A	FSCM NO. DWG NO. 03031-1019
ISSUED	SCALE	N/A	WT. SHEET 8 OF 13

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AH				

FISCO CONCEPT APPROVALS

THE FISCO CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIALLY EXAMINED IN SUCH COMBINATION. FOR THIS INTERCONNECTION TO BE VALID THE VOLTAGE (U_i or V_{max}), THE CURRENT (I_i or I_{max}), AND THE POWER (P_i or P_{ma}) THAT INTRINSICALLY SAFE APPARATUS CAN RECEIVE AND REMAIN INTRINSICALLY SAFE, INCLUDING FAULTS, MUST BE EQUAL OR GREATER THAN THE VOLTAGE (U_o , V_{oc} , or V_t), THE CURRENT (I_o , I_{sc} , or I_t), AND THE POWER (P_o or P_{max}) LEVELS WHICH CAN BE DELIVERED BY THE ASSOCIATED APPARATUS, CONSIDERING FAULTS AND APPLICABLE FACTORS. ALSO, THE MAXIMUM UNPROTECTED CAPACITANCE (C_i) AND THE INDUCTANCE (L_i) OF EACH APPARATUS (BESIDES THE TERMINATION) CONNECTED TO THE FIELD BUS MUST BE LESS THAN OR EQUAL TO 5nF AND 10μH RESPECTIVELY. ONLY ONE ACTIVE DEVICE IN EACH SECTION (USUALLY THE ASSOCIATED APPARATUS) IS ALLOWED TO CONTRIBUTE THE DESIRED ENERGY FOR THE FIELD BUS SYSTEM. THE ASSOCIATED APPARATUS' VOLTAGE U_o (or V_{oc} or V_t) IS LIMITED TO A RANGE OF 14V TO 24 V.D.C. ALL OTHER EQUIPMENT COMBINED IN THE BUS CABLE MUST BE PASSIVE (THEY CANNOT PROVIDE ENERGY TO THE SYSTEM, EXCEPT A LEAKAGE CURRENT OF 50 μA FOR EACH CONNECTED DEVICE) SEPARATELY POWERED EQUIPMENT REQUIRES A GALVANIC ISOLATION TO AFFIRM THAT THE INTRINSICALLY SAFE FIELD BUS CIRCUIT WILL REMAIN PASSIVE. THE PARAMETER OF THE CABLE USED TO INTERCONNECT THE DEVICES MUST BE IN THE FOLLOWING RANGE:

LOOP RESISTANCE R' : 15...150 OHM/km
 INDUCTANCE PER UNIT LENGTH L' : 0.4...1mH/KM
 CAPACITANCE PER UNLIT LENGTH C' : 80...200nF

$C' = C' \text{ LINE/LINE} + 0.5C' \text{ LINE/SCREEN}$, IF BOTH LINES ARE FLOATING, OR
 $C' = C' \text{ LINE/LINE} + C' \text{ LINE/SCREEN}$, IF THE SCREEN IS CONNECTED TO ONE LINE
 TRUNK CABLE LENGTH: ≤ 1000 m
 SPUR CABLE LENGTH: ≤ 30 m
 SPLICE LENGTH: ≤ 1 m

AN APPROVED INFALLIBLE LINE TERMINATION TO EACH END OF THE TRUNK CABLE, WITH THE FOLLOWING PARAMETERS IS APPROPRIATE:


$R = 90...100 \text{ OHMS}$ $C = 2.2\mu F$

AN ALLOWED TERMINATION MIGHT ALREADY BE LINKED IN THE ASSOCIATED APPARATUS. DUE TO I.S. REASONS, THE NUMBER OF PASSIVE APPARATUS CONNECTED TO THE BUS SEGMENT IS NOT LIMITED. IF THE RULES ABOVE ARE FOLLOWED, UP TO A TOTAL LENGTH OF 1000 m (THE SUMMATION OF TRUNK AND ALL SPUR CABLES), THE INDUCTANCE AND THE CAPACITANCE OF THE CABLE WILL NOT DAMAGE THE INTRINSIC SAFETY OF THE SYSTEM.

NOTES:
INTRINSICALLY SAFE CLASS I, DIV. 1, GROUPS A, B, C, D

1. THE MAXIMUM NON-HAZARDOUS AREA VOLTAGE MUST NOT EXCEED 250 V.
2. CAUTION: ONLY USE SUPPLY WIRES SUITABLE FOR 5°C ABOVE SURROUNDING TEMPERATURE.
3. WARNING: REPLACEMENT OF COMPONENTS MAY DAMAGE INTRINSIC SAFETY.


Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	Myles Lee Miller	SIZE A	FSCM NO. DWG NO. 03031-1019
ISSUED		SCALE N/A	WT. _____ SHEET 9 OF 13

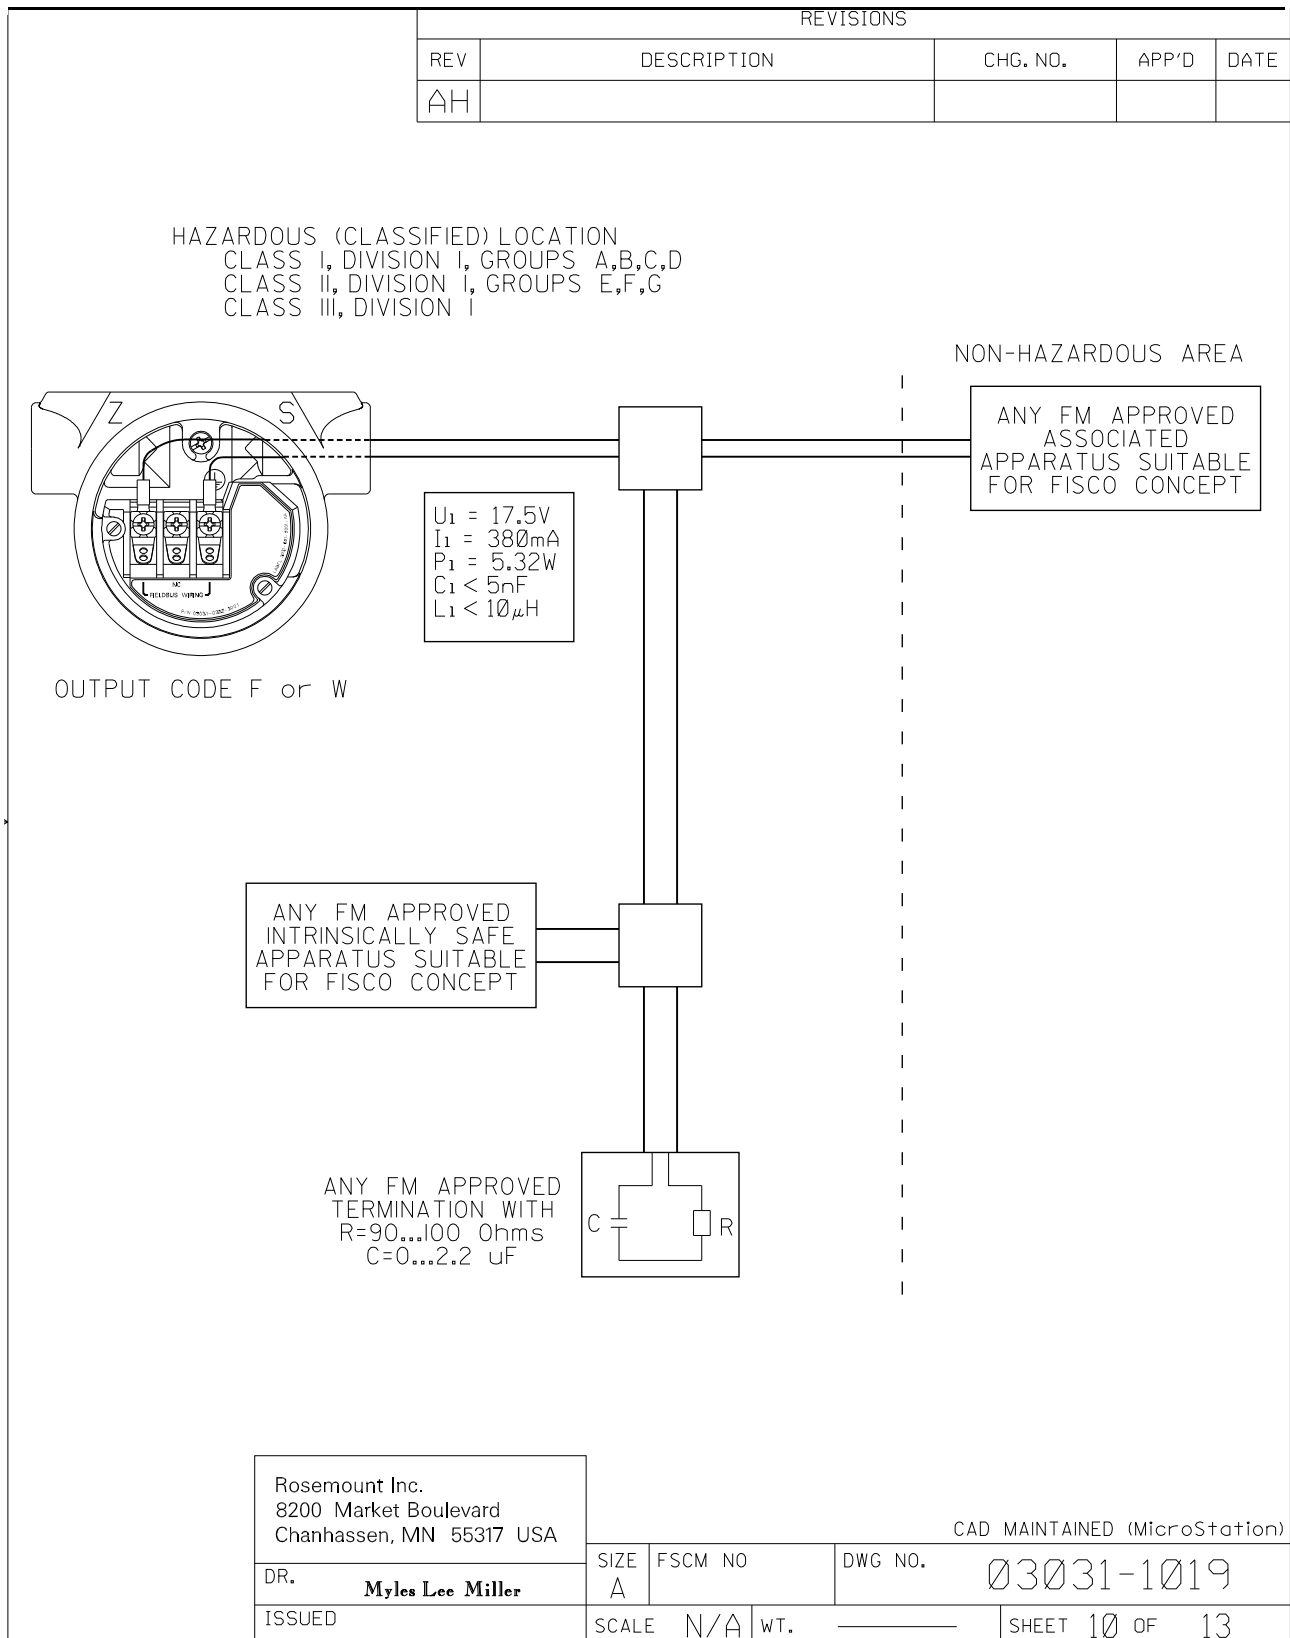

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AH				

ROSEMOUNT INC. MODEL 3051 PRESSURE TRANSMITTER FRMC DIV 2 INSTALLATION OPTIONS

CLASS I, DIV. 2 HAZARDOUS (CLASSIFIED)
LOCATION SUITABLE FOR CLASS II, III, DIV. 2

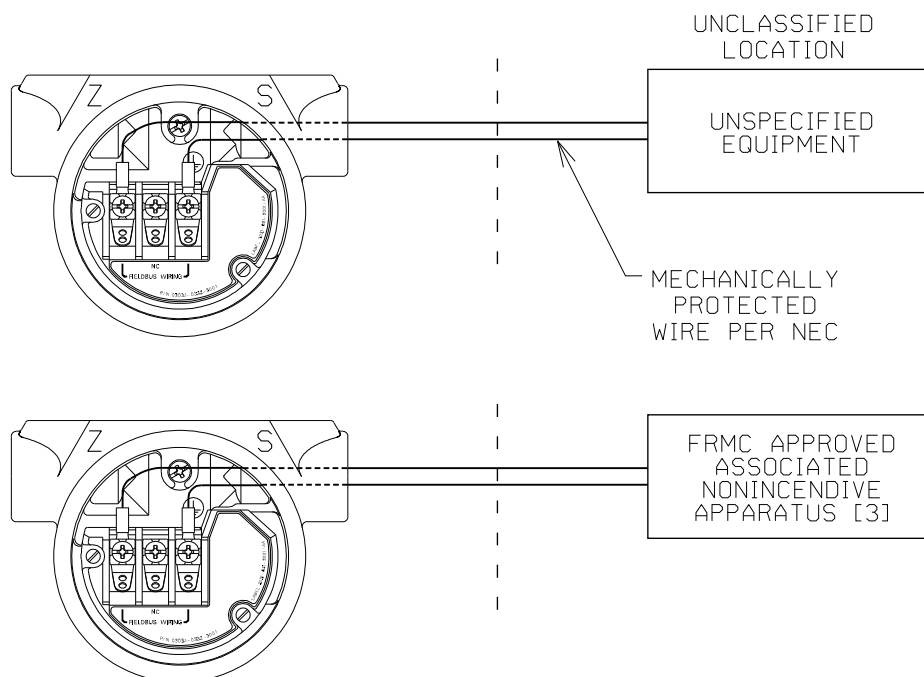

NOTES:
FRMC DIV. 2 INSTALLATION OPTIONS

[3] ASSOCIATED NONINCENDIVE APPARATUS
PARAMETERS LIMITS

$$V_{OC} \text{ OR } V_T \leq V_{MAX}$$

$$C_A \geq C_{CABLE} + C_1$$

$$L_A \geq L_{CABLE} + L_1$$

[8] MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE
FOR WIRING IN DIVISION 2 HAZARDOUS (CLASSIFIED) LOCATIONS.

[9] DUST-TIGHT CONDUIT SEAL MUST BE USED WHEN INSTALLED
IN CLASS II AND CLASS III ENVIRONMENTS.

Rosemount Inc.
8200 Market Boulevard
Chanhassen, MN 55317 USA

CAD MAINTAINED (MicroStation)

DR. **Myles Lee Miller**

SIZE
A

FSCM NO

DWG NO.

03031-1019

ISSUED

SCALE N/A

WT.

SHEET 11 OF 13

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AH				

NON-HAZARDOUS LOCATION

APPROVED NONINCENDIVE SUPPLY

NONINCENDIVE FIELD CIRCUIT
CLASS I, DIV. 2 LOCATIONS

DIVISION 2 HAZARDOUS (CLASSIFIED) LOCATION

V_{max1}	V_{max2}	V_{max3}	V_{maxN}
CI_1	CI_2	CI_3	CI_N
LI_1	LI_2	LI_3	LI_N
I_{max1}	I_{max2}	I_{max3}	I_{maxN}

WIRING PER NEC® (NFPA 70) 501-4 (b) EXCEPTION (NONINCENDIVE FIELD CIRCUIT) NFPA 70 National Electrical Code® ARTICLE 501-4(b) EXCEPTION: "WIRING IN NONINCENDIVE CIRCUITS SHALL BE PERMITTED USING ANY OF THE METHODS SUITABLE FOR WIRING IN ORDINARY LOCATIONS."

IN NORMAL OPERATION

DEVICES CONTROL THROUGH-CURRENT

PARAMETERS	DEVICE	ROSEMOUNT 3051	FIELD BUS
$V_{oc} <=$	Minimum of ($V_{max1}, V_{max2}, \dots, V_{maxN}$)	4-20mA/HART 42.4V	1-5Vdc 12V 30V
$I_{max1} >=$	$I_{q1} + I_{signal1}$	Maximum normal operating current	27mA
$I_{max2} >=$	$I_{q1} + I_{signal2}$		
.		C_a	0uF
.		L_a	0uH
.			
$I_{maxN} >=$	$I_{qN} + I_{signalN}$	ROSEMOUNT 3051 TRANSMITTERS ARE CURRENT CONTROLLERS ON INDIVIDUAL PARALLEL BRANCHES WITH RESPECT TO THE POWER SUPPLY. IN NONINCENDIVE INSTALLATIONS THE I_{max} FOR EACH TRANSMITTER IS NOT RELATED TO THE MAXIMUM CURRENT OF THE POWER SUPPLY (I_{sc}) IN THE SAME MANNER AS FOR TRANSMITTER INSTALLED PER I.S. REQUIREMENTS, BECAUSE NONINCENDIVE REQUIREMENTS INCLUDE ONLY NORMAL OPERATING CONDITIONS.	
$C_a <=$	$C_{11} + C_{12} + \dots + C_{1N} + C_{cable}$		
$L_a <=$	$L_{11} + L_{12} + \dots + L_{1N} + L_{cable}$		

I_{max} for an individual device = $I_q + I_{signal}$

I_q = Quiescent current through device
(Maximum quiescent current for the device)

I_{signal} = Signaling current through device
(Protocol may limit signaling to one device at a time)

Operating $I_{max} = I_{q1} + I_{q2} + \dots + I_{qN} + I_{signal max}$

$I_{signal max} = \text{Max. of } (I_{signal1}, I_{signal2}, \dots, I_{signalN})$

REFERENCE: APPENDIX A7.3 (FM3611)

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	Jon Steffens	SIZE A	FSCM NO. DWG NO. 03031-1019
ISSUED		SCALE N/A	WT. SHEET 12 OF 13

B.6.2 Canadian standards association (CSA) 03031-1024

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY	REVISIONS				
	REV	DESCRIPTION	CHG. NO.	APP'D	DATE
	AC	REM It, Vt FROM ENTITY PARAMETERS	RTC1009279	W.C.R.	7/11/00
	AD	ADD FISCO FIELD BUS	RTC1012624	J.P.W.	4/4/02
	AE	UPDATE FOR HART 7	RTC1052064	D.R.S.	10/5/11

APPROVALS FOR

3051C
3051L
3051H
3051CA
3051T

OUTPUT CODE A (4-20 mA HART) I.S. SEE SHEETS 2-3
OUTPUT CODE M (LOW POWER) I.S. SEE SHEETS 3-4
OUTPUT CODE F/W (FIELD BUS) I.S. SEE SHEETS 5-7
OUTPUT CODES A,F,M,W I.S. ENTITY PARAMETERS SHEET 8-9

TO ASSURE AN INTRINSICALLY SAFE SYSTEM, THE TRANSMITTER AND BARRIER
MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURER'S FIELD WIRING
INSTRUCTIONS AND THE APPLICABLE CIRCUIT DIAGRAM.

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS
MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

AVERTISSEMENT - RISQUE D'EXPLOSION - LA SUBSTITUTION DE COMPOSANTS
PEUT RENDRE CE MATERIEL INACCEPTABLE POUR LES EMPLACEMENTS
DE CLASSE I, DIVISION 2.

CAD MAINTAINED (MicroStation)


UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES [mm]. REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125	CONTRACT NO.		 ROSEMOUNT® 8200 Market Boulevard • Chanhassen, MN 55317 USA				
	DR.	Mike Dobe 08/27/90					
	CHK'D		TITLE	INDEX OF I.S. CSA FOR 3151C/L/H/T			
	APP'D.	GLEN MONZO 8/31/90	SIZE	FSCM NO	DWG NO.	03031-1024	
			A				
	APP'D. GOVT.	SCALE	N/A	WT.		SHEET	1 OF 9

DO NOT SCALE PRINT

REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				

CSA INTRINSIC SAFETY APPROVALS
CIRCUIT CONNECTION WITH BARRIER OR CONVERTER

Ex ia
INTRINSICALLY SAFE/SECURITE INTRINSEQUE
4-20 mA, ("A" OUTPUT CODE)

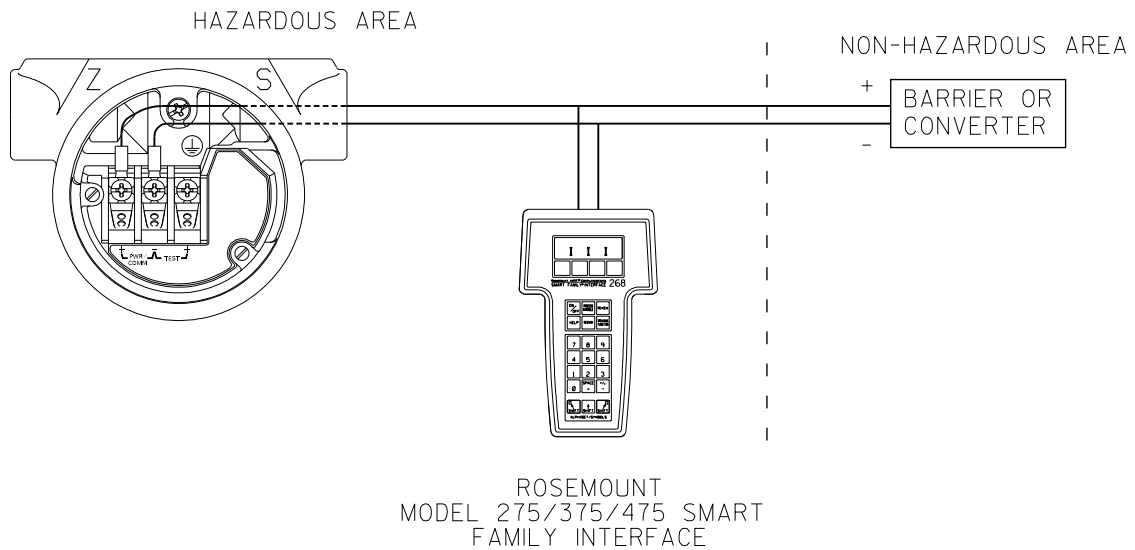

** FOR THE LOW POWER OPTION, SEE PAGE 4 FOR THE CIRCUIT CONNECTION WITH BARRIER OR CONVERTER. FOR FIELDBUS OPTIONS("F" or "W" OUTPUT CODE), SEE PAGE 5 FOR PARAMETERS AND CIRCUIT CONNECTION TO BARRIER.

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)		
DR.	Mike Dobe 08/27/90	SIZE A	FSCM NO	DWG NO. 03031-1024
ISSUED		SCALE N/A	WT. _____	SHEET 2 OF 9

		REVISIONS			
REV	DESCRIPTION	CHG. NO.	APP'D	DATE	
AE					

4-20 mA, ("A" OUTPUT CODE)

DEVICE	PARAMETERS	APPROVED FOR CLASS I, DIV.I
CSA APPROVED SAFETY BARRIER	30 V OR LESS	GROUPS A, B, C, D
	* 330 OHMS OR MORE	
	* 28 V OR LESS	
	* 300 OHMS OR MORE	
	25 V OR LESS	
FOXBORO CONVERTER 2AI-I2V-CGB, 2AI-I3V-CGB, 2AS-I3I-CGB, 3A2-I2D-CGB, 3A2-I3D-CGB, 3AD-I3I-CGB, 3A4-I2D-CGB, 2AS-I2I-CGB, 3F4-I2DA	200 OHMS OR MORE	GROUPS B, C, D
	* 22 V OR LESS	
	* 180 OHMS OR MORE	
CSA APPROVED SAFETY BARRIER	30 V OR LESS 150 OHMS OR MORE	GROUPS C, D

LOW POWER, ("M" OUTPUT CODE)

DEVICE	PARAMETERS	APPROVED FOR CLASS I, DIV.I
CSA APPROVED SAFETY BARRIER	Supply $\leq 28V, \geq 300 \Omega$	GROUPS A, B, C, D
	Return $\leq 10V, \geq 47 \Omega$	
	Supply $\leq 30V, \geq 150 \Omega$	GROUPS C, D
	Return $\leq 10V, \geq 47 \Omega$	


* MAY BE USED WITH ROSEMOUNT MODEL 275/375/475
SMART FAMILY INTERFACE.

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)		
DR. Mike Dobe	SIZE A	FSCM NO	DWG NO.	03031-1024
ISSUED	SCALE N/A	WT.		SHEET 3 OF 9

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				


CSA INTRINSIC SAFETY APPROVALS
 3051C LOW POWER CIRCUIT CONNECTION WITH INTRINSIC SAFETY BARRIERS
 Ex ia
 INTRINSICALLY SAFE/SECURITE INTRINSEQUE
 LOWPOWER, ("M" OUTPUT CODE)

HAZARDOUS AREA

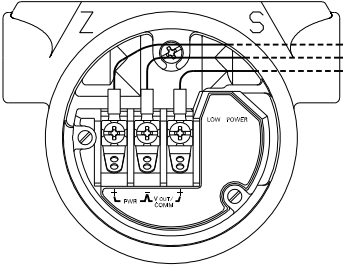


ROSEMOUNT MODEL 275/375/475

NON-HAZARDOUS AREA

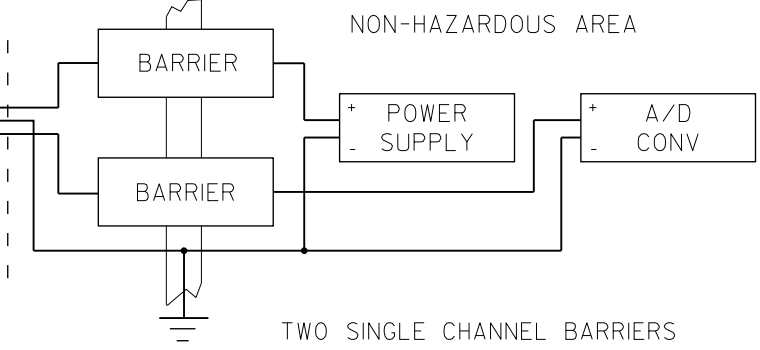


TWO SINGLE CHANNEL BARRIERS

HAZARDOUS AREA

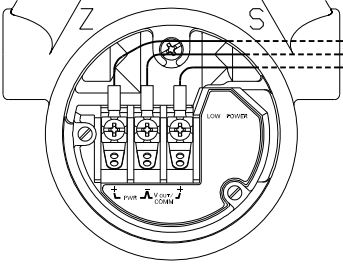

ROSEMOUNT MODEL 275/375/475

NON-HAZARDOUS AREA

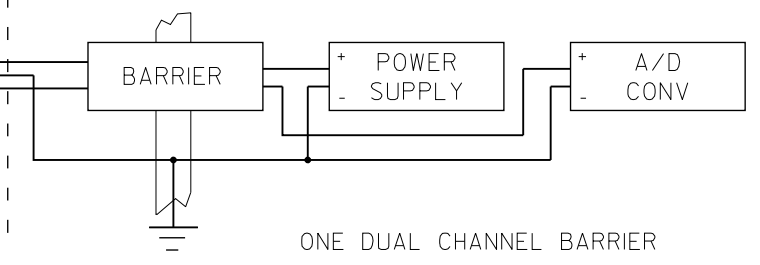

ONE DUAL CHANNEL BARRIER

APPROVED FOR CLASS I, DIVISION I, GROUPS A,B,C,D WHEN USED IN CIRCUIT WITH TWO CSA APPROVED SINGLE CHANNEL SAFETY BARRIERS, ONE WITH APPROVED SAFETY PARAMETERS OF 28 VOLTS OR LESS AND 300 OHMS OR MORE IN +PWR LINE, AND ONE WITH APPROVED SAFETY PARAMETERS OF 10 VOLTS OR LESS AND 47 OHMS OR MORE IN V_{OUT} LINE, OR ONE CSA APPROVED DUAL CHANNEL SAFETY BARRIER WITH IDENTICAL APPROVED SAFETY PARAMETERS CONNECTED IN LIKE MANNER, AS ABOVE.

APPROVED FOR CLASS I, DIVISION I, GROUPS C,D WHEN USED IN CIRCUIT WITH TWO CSA APPROVED SINGLE CHANNEL SAFETY BARRIERS, ONE WITH APPROVED SAFETY PARAMETERS OF 30 VOLTS OR LESS AND 150 OHMS OR MORE IN +PWR LINE AND ONE WITH APPROVED SAFETY PARAMETERS OF 10 VOLTS OR LESS AND 47 OHMS OR MORE IN V_{OUT} LINE.

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR. SANDI MANSON	SIZE A	FSCM NO	DWG NO. 03031-1024
ISSUED	SCALE N/A	WT. _____	SHEET 4 OF 9

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				


FIELDBUS, ("F" or "W" OUTPUT CODE)

DEVICE	PARAMETERS	APPROVED FOR CLASS I, DIV. I
CSA APPROVED SAFETY BARRIER	30 V OR LESS	GROUPS A, B, C, D
	300 OHMS OR MORE	
	28 V OR LESS	
	235 OHMS OR MORE	
	25 V OR LESS	
	160 OHMS OR MORE	
	22 V OR LESS	
	100 OHMS OR MORE	


CSA INTRINSIC SAFETY APPROVALS
CIRCUIT CONNECTION WITH BARRIER OR CONVERTER

Ex ia
INTRINSICALLY SAFE/SECURITE INTRINSEQUE
FIELDBUS, ("F" or "W" OUTPUT CODE)

HAZARDOUS AREA

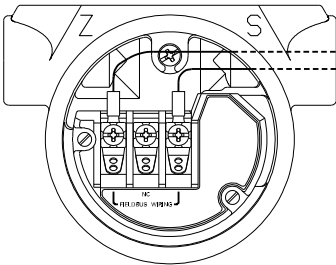

NON-HAZARDOUS AREA

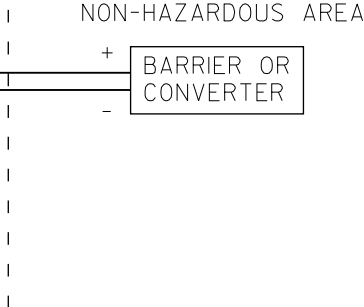

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS
MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

AVERTISSEMENT - RISQUE D'EXPLOSION - LA SUBSTITUTION DE COMPOSANTS
PEUT RENDRE CE MATERIEL INACCEPTABLE POUR LES EMBLEMENTS
DE CLASSE I, DIVISION 2.

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR. Myles Lee Miller	SIZE A	FSCM NO	DWG NO. 03031-1024
ISSUED	SCALE N/A	WT. _____	SHEET 5 OF 9

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				

FISCO CONCEPT APPROVALS

THE FISCO CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIALLY EXAMINED IN SUCH COMBINATION. FOR THIS INTERCONNECTION TO BE VALID THE VOLTAGE (U_i or V_{max}), THE CURRENT (I_i or I_{max}), AND THE POWER (P_i or P_{ma}) THAT INTRINSICALLY SAFE APPARATUS CAN RECEIVE AND REMAIN INTRINSICALLY SAFE, INCLUDING FAULTS, MUST BE EQUAL OR GREATER THAN THE VOLTAGE (U_o , V_{oc} , or V_t), THE CURRENT (I_o , I_{sc} , or I_t), AND THE POWER (P_o or P_{max}) LEVELS WHICH CAN BE DELIVERED BY THE ASSOCIATED APPARATUS, CONSIDERING FAULTS AND APPLICABLE FACTORS. ALSO, THE MAXIMUM UNPROTECTED CAPACITANCE (C_i) AND THE INDUCTANCE (L_i) OF EACH APPARATUS (BESIDES THE TERMINATION) CONNECTED TO THE FIELD BUS MUST BE LESS THAN OR EQUAL TO 5nF AND 10μH RESPECTIVELY.

ONLY ONE ACTIVE DEVICE IN EACH SECTION (USUALLY THE ASSOCIATED APPARATUS) IS ALLOWED TO CONTRIBUTE THE DESIRED ENERGY FOR THE FIELD BUS SYSTEM. THE ASSOCIATED APPARATUS' VOLTAGE U_o (or V_{oc} or V_t) IS LIMITED TO A RANGE OF 14V TO 24 V.D.C. ALL OTHER EQUIPMENT COMBINED IN THE BUS CABLE MUST BE PASSIVE (THEY CANNOT PROVIDE ENERGY TO THE SYSTEM, EXCEPT A LEAKAGE CURRENT OF 50 μA FOR EACH CONNECTED DEVICE) SEPARATELY POWERED EQUIPMENT REQUIRES A GALVANIC ISOLATION TO AFFIRM THAT THE INTRINSICALLY SAFE FIELD BUS CIRCUIT WILL REMAIN PASSIVE. THE PARAMETER OF THE CABLE USED TO INTERCONNECT THE DEVICES MUST BE IN THE FOLLOWING RANGE:

LOOP RESISTANCE R' : 15...150 OHM/km
 INDUCTANCE PER UNIT LENGTH L' : 0.4...1mH/KM
 CAPACITANCE PER UNLIT LENGTH C' : 80...200nF

$C' = C' \text{ LINE/LINE} + 0.5C' \text{ LINE/SCREEN}$, IF BOTH LINES ARE FLOATING, OR
 $C' = C' \text{ LINE/LINE} + C' \text{ LINE/SCREEN}$, IF THE SCREEN IS CONNECTED TO ONE LINE

TRUNK CABLE LENGTH: ≤ 1000 m
 SPUR CABLE LENGTH: ≤ 30 m
 SPLICE LENGTH: ≤ 1 m

AN APPROVED INFALLIBLE LINE TERMINATION TO EACH END OF THE TRUNK CABLE, WITH THE FOLLOWING PARAMETERS IS APPROPRIATE:


$R = 90...100 \text{ OHMS}$ $C = 2.2\mu F$

AN ALLOWED TERMINATION MIGHT ALREADY BE LINKED IN THE ASSOCIATED APPARATUS. DUE TO I.S. REASONS, THE NUMBER OF PASSIVE APPARATUS CONNECTED TO THE BUS SEGMENT IS NOT LIMITED. IF THE RULES ABOVE ARE FOLLOWED, UP TO A TOTAL LENGTH OF 1000 m (THE SUMMATION OF TRUNK AND ALL SPUR CABLES), THE INDUCTANCE AND THE CAPACITANCE OF THE CABLE WILL NOT DAMAGE THE INTRINSIC SAFETY OF THE SYSTEM.

NOTES:
INTRINSICALLY SAFE CLASS I, DIV. 1, GROUPS A, B, C, D

1. THE MAXIMUM NON-HAZARDOUS AREA VOLTAGE MUST NOT EXCEED 250 V.
2. CAUTION: ONLY USE SUPPLY WIRES SUITABLE FOR 5°C ABOVE SURROUNDING TEMPERATURE.
3. WARNING: REPLACEMENT OF COMPONENTS MAY DAMAGE INTRINSIC SAFETY.

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	Myles Lee Miller	SIZE A	FSCM NO. DWG NO. 03031-1024
ISSUED	SCALE N/A	WT. ———	SHEET 6 OF 9

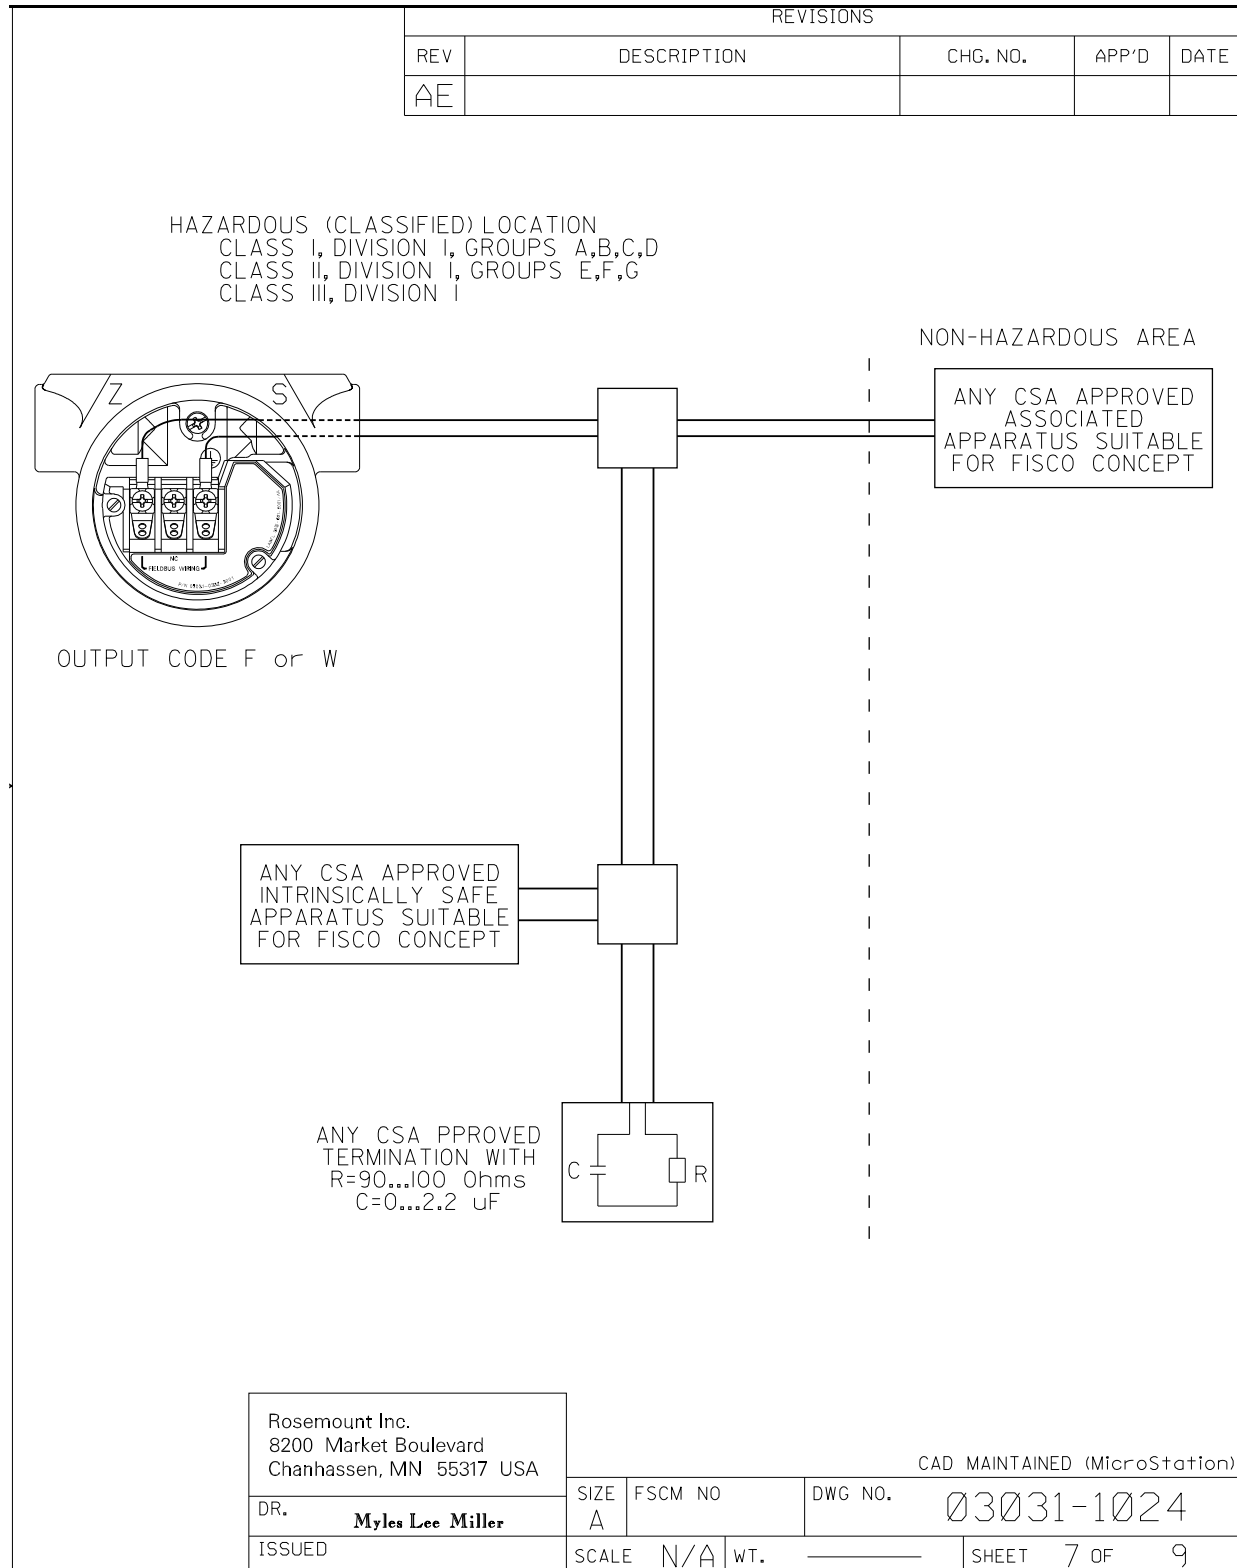

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				

3Ø51 I.S. ENTITY PARAMETERS. (OUTPUT CODE A,F,M or W)

ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAX. OPEN CIRCUIT VOLTAGE (V_{OC}) AND MAX. SHORT CIRCUIT CURRENT (I_{SC}) AND MAX. POWER ($V_{OC} \times I_{SC}/4$), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (V_{MAX}), MAXIMUM SAFE INPUT CURRENT (I_{MAX}), AND MAXIMUM SAFE INPUT POWER (P_{MAX}) OF THE INTRINSICALLY SAFE APPARATUS. IN ADDITION, THE APPROVED MAX. ALLOWABLE CONNECTED CAPACITANCE (C_A) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE CAPACITANCE AND THE UNPROTECTED INTERNAL CAPACITANCE (C_I) OF THE INTRINSICALLY SAFE APPARATUS, AND THE APPROVED MAX. ALLOWABLE CONNECTED INDUCTANCE (L_A) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE INDUCTANCE AND THE UNPROTECTED INTERNAL INDUCTANCE (L_I) OF THE INTRINSICALLY SAFE APPARATUS.

FOR OUTPUT CODE A

CLASS I, DIV. 1, GROUPS A, B, C AND D

$V_{MAX} = 30V$	V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 200mA$	I_{SC} IS LESS THAN OR EQUAL TO 200mA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .01\mu f$	C_A IS GREATER THAN $.01\mu f + C \text{ CABLE}$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H + L \text{ CABLE}$

FOR OUTPUT CODE F or W

CLASS I, DIV. 1, GROUPS A, B, C AND D

$V_{MAX} = 30V$	V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 300mA$	I_{SC} IS LESS THAN OR EQUAL TO 300mA
$P_{MAX} = 1.3 \text{ WATT}$	$(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1.3 WATT
$C_I = 0\mu f$	C_A IS GREATER THAN $0\mu f + C \text{ CABLE}$
$L_I = 0\mu H$	L_A IS GREATER THAN $0\mu H + L \text{ CABLE}$

NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA		CAD MAINTAINED (MicroStation)	
DR.	JON STEFFENS	SIZE A	FSCM NO. _____
ISSUED		DWG NO.	03031-1024
SCALE		N/A	WT. _____
SHEET		8 OF	9


Product Certifications 213

Appendix C Field Communicator Menu Trees and Fast Keys

Field Communicator menu trees	page 215
Field Communicator fast keys	page 220


C.1 Field Communicator menu trees

Figure C-1. Rosemount 3051 Field Communicator menu tree: Overview

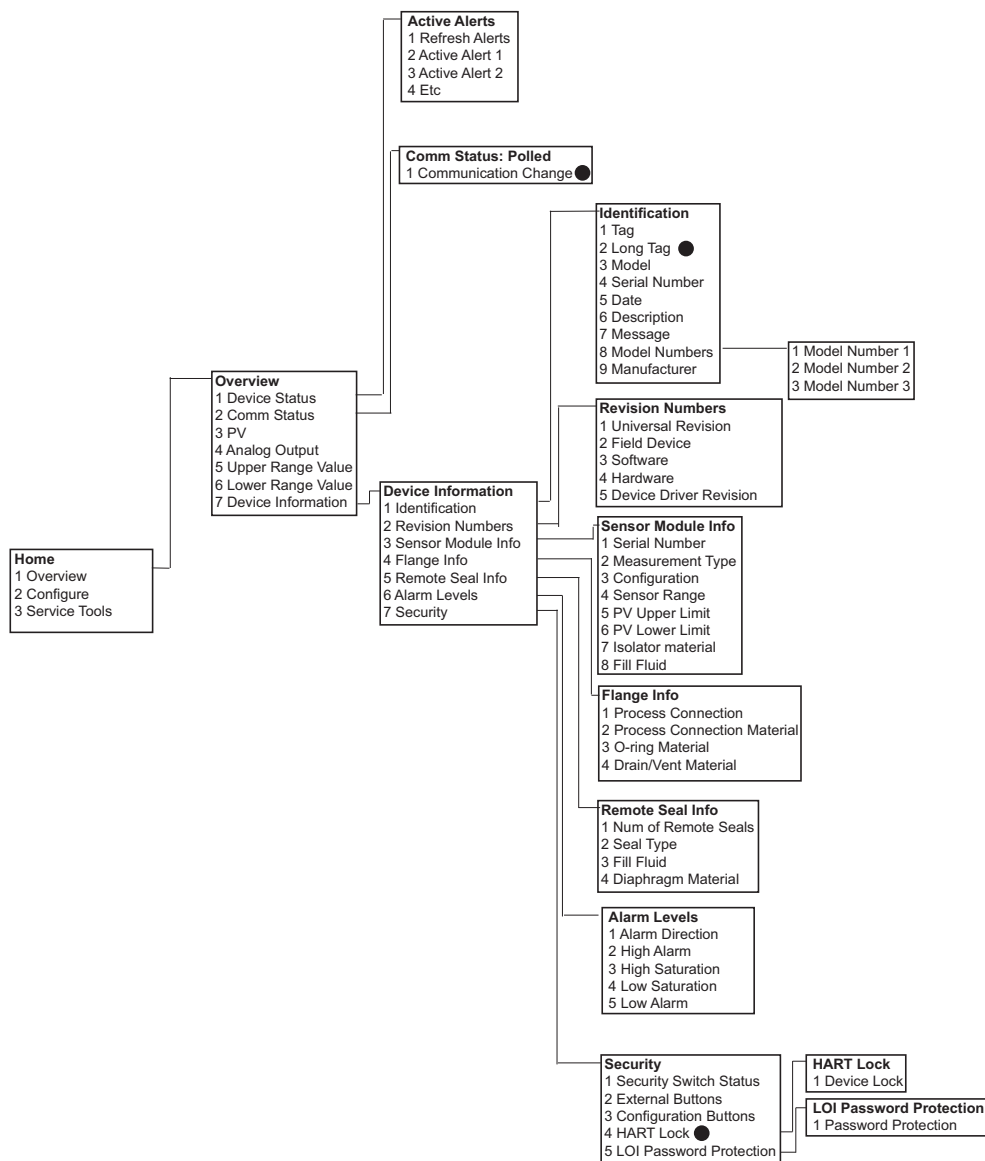


Selections with black circle are only available in HART Revision 7 mode. Selection will not appear in HART Revision 5 DD.

Figure C-2. Rosemount 3051 Field Communicator menu tree: Configure - Guided Setup

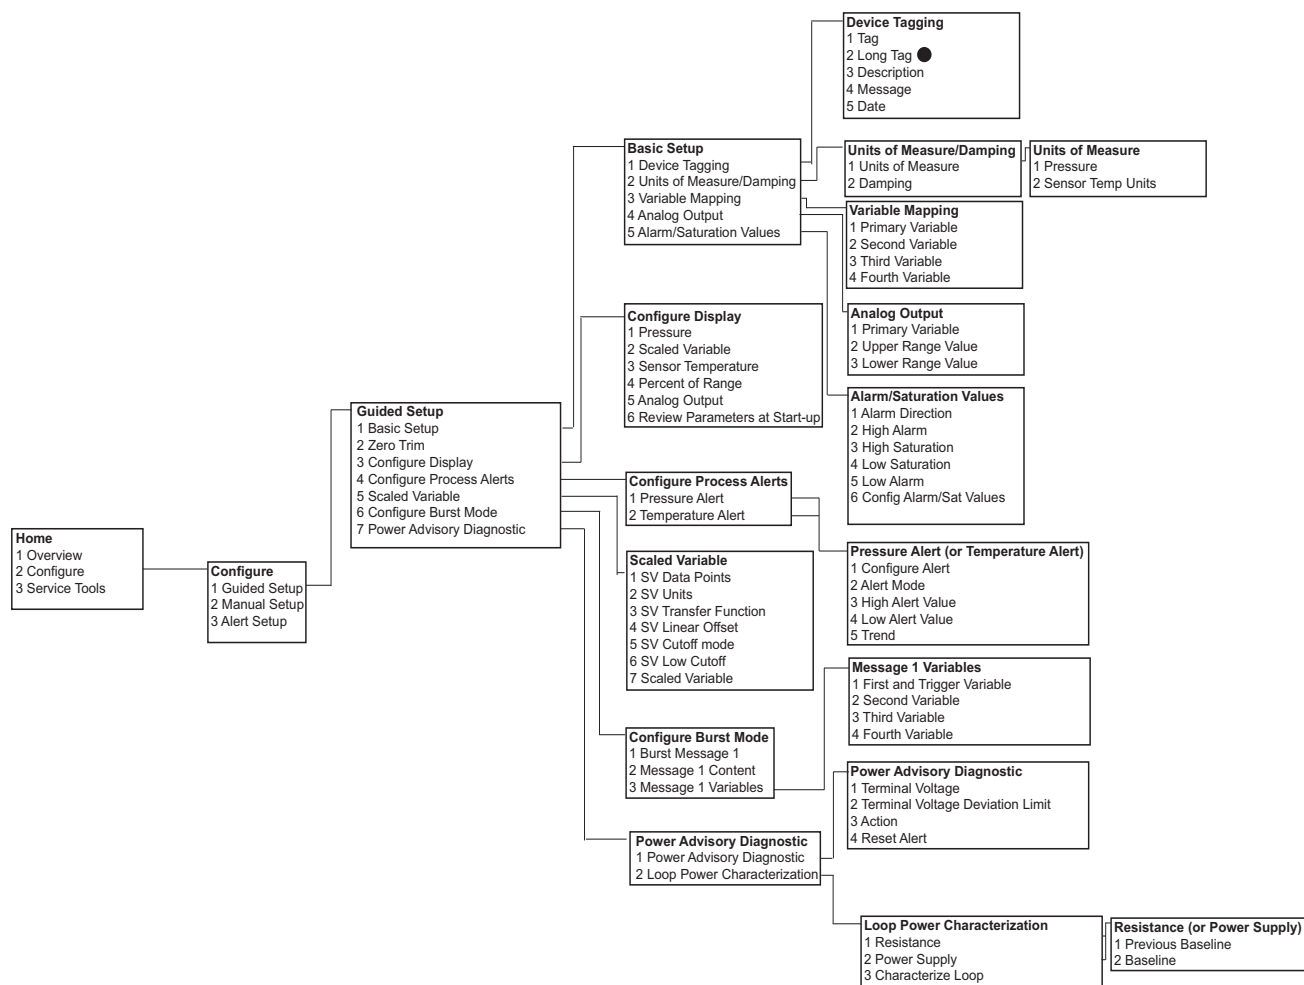


Selections with black circle are only available in HART Revision 7 mode. Selection will not appear in HART Revision 5 DD.

Figure C-3. Rosemount 3051 Field Communicator menu tree: Configure - Manual Setup

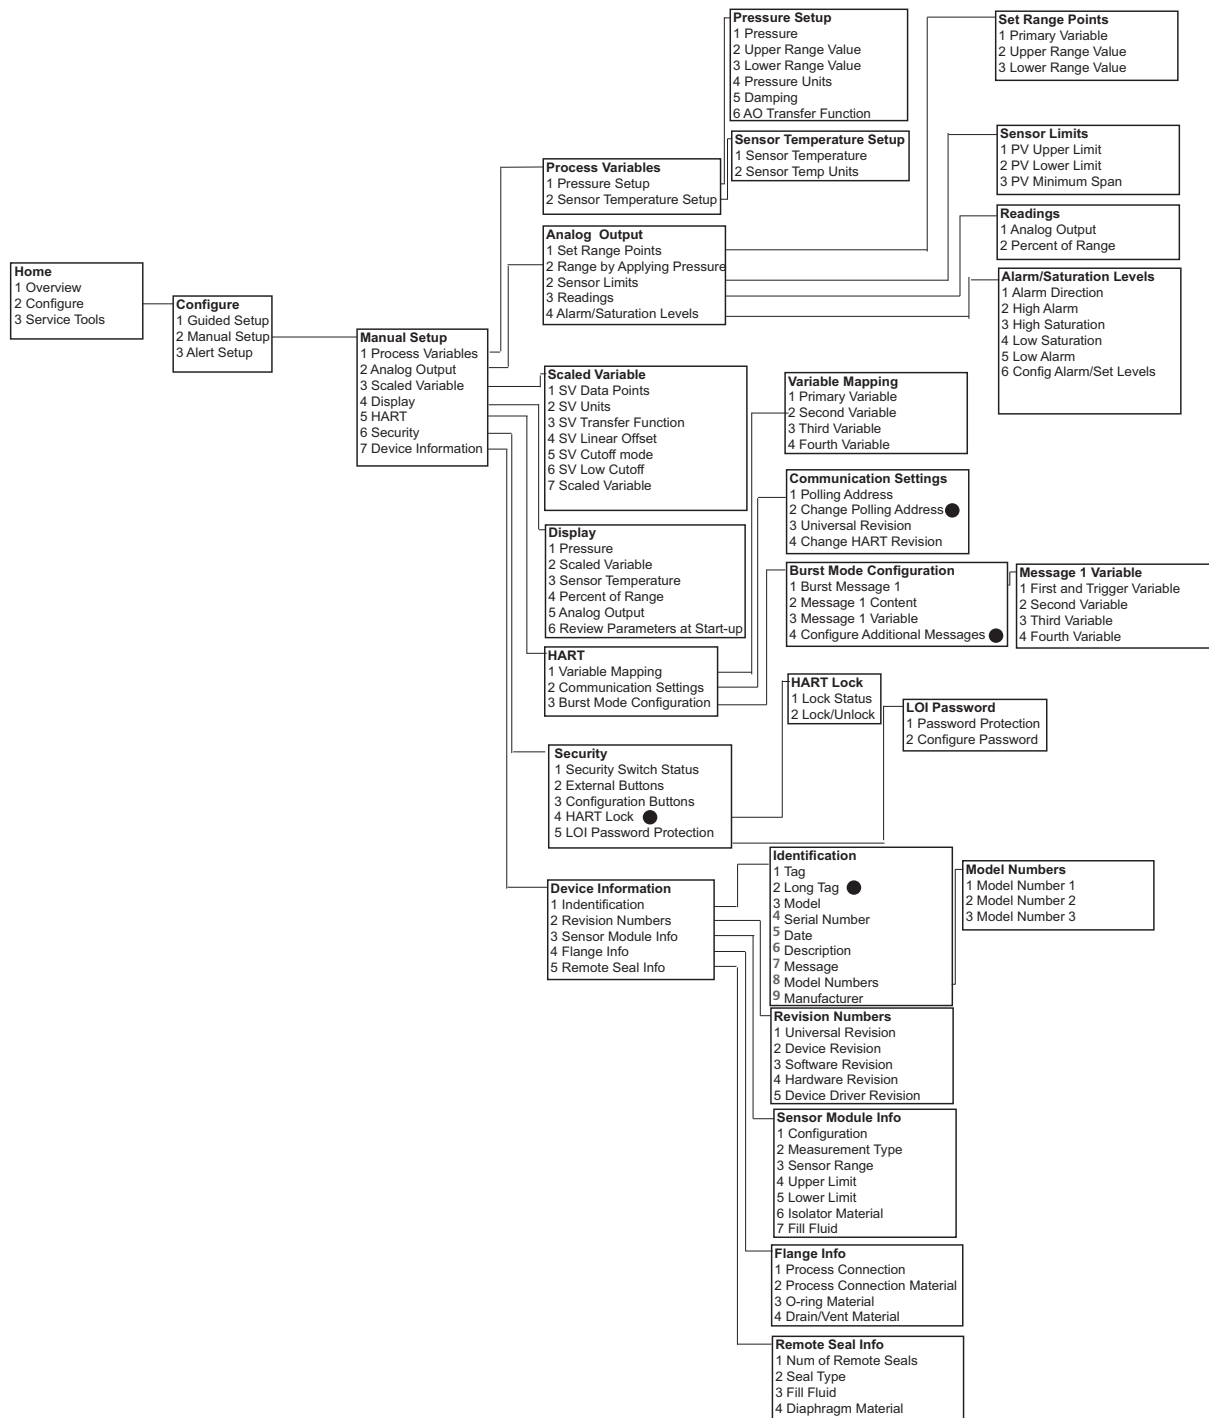


Selections with black circle are only available in HART Revision 7 mode. Selection will not appear in HART Revision 5 DD.

Figure C-4. Rosemount 3051 Field Communicator menu tree: Configure - Alert Setup

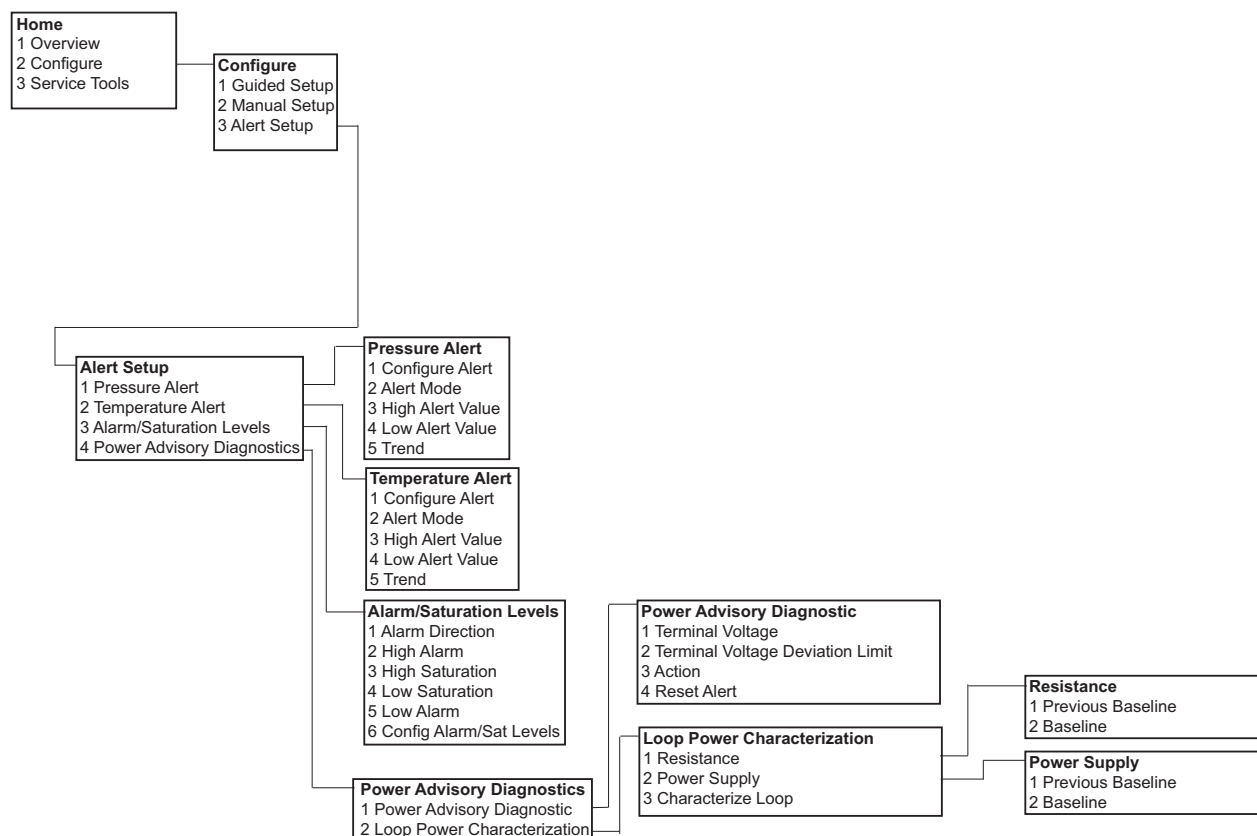

Selections with black circle are only available in HART Revision 7 mode. Selection will not appear in HART Revision 5 DD.

Figure C-5. Rosemount 3051 Field Communicator menu tree - Service Tools

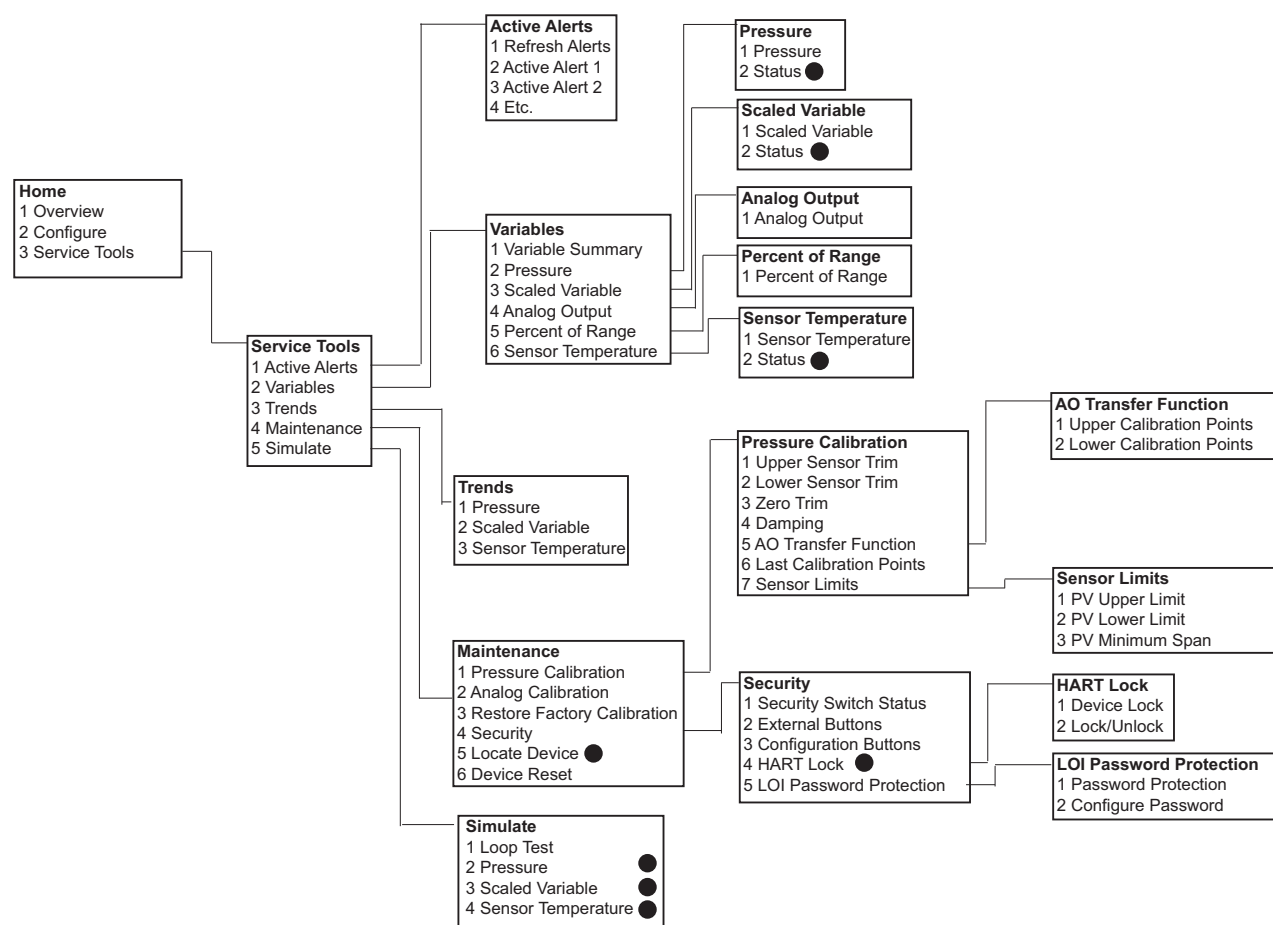

Selections with black circle are only available in HART Revision 7 mode. Selection will not appear in HART Revision 5 DD.

C.2 Field Communicator fast keys


- A (✓) indicates the basic configuration parameters. At minimum these parameters should be verified as a part of configuration and startup.
- A (7) indicates availability only in HART revision 7 mode.

Table C-1. Device Revision 9 and 10 (HART7), DD Revision 1 Fast Key sequence


	Function	Fast Key Sequence	
		HART 7	HART 5
✓	Alarm and Saturation Levels	2, 2, 2, 5	2, 2, 2, 5
✓	Damping	2, 2, 1, 1, 5	2, 2, 1, 1, 5
✓	Primary Variable	2, 2, 5, 1, 1	2, 2, 5, 1, 1
✓	Range Values	2, 2, 2, 1	2, 2, 2, 1
✓	Tag	2, 2, 7, 1, 1	2, 2, 7, 1, 1
✓	Transfer Function	2, 2, 1, 1, 6	2, 2, 1, 1, 6
✓	Pressure Units	2, 2, 1, 1, 4	2, 2, 1, 1, 4
	Date	2, 2, 7, 1, 5	2, 2, 7, 1, 4
	Descriptor	2, 2, 7, 1, 6	2, 2, 7, 1, 5
	Digital to Analog Trim (4 - 20 mA Output)	3, 4, 2, 1	3, 4, 2, 1
	Digital Zero Trim	3, 4, 1, 3	3, 4, 1, 3
	Display Configuration	2, 2, 4	2, 2, 4
	LOI Password Protection	2, 2, 6, 5	2, 2, 6, 4
	Loop Test	3, 5, 1	3, 5, 1
	Lower Sensor Trim	3, 4, 1, 2	3, 4, 1, 2
	Message	2, 2, 7, 1, 7	2, 2, 7, 1, 6
	Pressure Trend	3, 3, 1	3, 3, 1
	Rerange with Keypad	2, 2, 2, 1	2, 2, 2, 1
	Scaled D/A Trim (4 - 20 mA Output)	3, 4, 2, 2	3, 4, 2, 2
	Scaled Variable	2, 2, 3	2, 2, 3
	Sensor Temperature Trend	3, 3, 3	3, 3, 3
	Switch HART Revision	2, 2, 5, 2, 4	2, 2, 5, 2, 3
	Upper Sensor Trim	3, 4, 1, 1	3, 4, 1, 1
7	Long Tag	2, 2, 7, 1, 2	
7	Locate Device	3, 4, 5	
7	Simulate Digital Signal	3, 5	

Appendix D Local Operator Interface

D.1 LOI Menu Tree

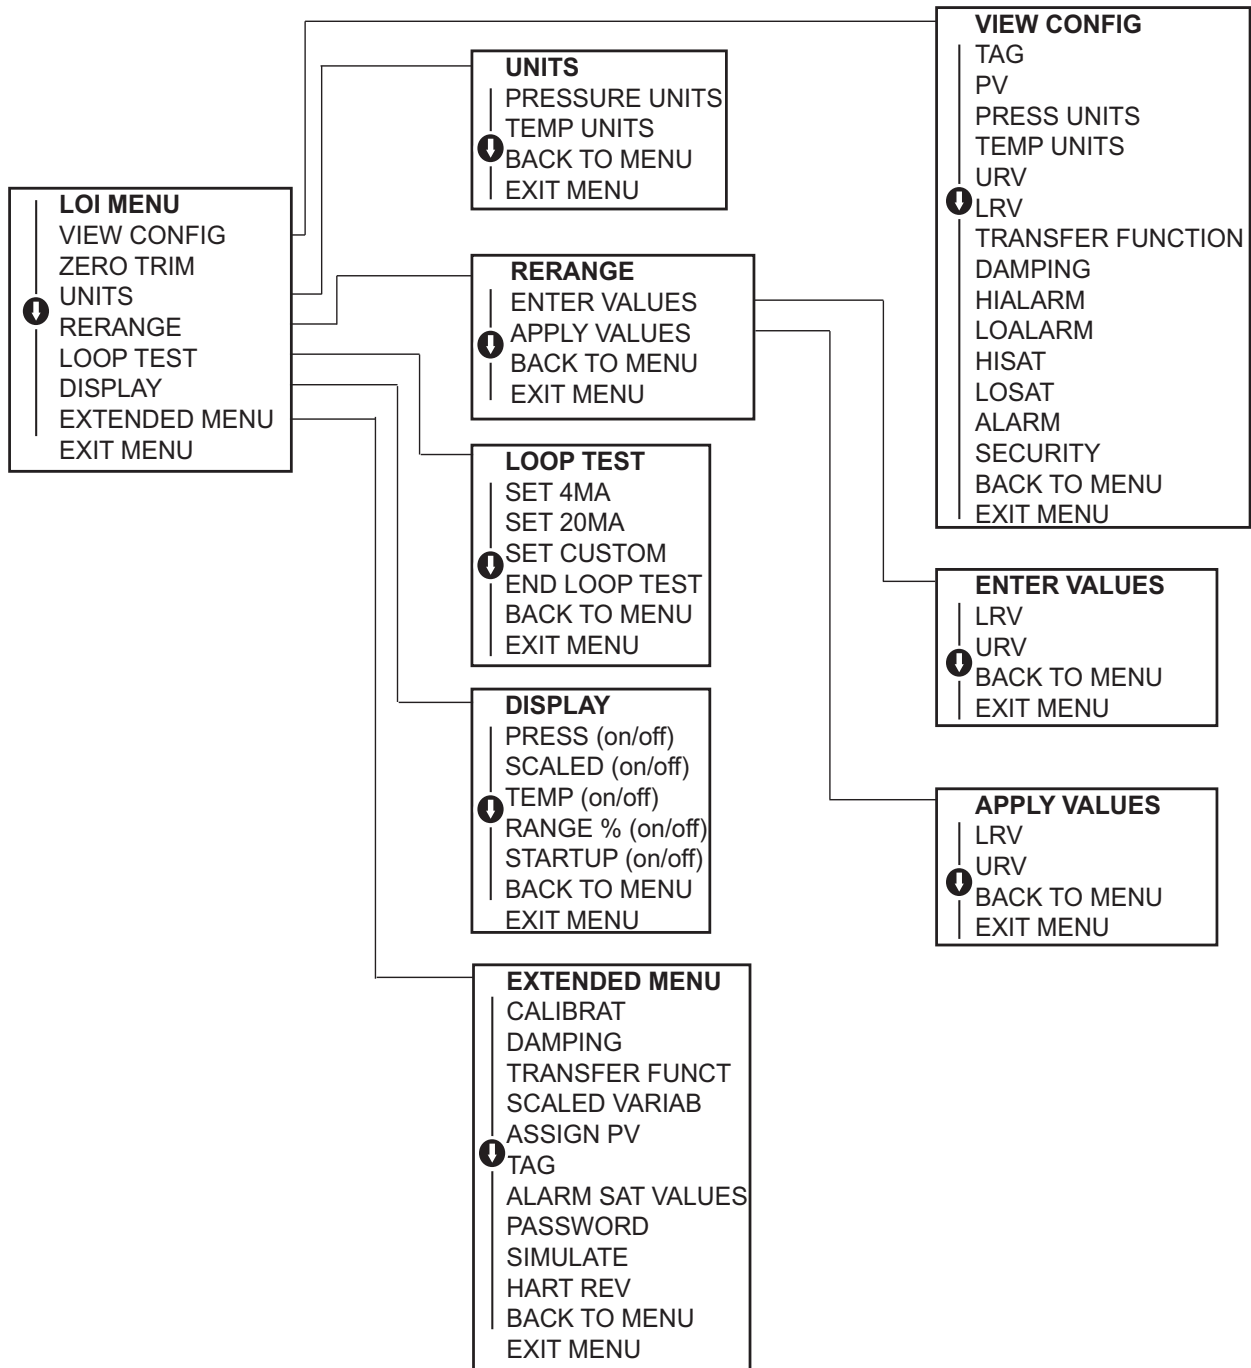

D.2 LOI Menu Tree - Extended Menu

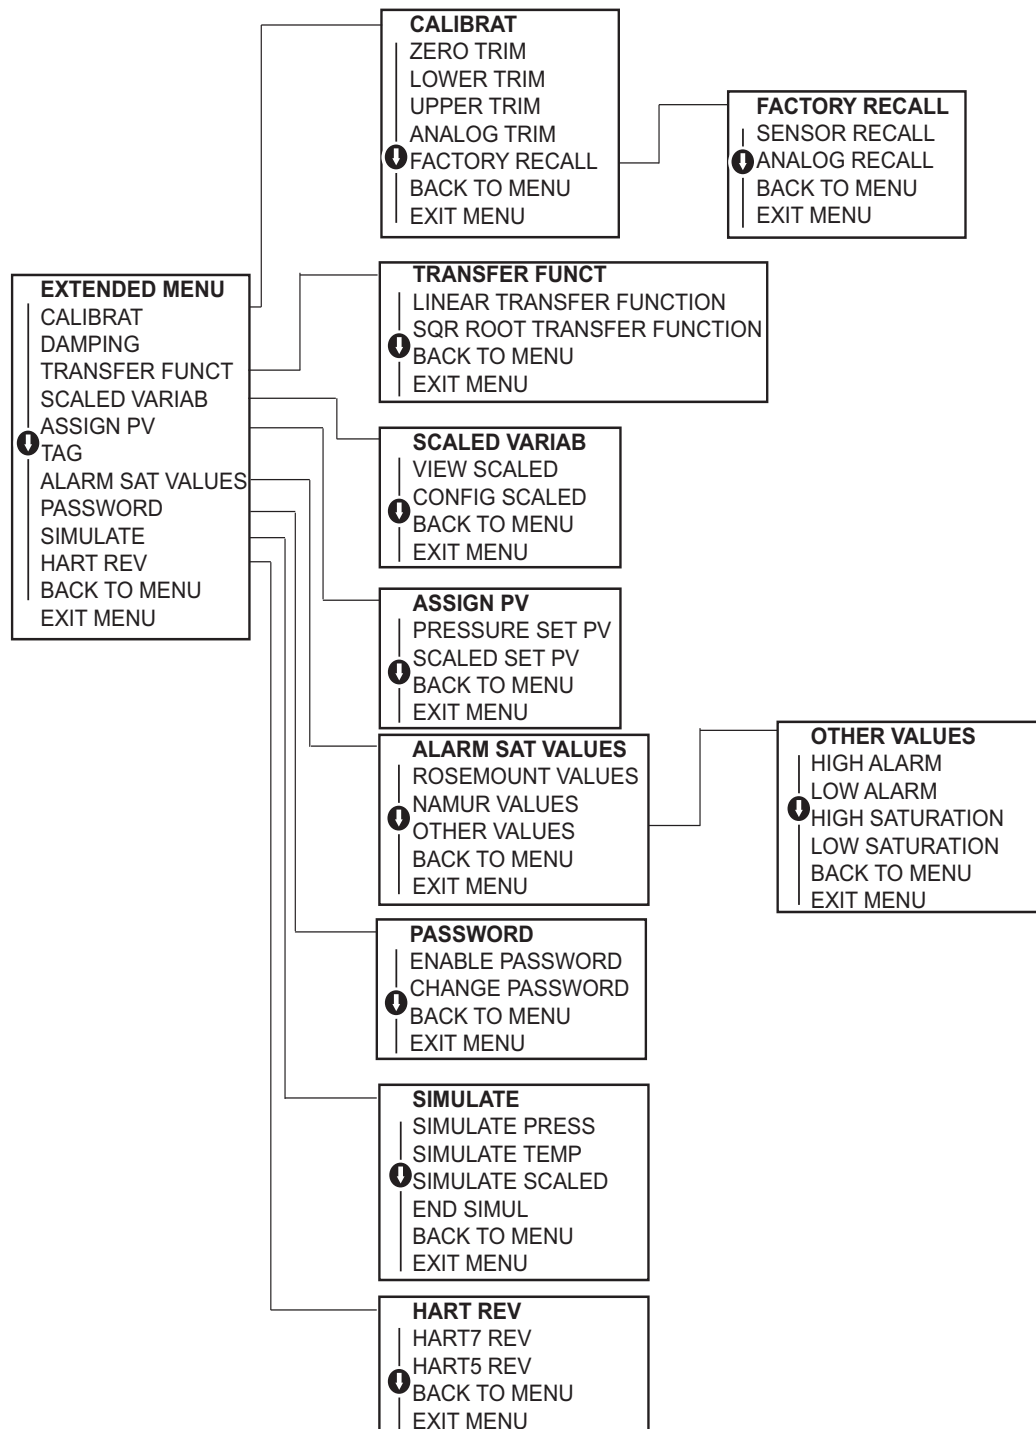

D.3 Number entry

Floating-point numbers can be entered with the LOI. All eight number locations on the top line can be used for number entry. Refer to [Table 2-2 on page 11](#) for LOI button operation. Below is a floating-point number entry example for changing a value of “-0000022” to “000011.2”

Step	Instruction	Current Position (indicated by underline)
1	When the number entry begins, the left most position is the selected position. In this example, the negative symbol, “-“, will be flashing on the screen.	-0000022
2	Press the scroll button until the “0” is blinking on the screen in the selected position.	00000022
3	Press the enter button to select the “0” as an entry. The second digit from the left will be blinking.	00000022
4	Press the enter button to select “0” for second digit. The third digit from the left will be blinking.	00000022
5	Press the enter button to select “0” for the third digit. The fourth digit from the left will now be blinking.	00000022
6	Press the enter button to select “0” for the fourth digit. The fifth digit from the left will now be blinking.	00000022
7	Press scroll to navigate through the numbers until the “1” is on the screen.	00001022
8	Press the enter button to select the “1” for the fifth digit. The sixth digit from the left will now be blinking.	00001022
9	Press scroll to navigate through the numbers until the “1”, is on the screen.	00001122
10	Press the enter button to select the “1” for the sixth digit. The seventh digit from the left will now be blinking.	00001122
11	Press scroll to navigate through the numbers until the decimal, “.”, is on the screen.	000011.2
12	Press the enter button to select the decimal, “.”, for the seventh digit. After pressing enter, all digits to the right of the decimal will now be zero. The eighth digit from the left will now be blinking.	000011.0
13	Press the scroll button to navigate through the numbers until the “2”, is on the screen.	000011.2
14	Press the enter button to select the “2” for the eighth digit. The number entry will be complete and a “SAVE” screen will be shown.	000011.2

Usage notes:

- It is possible to move backwards in the number by scrolling to the left arrow symbol and pressing enter.
- The negative symbol is only allowed in the left most position.
- Numbers can be entered in scientific notation by placing an “E” in the 7th position.

D.4 Text entry

1. Text can be entered with the LOI. Depending on the edited item, up to eight locations on the top line can be used for text entry. Text entry follows the same rules as the number entry rules in [“LOI Menu Tree” on page 223](#), except the following characters are available in all locations: A-Z, 0-9, -, /, space.

Usage note:

- If the current text contains a character the LOI cannot display, it will be shown as an asterisk “*”.

Index

A

Address	
Changing	35
Analog output trim	74
Approval	
Drawings	
Canadian Standards Association	205
Factory Mutual	192
Information	183
Approval drawings	192

B

Block diagram	5
Board, electronics	59
Bolts	
Installation	42, 46
Material	42
Brackets	
Mounting	45

C

Calibration	70
Frequency, determining	72
Full trim	75
Recal factory trim	
Analog output	79
Sensor trim	77
Sensor trim	75
Tasks	70
Zero trim	75
Certifications	183
Considerations	
Compatibility	39
General	38

D

Damping	40
Diagrams	
Multidrop network	34
Typical multidrop network	34
Digital to analog trim	78
Other scale	79
Disassembly	
Before disassembling	89
Remove electronics board	90
Remove from service	89
Sensor module	91
Disassembly procedures	89
Draft Range	39

Draft range	39
Damping	40
Installation	39
Process noise	40
Side filtering	40
Drawings	
Approval	192
Canadian Standards Association	205
Factory Mutual	192

E

Electronics board	59
-------------------	----

F

Features	6
Filtering	
Draft range	40
Foundation fieldbus	2
Full trim	75

H

Hazardous Locations	53
Housing	
Remove	91

I

Impulse piping	46
Installation	41
Bolts	42, 46
Cover	41
Draft range	39
Examples	47
HART flowchart	3
Hazardous Locations	53
Mechanical considerations	39
Model 305 manifold	52
Model 306 manifold	52
Mounting	40
Brackets	45
Process Flange Orientation	40
Introduction	1

L

Loop	
Setting to manual	11

M

Maintenance	69
Manifold installations	52
Manual	
Models covered	4
Use of	1
Mechanical considerations	39
Mounting	
Installation	40
Requirements	46
Multidrop communication	
Communicating	35
Diagram	34

N

Noise	
Draft range	40

O

Operation	69
Block diagram	5
Ordering Information	
Model 3051C	128
Output	
Recal factory trim	79

P

Parts list	171
Piping, impulse	46
Process	
Connections	48
Product certifications	183

R

Reassembly	
Attaching sensor module	91
Installing terminal block	92
Process sensor body	92
Recal factory trim	
Analog output	79
Sensor trim	77
Rerange	
HART Communicator only	16
Pressure input source	
With HART Communicator	16
With local zero and span	17
Returning products and materials	93

S

Sensor	
Module	
Installing	91
Removing	91

Sensor trim	75
Service Support	5
Spare parts list	171
Support	5

T

Terminal block	
Installing	92
Terminal Side	41
Trim	
Analog output	74
Digital to Analog	78
Other scale	79
Full	75
Recal factory	
Analog output	79
Sensor trim	77
Sensor	75
Zero	75
Troubleshooting	
Reference table	85

Z

Zero trim	75
-----------------	----

Standard Terms and Conditions of Sale can be found at www.rosemount.com/terms_of_sale
The Emerson logo is a trademark and service mark of Emerson Electric Co.
Rosemount, the Rosemount logotype, and SMART FAMILY are registered trademarks of Rosemount Inc.
Coplanar is a trademark of Rosemount Inc.
Halocarbon is a trademark of the Halocarbon Products Corporation.
Fluorinert is a registered trademark of Minnesota Mining and Manufacturing Company Corporation
Syltherm 800 and D.C. 200 are registered trademarks of Dow Corning Corporation.
Neobee M-20 is a registered trademark of PVO International, Inc.
HART is a registered trademark of the HART Communication Foundation.
Foundation fieldbus is a registered trademark of the Fieldbus Foundation.
All other marks are the property of their respective owners.

© September 2013 Rosemount, Inc. All rights reserved.

**Emerson Process Management
Rosemount Measurement**
8200 Market Boulevard
Chanhassen MN 55317 USA
Tel (USA) 1 800 999 9307
Tel (International) +1 952 906 8888
Fax +1 952 906 8889

**Emerson Process Management
GmbH & Co.**
Argelsrieder Feld 3
82234 Wessling
Germany
Tel 49 (8153) 9390
Fax 49 (8153) 939172

**Emerson Process Management Asia
Pacific Private Limited**
1 Pandan Crescent
Singapore 128461
T (65) 6777 8211
F (65) 6777 0947
Enquiries@AP.EmersonProcess.com

**Beijing Rosemount Far East
Instrument Co., Limited**
No. 6 North Street,
Hepingli, Dong Cheng District
Beijing 100013, China
T (86) (10) 6428 2233
F (86) (10) 6422 8586

ROSEMOUNT

